

# CROQUADE

CROQUADE® Belgian Waffle Maker – MULTEX II WA 102US

## INSTRUCTIONS MULTEX



©2013 Dalcq USA, Inc.

## IMPORTANT SAFEGUARDS

To protect against fire, electrical shock, and injury to persons when using an electrical appliance, important safety precautions must always be followed including the following:

1. **Read all instructions before using the waffle maker.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electrical shock, and injury to persons, **DO NOT IMMERSE CORD, PLUG, OR UNIT** in water or other liquids.
4. Close supervision is necessary when any appliance is used by or near children.
5. **Unplug** from outlet when not in use and before cleaning. Allow to completely cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Please contact our customer service center using the information on page 5, so that you can return the appliance for examination, repair or adjustment.
7. The use of accessory attachments not recommended by DALCQ USA, Inc. may result in fire, electrical shock, or injury to persons.
8. Do not use outdoors, or use for other than intended use.
9. Do not let power cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. **Unplug** the unit when finished baking waffles.
12. It is recommended that this appliance not be moved when it contains hot oil or other liquid.
13. Do not use appliance for other than intended use.
14. Always begin by plugging appliance into wall outlet. To turn off, remove the plug from the wall outlet and allow to completely cool before touching.
15. The device is only intended for domestic use
16. **WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, REPAIR SHOULD BE DONE ONLY BY AUTHORIZED PERSONNEL. NO USER SERVICEABLE PARTS ARE INSIDE.

## IMPORTANT CORD INSTRUCTIONS

This product has a polarized plug (i.e., one blade is wider than the other). To protect against fire, electrical shock, and injury to persons, the plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

A short-power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is properly exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.


Connect the power supply cord to a 120VAC outlet only.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY

MULTEX

## DESCRIPTION/PARTS (ADJUSTABLE THERMOSTAT)

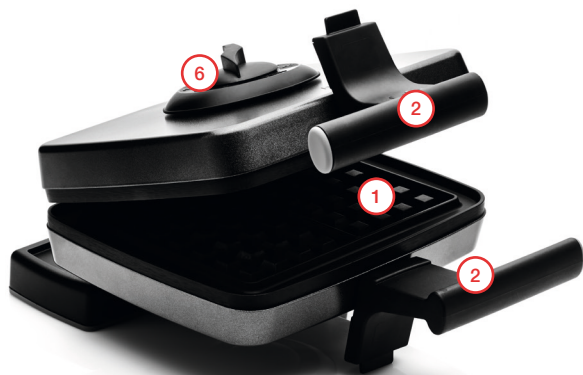

1. Interchangeable irons
2. Handles
3. Sliding channel
4. Screws for securing irons
5. Base
6. Knob for adjusting thermostat
7. Signal light

## BEFORE THE FIRST USE

Remove all packaging from your CROQUADE waffle maker. Remove the irons and wash carefully in hot water with a minimal amount of liquid or dish soap, and follow the instructions in CHANGING THE IRONS, below. Return the irons to the waffle maker. Oil the irons using a cooking brush or a cloth. This operation can be repeated each time that the irons have been washed with soap.

## OPERATING INSTRUCTIONS

1. Place the CROQUADE waffle maker in the closed position on a hard, flat surface and plug into a 120VAC outlet. Never place the waffle maker on a plastic table cloth or any other material that is not heat resistant.
2. This CROQUADE waffle maker is equipped with a thermostat by which the temperature can be varied and maintained at different cooking temperatures. The knob to adjust the temperature is part #6 on the DESCRIPTION/PARTS above. The knob has 8 possible positions, with position #1 for the softest/lightest waffles and position #8 for the crunchiest/darkest waffles. Turn the knob clockwise to the desired setting.
3. While the waffle maker is preheating, prepare waffle dough or batter.
4. When the light goes out, the waffle maker is preheated and ready for use.
5. Lift the lid of the waffle maker by grasping the upper handle and pushing back and up in one motion.
6. Before the first use after the unit has preheated, carefully use a brush or paper towel and apply a light coating of cooking oil to the irons. Avoid using anything made of nylon or synthetic fibers that would melt when heated. Use less oil during your second use. No oil should be necessary for subsequent uses. However, if you find it difficult to remove a waffle, be sure to apply a light coating of cooking oil during the following uses.
7. Using dough: Place a ball of dough (approx. 5cm\_ to 8cm\_ in size) in the center of each of the two imprints of the lower iron. Close the CROQUADE waffle maker and, if necessary, press the two handles together so that the irons are touching. The cover may lift slightly due to steam pressure in the dough. This is normal.
8. Using batter: Use a ladle to pour a sufficient amount of waffle batter to cover the entire baking surface of the lower iron. Close the CROQUADE waffle maker and turn it over by pivoting it on its base. The batter will flow to the other iron/plate.
9. When finished, the color of the waffle should be brown. Light brown will make the waffles chewy and dark brown will make it crusty.
10. To remove the waffles after baking, insert a two-pronged fork (or, if unavailable, a regular fork) horizontally into the waffle. Remove the waffle from the waffle maker and place onto a plate.
11. Unplug the waffle maker when baking is complete and allow it to cool completely in the open position before cleaning or putting it away.

## MULTEX

**Note:** When using the CROQUADE waffle maker for the first time, a slight odor or smoking may occur. This is normal, and common to appliances with a nonstick surface.

## CHANGING THE IRONS

1. There are a variety of irons available for the waffle maker. A listing of some of the available irons is below (AVAILABLE IRONS).
2. To change to a different iron, first make sure the waffle maker is unplugged and the irons are completely cool.
3. Slide the two interchangeable irons (part #1) towards the center to release the irons from the base (part #5).
4. Unscrew the screws (part #4) securing the irons to the case and open the waffle maker. The irons will detach from the case.
5. Choose a different set of irons. On the back of each iron is a bump/indentation with a hole. Slide the lug located under the handle (part #2) into the hole. Close the waffle maker and secure each of the irons with the screws removed in step 4.
6. Open and close the waffle maker several times to confirm everything is secure and in place.

## AVAILABLE IRONS

<p>Brussels waffles</p> <p>4x6 M001</p> 	<p>Home-made waffles</p> <p>4x7 M002</p> 	<p>Home-made waffles</p> <p>6x10 M003</p> 	<p>Thin Galettes</p> <p>16x28 M004</p> 
<p>Toasted sandwich</p> <p>Croque M005</p> 	<p>Heart</p>  <p>M006</p> 	<p>Ice cream Cones</p> <p>Cone  M007</p> 	<p>Stuffed waffles</p> <p>Fruits M008</p> 

MULTEX

## CLEANING AND CARE

Unplug the waffle maker and allow to completely cool before cleaning.

**WARNING: DO NOT IMMERSE THE BASE OF THE WAFFLE MAKER INTO WATER OR ANY OTHER LIQUID.**

Wipe the outside of the waffle maker with a damp cloth. Do not use steel wool, scouring pads or abrasive kitchen cleaners on the unit.

To wash the irons, first remove the irons from the waffle maker by following the steps in CHANGING THE IRONS, above. Wash the irons in hot water with a small amount of household cleaner. Certain dishwasher soaps are too strong and may result in damage to the anti-stick coating. If necessary, soak the irons for 30 minutes before wiping them with a sponge. After the irons have been dried, return the irons to the waffle maker by following the steps in CHANGING THE IRONS, above.

If the cord has been damaged, please contact DALCQ USA, Inc. to have it repaired or replaced.

## HELPFUL HINTS

- We recommend positions #6 to #8 on the thermostat for ideal waffles.
- If making waffle dough, mix and handle the ingredients at room temperature. Baker's yeast will result in a dough which doubles or triples in volume, so use a bowl that is sufficiently large.
- Opening the waffle maker too soon while baking can result in difficulty in removing the waffle from the waffle maker.
- Use a wooden spatula instead of metallic utensils. Use of metallic utensils may result in scratching or damage to the irons.

## CONSUMER SERVICE INFORMATION

If you should have any questions regarding the operation of this product or need parts, contact us by any of the following methods:

- [info@croquade.com](mailto:info@croquade.com)
- **Mail at DALCQ USA Inc.**  
Canal Landing Court 32  
Rehoboth  
DE 19971  
USA

When contacting us, please have available the model number and the series code for the product. These numbers can be found under the foot of the waffle maker.

Please maintain this information:

Model Number:

Serial Code:

Date Purchased:

## LIMITED 2 YEAR WARRANTY

This warranty is only available to you, the individual consumer of the MULTEX II – CROQUADE (the “Waffle Maker”) which was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

Dalcq USA, Inc. warrants that your Waffle Maker will be free from defects in materials and workmanship under normal home use for 2 years from the date of original purchase. If your Waffle Maker should prove to be defective within the warranty period, DALCQ USA, Inc. will repair or replace it at its sole option. To obtain warranty service, please contact us at [info@croquade.com](mailto:info@croquade.com). You will then be instructed where to send your Waffle Maker. Please be sure to include your return address, a description of the problem, and indicate the date the Waffle Maker was purchased.

This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.



#### CONTACT AND INFORMATIONS

DALCQ USA Inc.  
Canal Landing Court 32  
Rehoboth  
DE 19971  
USA

[info@croquade.com](mailto:info@croquade.com)