



INSTRUCTION BOOKLET



The Bakery™ Artisan Bread Toaster

CPT-2400

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
3. Do not touch hot surfaces. Use handles or lever.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to the store or retailer where purchased for examination or repair.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than its intended use.
12. Oversized foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation.
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the Cancel button, then remove plug from wall.

17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

TABLE OF CONTENTS:

Important Safeguards	2
Features and Benefits	3
Use and Care	4
Cleaning and Maintenance	5
Warranty.....	6

INTRODUCTION

Introducing a toaster built for all of your favorite artisan, homemade and bakery breads. Longer slots are wider too, to accommodate different shapes, thicker slices, and bigger bagels. Love thin-sliced breads? Self-adjusting toasting grids promise to perfectly toast every piece.

FEATURES AND BENEFITS

1. Dual Toasting Slots

Dual 1.5" by 10" slots for a wide variety of breads.

2. Cancel Button

Interrupts toasting process.

3. Extra-Lift Carriage Control Lever

Brings the toast close to the top of the toaster, making it easy to remove the smallest items.

4. Bagel

Adds extra time to toasting cycle.
LED lights when selected.

5. Reheat Button

Reheats without browning or toasting.
LED lights when selected.

6. Defrost Button

Defrosts and toasts frozen bread.
LED lights when selected.

7. Browning Control

Slide lever sets selected shade. 7 browning levels toast from light to dark.

8. Slide-out Crumb Tray (not shown)

Pulls out to clean crumbs that collect in bottom of toaster.

9. Cord Storage (not shown)

Takes up excess cord and keeps countertop neat.



USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

1. Insert Slice(s) of Bread

Be sure that the carriage is in the up position.

2. Set the Browning Control

Slide lever to the desired position:

Lever Setting	Color
1-2	light
3-5	medium
6-7	dark

3. To Begin Toasting

Press the carriage control lever until it locks into the down position.

NOTE: The Cancel button will illuminate with a red light when the toaster is in operation.

To Stop Cycle

When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button. After use, unplug the toaster from the electrical outlet.

Some Notes on Browning:

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc., from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slot.

- Before toasting bagels, slice each bagel into two equal halves.

• Frozen Waffles, Pancakes, French Toast and Frozen Bagels:

These items should be warmed before toasting, using the Defrost function. Select your preferred browning shade. Press carriage lever and then select Defrost. For example, when toasting a frozen bagel, select the browning level, press carriage lever, then Bagel button and Defrost. Blue Bagel and Defrost lights indicate these features are active.

- **Toaster Pastries:** Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

Tips:

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

Bagel Button

The bagel feature adds extra time to the toasting cycle to allow for thicker breads.

1. Insert slice(s) of bread or halved bagels.

Be sure that carriage lever is in the up position.

2. Set the Browning control.

3. Press the carriage control lever until it locks into position.

4. Press the Bagel button. Blue LED indicates feature is activated.

To Stop Cycle:

When the bagel cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug your toaster from the electrical outlet.

Defrost Button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

1. Insert slice(s) of bread.

Be sure that the carriage lever is in the up position.

2. Set the Browning control.

3. Press the carriage control lever until it locks into position.

4. Press the Defrost button. Blue LED indicates feature is activated.

To Stop Cycle: When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

Reheat Button

The reheat feature allows you to reheat bread without browning or toasting.

1. Insert slice(s) of bread.

Be sure that the carriage lever is in the up position.

2. Press the carriage control lever until it locks into position.

3. Press the Reheat button. Blue LED indicates feature is activated.

To Stop Cycle:

When the defrost cycle is complete, the toaster will raise the bread.

If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt. After use, unplug the toaster from the electrical outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean, damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.



4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

LIMITED 3 YEAR WARRANTY (U.S. and CANADA only)

This limited warranty is available to consumers only. You are a consumer if you own a Cuisinart® The Bakery™ Artisan Bread Toaster which was purchased at retail for personal, family or household use. Except as otherwise required under applicable state law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® The Bakery™ Artisan Bread Toaster will be free of defects in materials and workmanship under normal home use for three years from the original date of purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture. If your toaster should prove to be defective within the warranty period, we will repair or replace it at our option, without charge to you. To obtain warranty service, simply send the defective product to:

Cuisinart, 7475 North Glen Harbor Blvd.
Glendale, AZ 85307, or call our Consumer Service Center
toll-free at 1-800-726-0190.

To facilitate the speed and accuracy of your return, please also enclose \$10.00 for shipping and handling of the product. **CA residents need only provide proof of purchase and should call 1-800-726-0190 for shipping instructions.** Please be sure to include a return address, description of the product defect, product serial number and any other information pertinent to the product's return. Please pay by check or money order made payable to Cuisinart.

BEFORE RETURNING YOUR CUISINART PRODUCT

If you are experiencing problems with your Cuisinart product, we suggest that you call our Consumer Service Center at 1-800-726-0190 before returning the product for servicing. Often, our Consumer Service Representatives can help solve the problem without having the product serviced. If servicing is needed, a representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® The Bakery™ Artisan Bread Toaster has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets

and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

***Important:** If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the Servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail store which sells Cuisinart products of the same type. The retail store shall then decide to either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If either of the above two options does not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair or, if necessary, replacement, by calling our Consumer Service Center toll-free at 800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling of such nonconforming products under Warranty.

NOTES:

© 2016 Cuisinart
150 Milford Road
East Windsor, NJ 08520

Printed in China

16CE020725

N IB-14327-ESP

Trademarks or service marks of third parties used herein are
the trademarks or service marks of their respective owners.

16CE020725

Impreso en China

East Windsor, NJ 08520

150 Millford Road

© 2016 Cuisinart

NOTAS:

RESIDENTES DE CALIFORNIA

clubre de uso institucional o comercial del producto, y no es válida en caso de daños causados por mal uso, negligencia o accidente. Esta garantía excluye la reparación de los daños incidentales o consecuentes. Algunos Estados no permiten la exclusión de los daños incidentales o consecuentes. Consulte con su proveedor local para obtener más información.

Ley del estable de California ofrece dos opciones bajo el periodo de garantía. Una opción es la compra directa de los productos defectuosos durante el periodo de garantía. La otra opción es la devolución del producto a la tienda donde se compró el producto, y recibir un reembolso o intercambio por el mismo valor. Los residentes del estable de California tienen la opción de devolver el producto a la tienda que lo compró originalmente, siempre que el producto no esté dañado. Si el producto es devuelto a la tienda que lo compró originalmente, el comprador debe presentar su recibo de compra y explicar el problema al personal de la tienda. El personal de la tienda debe inspeccionar el producto y determinar si es defectuoso. Si el producto es defectuoso, la tienda debe ofrecer una reparación gratuita o un reembolso completo. Si el producto no es defectuoso, la tienda debe devolver el dinero pagado por el producto al comprador.

Este apartado establece las más altas exigencias de fabricación y ha sido diseñado para uso sobre corriente de 120 V, usando receptos y plazas de respuesta autorizadas solamente. Esta garantía excluye expresamente los daños causados por errores de preparación no autorizadas por el fabricante, así como los daños causados por el uso de un convertidor de voltaje. Esta garantía no cubre los gastos de envío ni la mano de obra para la reparación.

Posverna al 1-800-726-0190 antes de regresar el aparato a Cuisinart. Muy a menudo, nuestros servicios de atención al cliente podrán ayudarte a resolver el problema sin tener que regresar el producto. La reparación es lo más común en los productos que garantiza la dirección del centro de servicio más

ANTES DE HACER REPARAR SU APARATO

Leaconsfamous que la verificacion de la fecha de compra original. Sin embargo, com a fin de facilitar la verificacion de la fecha de compra original. Si se registra en www.cuisinart.com se accede a la sección de formulario de registro disponible en la linea de teléfono 1-800-726-0190. Para obtener servicio técnico para algún modelo de la gama de electrodomésticos Cuisinart, se debe llamar al número 1-800-726-0190 para recibir instrucciones de envío. Recuerde incluir su número de teléfono, la descripción del problema, así como cualquier información pertinente. Por favor incluya un cheque o giro postal a nombre de Cuisinart.

Esta garantía limitada es para los consumidores domésticos. Usada es una condición de la compra de Clisinar® en una tienda, para uso personal o casero. A excepción de los estados donde se le permite, esta garantía no es para los efectos comerciales.

GARANTÍA LIMITADA DE 3 AÑOS (valida en los EE.UU. y en Canadá)



Para descongelar deseña usar un limpiador, aplicar sobre el pan; no sopre la tostadora.

Para eliminar las migajas, deselee la bandeja recogemigajas hacia fuera. Limpie la bandeja y regresela en su puesto. Nunca utilice el aparato sin la bandeja recogemigajas.

3. Para desalijar pedazos de pan atascados en las ranuras, desconecte el aparato, volteelo y sacudalo suavemente. Nunca introduzca ningun utensilio duro o afilado en las ranuras; esto puede dañar el aparato y causionar riesgos para el usuario.
4. Para desalijar pedazos de pan atascados en las ranuras, desconecte el cable alrededor del aparato. más bien, enrollelo debajo del mismo.
5. Nunca enrolle el cable alrededor del aparato. más bien, enrollelo debajo del mismo.
6. Cuadique otro servicio debe ser realizado por un técnico autorizado.

1. Desconecte el cable de la corriente.
2. No utilice limpiadores abrasivos. Simplemente limpie el cuerpo del aparato con un paño ligeramente humedecido y seque bien. Si

3. Oprima el botón REHEAT. El indicador luminoso azul se encenderá.
2. Baje la palanca elevarora hasta que se bloquee.

- Para recalentar** la función REHEAT permite recalentar el pan sin dorarlo/tostarlo.
1. Introduzca la(s) rebanada(s) en la(s) ranura(s).
 2. Asegúrese de que la palanca elevarora esté en la posición alta.

- Para interrumpir el ciclo de tostaro**: El pan subirá automáticamente al final del ciclo. Si desea interrumpir el ciclo antes del final, oprima el botón CANCEL. Desconecte el aparato despues de cada uso.

4. Oprima el botón DEFROST. El indicador luminoso azul se encenderá.
3. Baje la palanca elevarora hasta que se bloquee.
2. Elija el grado de tostaro.

- 1. Introduzca la(s) rebanada(s) en la(s) ranura(s).** Asegúrese de que la palanca elevarora esté en la posición alta.

- 2. Función DEFROST** permite descongelar el pan antes de tostarlo.
3. Oprima el botón REHEAT. El indicador luminoso azul se encenderá.

LIMPIEZA Y MANTENIMIENTO

- Permita que el aparato se enfríe completamente antes de limpiarlo.

1. Para interrumpir el ciclo de tostaro:
2. El pan subirá automáticamente al final del ciclo.
3. Si desea interrumpir el ciclo antes del final, oprima el botón CANCEL.

- Desconecte el aparato despues de cada uso.**

INSTRUCCIONES DE USO



- 6. DEFROST (descongelar)** Permite descongelar, y luego tostar los artículos congelados. El indicador luminoso se enciende al seleccionar esta opción.
- 7. Selector del grado de tostado** Simplemente deslice la palanca para elegir el grado de tostado entre 7 niveles, desde ligeramente tostado hasta muy tostado.
- 8. Bandeja recoogemigas (no ilustrada)** Se desliza hacia fuera para sacar las migas.
- 9. Espacio para guardar el cable (no ilustrado)** Mantiene la encimera ordenada.

Su nueva tostadora ha sido especialmente diseñada para tostar todos sus artículos preferidos con resultados que sea el artículo que esté tostando! ¿Le gustan las rebanadas gruesas y panecillos ("bagels") más grandes? ¿Le gustan las rebanadas más delgadas? No es un problema... ¡Rebillas autoconcentrantes garantizan resultados perfectos cada vez que seleccione esta opción!

- 1. Dos ranuras** Ranuras de 1.5 x 10 pulgadas (3.5 cm x 25 cm), para tostar una gran variedad de panes.
- 2. CANCEL (cancelar)** Interrumpe el ciclo de tostado.
- 3. Palanca elevadora alta** Permite alzar las tostadas hasta arriba para retirarlas fácilmente.
- 4. BAGEL (panecillos)** Tuesta solamente un lado del pan e incrementa la duración del ciclo de tostado. El indicador luminoso se enciende al seleccionar esta opción.
- 5. REHEAT (recalentar)** Recalienta el pan sin dorado/tostado.

PIEZAS Y CARACTERÍSTICAS

Medidas de seguridad importantes.....	2
Piezas Y características.....	3
Limpieza y mantenimiento	4
Garnitura.....	5
Limpieza y mantenimiento	6

INTRODUCCIÓN

ÍNDICE

GUARDE ESTAS INSTRUCCIONES

- o parades. No guarda ningun articulo sobre el aparato mientras esta encendido o calliente.
- 14. No intente descolgar alimento satscados mientras el aparato esta conectado.
- 15. Para evitar los riesgos de incendio, no descuide/dese el aparato viillanici mientras esta funcionando.
- 16. Siempre presione el boton CANCEL antes de desconectar el aparato.
- 17. No haga funcionar el aparato debajo o dentro de un armario/gabinete. Siempre desconecte el aparato cuando sea necesario.
- gabinete. Dejar el aparato conectado presenta un riesgo de incendio.
- especialmente si este toca las paredes o la puerta del armario.
- gabinete cuando cierre.

USO DE EXTENSIOS

SOLAMENTE PARA USO DOMÉSTICO

1. Lea todas las instrucciones.

2. Siempre desconecte el aparato cuando no esté en uso y antes de limpiarlo.

3. No toque las superficies calientes; utilice los mangos/asas y los botones/palillas/palanca.

4. Para reducir el riesgo de electrocución, no sumerja el cable, la clavija ni el cuerpo del aparato en agua ni en ningún otro líquido. Véase las instrucciones de limpieza.

5. Este aparato no debe ser usado por o cerca de niños o personas con ciertas discapacidades.

6. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado; regreselo a un centro de servicio autorizado para su revisión y reparación.

7. El uso de accesorios/aditamentos no recomendados por Cuisinart puede provocar heridas.

8. No lo utilice en exteriores.

9. No permita que haga contacto con superficies calientes.

10. No coloque el aparato sobre o cerca de un quemador a gas o de una hornilla eléctrica caliente, ni en un horno caliente.

11. No utilice el aparato para ningún otro fin que no sea el indicado.

12. No introduzca artículos muy grandes, papel de aluminio o utensilios de metal en el aparato; esto puede crear un resago de incendio o de descarga eléctrica.

13. Podría ocurrir un incendio si el aparato estuviese cubierto, tocase, o se encienda cerca de materiales inflamables, como cortinas, colgaduras o sábanas.

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

CPT-2400

Tostadora de pan artesanal The Bakery™



Cuisinart®
MANUAL DE
INSTRUCCIONES

Version no: N CPT2400 IB-14327-ESP

SIZE: 210 MM (W) x 148 MM (H)

Pages: 16pp

Paper:105gsm gloss artpaper for whole book

Color: Cover:4c+1c(Black)
Inside:1c+1c(Black)

Coating: Gloss varnishing in cover

Conair: Conair By Astor You

Date: 09/09/2016

SUN HING PRINTING CO., LTD.