



**4-SLICE
COUNTERTOP OVEN
FOUR GRILLE-PAIN
À 4-TRANCHES**

**GATHER. COOK. EAT. REPEAT.
RASSEMBLER. CUISINER. MANGER. RECOMMENCER.**

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- **READ ALL INSTRUCTIONS.**
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Bring it to a qualified technician for examination, repair or electrical or mechanical adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other liquids.
- Use extreme caution when removing the crumb tray or disposing of hot grease.
- To disconnect, turn the timer dial and the temperature dial to OFF; then remove the plug from the wall outlet.
- Do not use appliance for other than intended use.
- Oversized foods or metal utensils must not be inserted in a Countertop Oven as they may create a fire or an electric shock.
- A fire may occur if the Countertop Oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electrical shock.
- Extreme caution should be exercised when using containers constructed of other than metal or glass.
- Do not store any item on top of the oven when in operation.
- Do not store any materials, other than manufacturer's recommended accessories, when not in use.
- Do not place any of the following materials in oven: paper, cardboard, plastic.
- Do not cover crumb tray or any part of the oven with metal foil with metal foil. This will cause overheating.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Place the Countertop Oven at least 2 to 4-inches away from the wall to allow heat flow without causing damage to cabinets and walls.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

CAUTION HOT SURFACES: This appliance generates heat and escaping steam during use. Proper precautions must be taken to prevent the risk of burns, fires, or other injury to persons or damage to property.

- A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this owner's manual before operating or cleaning this appliance.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately.
- When using this appliance, provide adequate air space above and on all sides for air circulation. Do not operate this appliance while it is touching or near curtains, wall coverings, clothing, dishtowels or other flammable materials.
- To reduce the risk of fire, do not leave this appliance unattended during use.
- If this appliance begins to malfunction during use, immediately turn the timer dial and the temperature dial to OFF; then remove the plug from the wall outlet.
- Do not use or attempt to repair a malfunctioning appliance!
- The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
- Do not use this appliance in an unstable position.

NOTES ON THE CORD

The provided short power-supply cord (or detachable power-supply cord) should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product.

NOTES ON THE PLUG

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way..

PLASTICIZER WARNING


CAUTION: To prevent Plasticizers from migrating to the finish of the counter top or table top or other furniture, place NON-PLASTIC coasters or place mats between the appliance and the finish of the counter top or table top. Failure to do so may cause the finish to darken; permanent blemishes may occur or stains can appear.

ELECTRIC POWER

If the electrical circuit is overloaded with other appliances, your appliance may not operate properly. It should be operated on a separate electrical circuit from other appliances.

GETTING TO KNOW YOUR 4-SLICE COUNTERTOP OVEN

Product may vary slightly from illustration

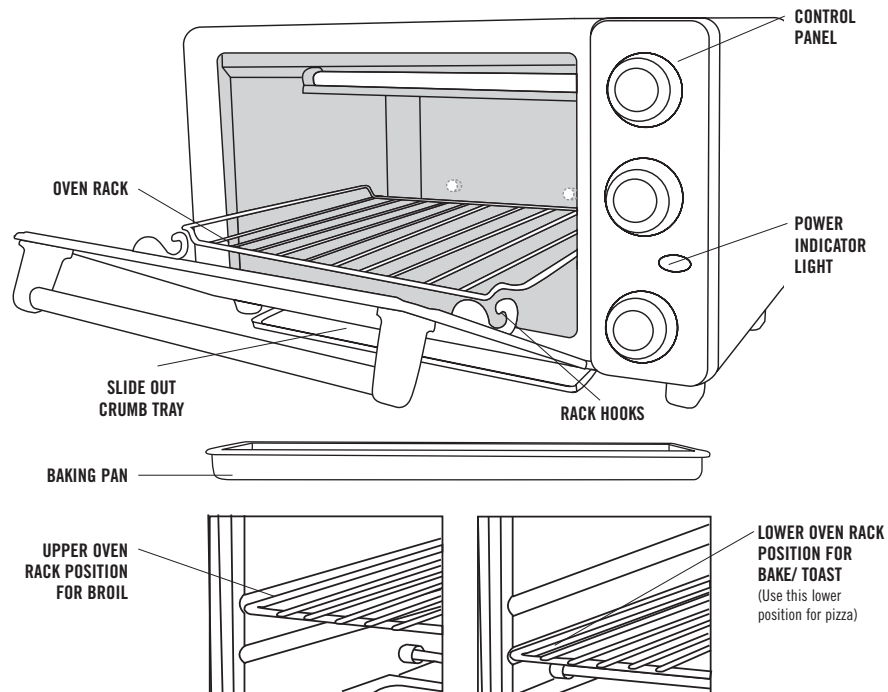

BEFORE USING FOR THE FIRST TIME

- Remove all protective film, accessories and shipping materials packed inside the Countertop Oven; peel off clear protective film from control panel.
- Wash all removable parts in warm soapy water. Wipe the inside with a damp cloth or sponge. Blot dry with paper towels to be sure the unit is dry before using.
- Place Countertop Oven on a flat counter or other stable surface. Place the Countertop Oven at least 2 to 4-inches away from the wall to allow heat flow without causing damage to cabinets and walls. **DO NOT OPERATE ON THE SAME CIRCUIT WITH ANOTHER APPLIANCE.**
- Make sure the crumb tray is in place below the lower heating elements before using.

- Insert reversible rack halfway into lower rack slot position.
- Lift door to bring up the rack hooks, then slide rack along the slots until it engages with the hooks.

IMPORTANT: The rack will not slide forward when door is open unless it is inside the hooks on the door (Figure 2).

NOTE: The hooks only function when rack is in the lower slots.

- Close door, noting that rack slides completely into Countertop Oven.
- Select a location where this unit is to be used allowing enough space between the back of the unit and the wall to allow heat flow without damage to cabinets and walls.
- Plug unit into a 120V AC electrical outlet.

NOTE: During first few minutes of use you may notice smoke and slight odor.


This is normal and should cause no concern.

- Before using for the first time, turn the temperature dial to 350°F, turn the function dial to BAKE, turn the timer dial to 15 minutes. Allow the oven to operate empty to burn off any oils remained from manufacturing.

WARNING: The Countertop Oven will continue to cook until the timer dial is turned to OFF.

Wash the oven rack and baking pan in mild, soapy water.

IMPORTANT: The Countertop Oven gets hot when in use. Always use mitts or pot holders when touching the outer or inner surface of the oven.

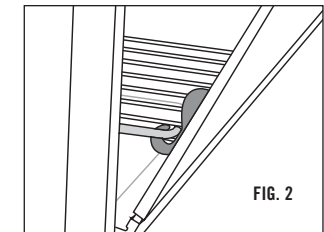

HOW TO USE COUNTERTOP OVEN

IMPORTANT: The Countertop Oven gets hot when in use. Always use mitts or pot holders when touching the outer or inner surface of the oven.

- Place the rack in position that will accommodate the height of the food to be cooked. Be sure that the food is at least 1½ inches away from the upper or lower heating elements.
- Set the food on the rack. Make sure that you always use oven safe containers, never use plastic or cardboard containers in the Countertop Oven. Do not put any containers directly onto the lower heating elements.
- Never use glass, ceramic pans or containers with lids.
- Do not let juices run to the bottom of the oven. Use the baking pan and crumb tray when cooking.
- Turn the temperature dial to the desired cooking temperature.
- Securely shut the door and set the cooking time to begin operating.

CONTROL PANEL

IMPORTANT: When using the timer for less than 10 minutes, turn the dial past the 10 minute mark and then turn back to appropriate time/ toast browning setting.

TEMPERATURE DIAL

Turn temperature dial clockwise to the desired setting. The temperature can be set from 150°F (65° C) to 450°F (230° C). To keep food warm after it has been cooked, set the function dial to WARM and set temperature between 150°F (65° C) to 450°F (230° C).


FUNCTION DIAL

This Countertop Oven offers different functions for versatile cooking in one appliance.

- **BAKE:** Both the upper and lower heating elements are operational in this setting.
- **BROIL:** Only the upper heating elements are operational in this setting for optimal performance.
- **TOAST:** The upper and lower heating elements are operational.
- **BAGEL:** Only the upper heating elements are operational.
- **WARM:** The lower heating elements are operational.

POWER INDICATOR LIGHT

The power indicator light will illuminate when unit is plugged in and time has been set, or STAY ON has been selected. When the time set has expired, or timer dial has been turned to the OFF position, the power indicator light will turn OFF.

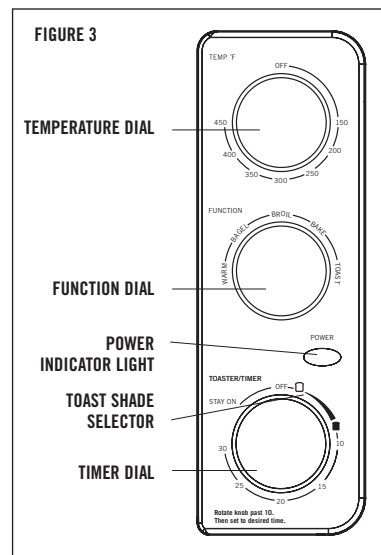

TIMER/TOAST DIAL

- **OFF:** Turn timer dial to the OFF position when cooking is complete. The power indicator light will turn OFF.
- **STAY ON:** When cooking for more than 30 minutes, or to cook manually for an unlimited amount of time, turn the timer dial to STAY ON to turn ON. The power indicator light will illuminate.
NOTE: Bread may catch fire if the toasting time is setting too long. Close supervision is necessary during toasting.
- **Toast Shade Selector:**
 - Light
 - Dark
- **0-30 MINUTES:** To begin operation, set time by turning the timer clockwise to STAY ON or to the desired cooking time. Cook time may be adjusted during any cooking cycle. Turn the timer dial to the desired time and continue cooking. When the time set has expired, the timer dial will move to the OFF position, a signal will sound and the oven will automatically turn OFF. When the timer dial is in the OFF position, the Countertop Oven will not operate.
NOTE: To set timer dial for less than 10 minutes, always turn the timer dial to 10 minutes and then rotate back to your chosen time. This will ensure an accurate cooking time.

COOKING INSTRUCTIONS

BAKE

- Insert sliding Countertop Oven rack into lower rack position, engaging rack hooks as directed in BEFORE USING FOR THE FIRST TIME.
- Turn temperature dial to desired bake temperature.
- Turn function dial to BAKE.
- Set timer dial to desired bake time, including the preheat time. The power indicator light will illuminate.
NOTE: For best results, preheat the Countertop Oven before baking.
NOTE: To set the timer for less than 10 minutes, always turn timer dial to 10 minutes and then rotate back to your chosen time. This will ensure an accurate cooking time.
- Set timer dial to STAY ON to bake longer than 30 minutes or to manually control the cooking time.
WARNING: The Countertop Oven will continue to cook until the timer dial is turned to OFF.
- **IMPORTANT: You must turn the timer dial to 5 minutes or to STAY ON to turn the Countertop Oven ON.**
- Place the baking pan on the wire rack once preheating is complete.
- When BAKE time set has elapsed, a signal will sound, and the timer dial will finish in the OFF position. The Countertop Oven and power indicator light will turn OFF.
NOTE: To stop baking at any time, turn timer dial to OFF.
- Open the Countertop Oven door. Using oven mitts or pot holders, slide rack out to remove the cooked food. Unplug Countertop Oven when not in use.

BROIL

WARNING: NEVER LEAVE COUNTERTOP OVEN UNATTENDED DURING BROILING.

- When broiling, only the upper heating elements will operate. This setting should be used for browning the top surface of food or broiling chops, steaks, etc.
- Insert Countertop Oven rack into the upper rack position.
- Turn temperature dial to MAX.
- Turn function dial to BROIL.
- Turn timer dial to the desired broil time. The power indicator light will illuminate.
NOTE: To turn the timer for less than 10 minutes, always turn the timer dial to 10 minutes and then rotate back to your chosen time. This will ensure an accurate cooking time.
NOTE: Do not turn the timer dial to the STAY ON position when broiling.
- Place food on bake pan for broiling. Always use the bake pan on the Countertop Oven rack when broiling. Do not cover the rack with aluminum foil.
- When broil time set has elapsed, a signal will sound, and the timer dial will finish in the OFF position. The oven and power indicator light will turn OFF.
NOTE: To stop broiling at any time, turn the timer dial to OFF.
- Open door. Using mitts or pot holders, slide the rack out to remove the cooked food. Unplug Countertop Oven when not in use.

HINTS FOR BROILING

- Broiling is used for tender cuts of meats or marinated meats, fish and some fruits and vegetables.
- When broiling meat, brush each side with melted butter or olive oil.
- When broiling fish or chicken, broil skin-side down first.
- Broiling time is determined by the desired doneness and the distance between the food and the element.

WARNING: Do not place aluminum foil on top of the bake/broil pan. This traps grease and can cause a fire.

- For best results, thaw frozen meats, poultry and fish before broiling. Trim excess fat from meat and score edges to prevent curling.

TOAST

It is not necessary to preheat the Countertop Oven for toasting.

WARNING: NEVER LEAVE COUNTERTOP OVEN UNATTENDED DURING TOASTING.

- Insert Countertop Oven rack into lower rack position, to ensure uniform brownness on both sides.
- Turn temperature dial to 450°F (230° C).
- Turn function dial to TOAST.
- Use the toast shade selector on the timer dial to begin toasting. The power indicator light will illuminate.
NOTE: To set the timer for less than 10 minutes, always turn the timer dial to 10 minutes and then rotate back to your chosen time. This will ensure an accurate cooking time.
NOTE: Do not turn the timer dial to the STAY ON position when toasting.
- Always place the bread evenly on the rack. For example, when toasting one slice of bread, place the slice on the center of the rack. Then close door.
- When toasting time set has elapsed, a signal will sound, and the timer dial will finish in the OFF position. The Countertop Oven and power indicator light will turn OFF.
NOTE: To stop toasting at any time, turn the timer dial to OFF.
- Using mitts or pot holders, slide the rack out to remove the cooked food. Unplug Countertop Oven not in use.

CAUTION: Bread can burn easily, close supervision is necessary.

HINTS FOR TOAST

- Remove all protective wrappings from food before placing in Countertop Oven. Follow food directions.
- Frozen and heavy bread require a darker browning setting.
- One slice of bread requires a lighter setting than several slices of bread. When toasting more than one slice of bread, use slices of similar size, thickness and freshness.
- Stale bread, thin bread or sweet bread products, such as tea cakes and fruit loaf, brown much more quickly than ordinary bread, and should be toasted for less time.

BAGEL/ ENGLISH MUFFINS

It is not necessary to preheat the Countertop Oven for toasting bagels and English muffins.

WARNING: DO NOT LEAVE COUNTERTOP OVEN UNATTENDED WHILE USING THE BAGEL FUNCTION.

- Insert Countertop Oven rack into lower rack position.
- Turn temperature dial to 450°F (230° C).
- Turn function dial to BAGEL.

NOTE: Only the upper heating elements will cycle in this setting, allowing you to brown the cut half and gently warm the outside.

- Use the toast shade selector on the timer dial to begin. The power indicator light will illuminate.

NOTE: To set the timer for less than 10 minutes, always turn the timer dial to 10 minutes and then rotate back to your chosen time. This will ensure an accurate cooking time.

NOTE: Do not turn the timer dial to the STAY ON position when toasting bagels or English muffins.

- Always place the bagels or English muffins on the rack, cut side facing up. Then close door.
- When bagel toasting time set has elapsed, a signal will sound, and the timer dial will finish in the OFF position. The Countertop Oven and power indicator light will turn OFF.
NOTE: To stop toasting at any time, turn the timer dial to OFF.
- Using mitts or pot holders, slide the rack out to remove the cooked food. Unplug Countertop Oven when not in use.

WARM

This setting is designed to keep food warm after it has been cooked.

- Insert Countertop Oven rack into lower rack position.
- Turn temperature dial between 150°F (65° C) to 450°F (230° C).
- Turn function dial to WARM.
- Set timer dial to the desired WARM time.
- Set timer dial to STAY ON to keep food warm longer than 30 minutes or to manually control the WARM time. The Countertop Oven will NOT stop automatically and will continue to warm until the timer dial is turned to OFF.
- When warming time set has elapsed, a signal will sound, and the timer dial will finish in the OFF position. The oven and power indicator light will turn OFF.
NOTE: To stop warming at any time, turn the timer dial to OFF.
- Open the door. Using mitts or pot holders, slide the rack out to remove the warmed food. Unplug Countertop Oven when not in use.

COUNTERTOP OVEN HELPFUL HINTS

- Turn temperature dial to OFF, the function dial to WARM and timer dial to OFF before inserting or removing plug from electrical outlet.
- The power indicator light will illuminate when the unit is plugged in and the timer dial has been set to any temperature or STAY ON. When the time set has expired, or the timer dial is manually turned to OFF, the power indicator light will turn OFF.
- When setting BAKE time, include 15 minutes preheat time.
- This Countertop Oven has a 30 minute timer. If baking for longer than 30 minutes, use the STAY ON feature.
- Never use lids with any glass, ceramic pans or metal bakeware. If foods require covering, use aluminum foil. Be sure to tuck the edges of foil tightly against the sides of the baking dish or pan.
- Be sure the top of the container or food being baked or broiled is at least 1-1/2 inches away from the upper heating elements.
- Never place any container directly on the lower heating element.
- To obtain the best performance from this Countertop Oven, do not overfill.
- To avoid heat loss, do not open door too frequently.

USER MAINTENANCE INSTRUCTIONS

CAUTION: This appliance is for **HOUSEHOLD USE ONLY**.

This appliance requires little maintenance. It contains no user serviceable parts.

Do not try to repair it by yourself. Any servicing that requires disassembly other than cleaning must be performed by a qualified appliance repair technician.

CLEANING & STORAGE

IMPORTANT: Before cleaning unplug the Countertop Oven and allow it to cool completely.

- Wash the oven rack and baking pan in mild, soapy water. To remove stubborn spots, use a polyester or nylon pad. It is not recommended to wash baking pan in the dishwasher.
- Do not use abrasive cleansers, scrubbing brushes, spray glass cleaners or chemical cleaners.
- Using a wet cloth, wipe the inside of the Countertop Oven. To minimize scratching, use a polyester or nylon pad.
- To clean the glass door, use a wet cloth saturated with detergent or soap. Do not use spray glass cleaner.
- Never immerse the unit in water or other liquid.
- Always dry parts thoroughly before using the Countertop Oven after cleaning.
- To remove crumb tray the glass door must be closed:
 - Grasp the handle below the glass door and pull out the tray
 - Dispose of crumbs and wipe the tray with a dampened cloth
 - Be sure to dry thoroughly before inserting the tray back into the oven
- Make sure unit is clean, unplugged and fully cooled before storing.
- Store the Countertop Oven in its box in a clean, dry place.
- Never store appliance while it is hot or still plugged in.
- Never wrap cord tightly around the appliance. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

WARRANTY

For **one year** from the date of purchase, the manufacturer guarantees to repair or replace any item found defective in material, construction or workmanship under normal use and following care instructions. This excludes damage from misuse or abuse. Minor imperfections and slight color variations are normal.

Should your appliance require repair or replacement, please contact the Consumer Service Department by phone at 1-866-832-4843 or visit www.sensioinc.com for return procedures and a return authorization number.

If the manufacturer confirms a defect and approves your claim, the manufacturer will repair or replace (free of charge) or refund the purchase price of the item.

Developed exclusively for WILLIAMS-SONOMA®
Conçu en exclusivité pour WILLIAMS-SONOMA®
© 2017 Williams-Sonoma, Inc. San Francisco, Ca 94109 USA.
2 Grosvenor Street, Suite 201, Level 2, Bondi Junction, NSW 2022, AUS.
Made in China. Fabriqué en Chine.