

WILLIAMS-SONOMA


ASSEMBLY INSTRUCTIONS

Parts Included

Andirons x2
Legs x2
Bolts x4

Assembly

Place the Back Leg on top of the tab located on the back of the Andiron. Place Bolts up through the bottom of the tab and thread into the Backleg. Use supplied Allen wrench to tighten Bolts down.

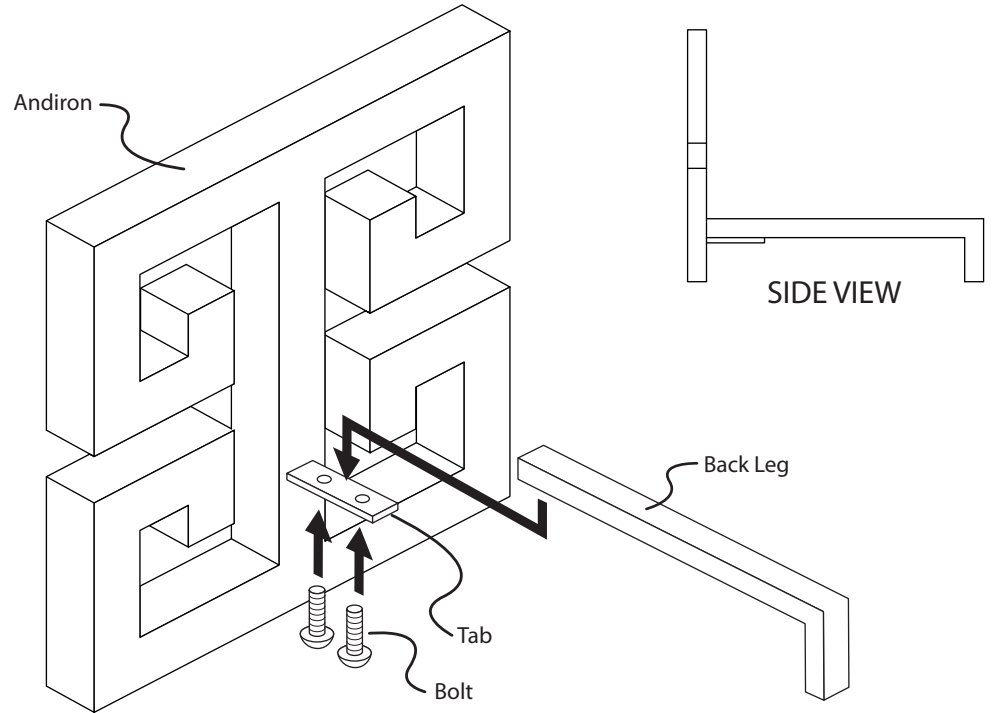

For use as a decorative accent. Should not be used in-lieu of a fireplace screen when the fire is burning. Not recommended for use during a traditional wood fire. Designed for decorative use with modern gas log fires and / or when a fireplace is not in use.

PH# 18782
WS# 2151301

WILLIAMS-SONOMA


ASSEMBLY INSTRUCTIONS

Parts Included

Andirons x2
Legs x2
Bolts x4

Assembly

Place the Back Leg on top of the tab located on the back of the Andiron. Place Bolts up through the bottom of the tab and thread into the Backleg. Use supplied Allen wrench to tighten Bolts down.

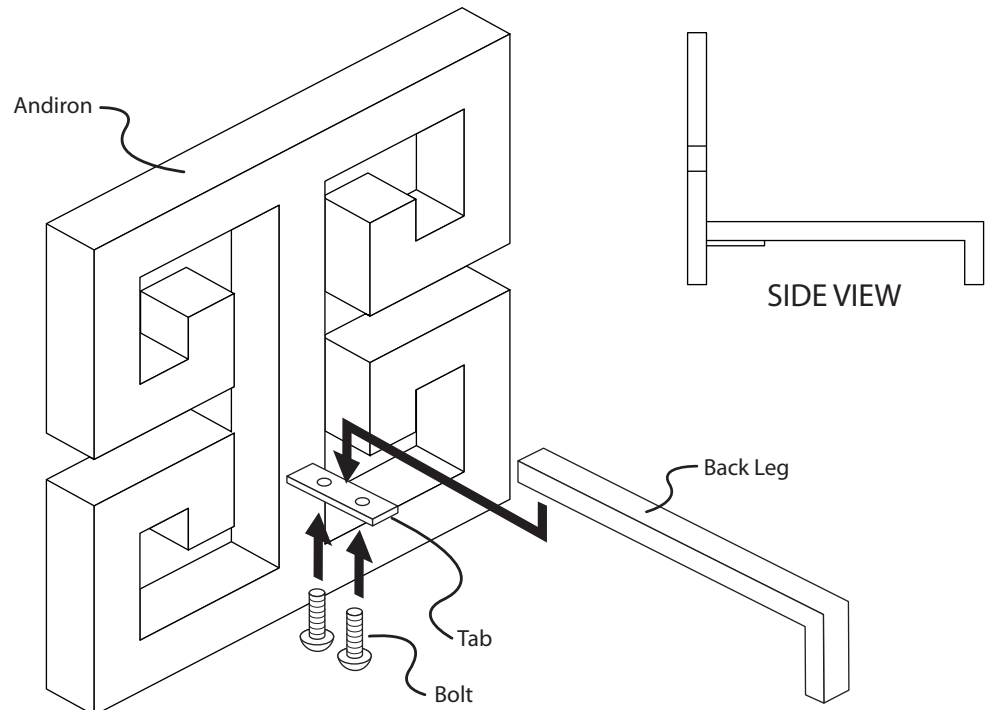

For use as a decorative accent. Should not be used in-lieu of a fireplace screen when the fire is burning. Not recommended for use during a traditional wood fire. Designed for decorative use with modern gas log fires and / or when a fireplace is not in use.

PH# 18782
WS# 2151301