


WILLIAMS SONOMA

CALIFORNIA

Instruction Manual for SKU# 5338025 & 5338194 Mechanical Kitchen Timers

SETTING THE ALARM

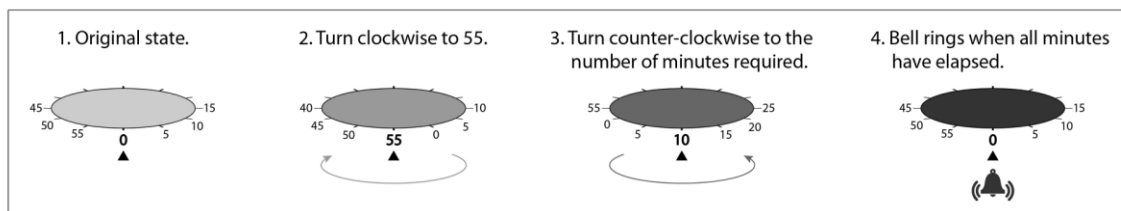

WARNING

Do not directly turn counterclockwise

- There are 3 seconds alarm sound when time is up.

CARE INSTRUCTIONS

- Use soft dry fabric to clean the timer.
- Do not dip in the water.