

OUTSIDE

ZEROING AND ADD & WEIGH OPERATION

To weigh ingredients in a container, press the zero button to offset the weight of the container, so that only the weight of the ingredients to be added is displayed.

The zero button can also be used to weigh multiple ingredients consecutively without removing items from the Scale. Pressing zero will zero-out the Scale before adding a new ingredient.



Add container to Scale, then press zero button to set weight to zero.



Add ingredients and weight will appear on display.



Press zero to reset display back to zero again and continue to add ingredients until complete or until maximum capacity is reached.

After container is removed from Scale, a negative number will appear on the display. To reset Scale back to zero for a new measurement, press zero and weigh directly on platform or add a new container and press zero again.

OXO
GOOD GRIPS®
STAINLESS STEEL
SCALE


11lb
capacity



SATISFACTION
GUARANTEED

INSIDE

INTERFACE FEATURES

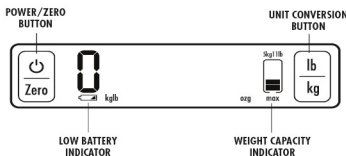

PULL-OUT DISPLAY

Pull the display unit away from the Scale for a clear view of screen with plates or bowls on Scale.

POWER/ZERO BUTTON

Tap power/zero button once to turn Scale on. While it's on, press the button again to reset the Scale before adding additional ingredients or to offset the weight of a plate or bowl. Hold button down for three seconds to shut Scale off.

UNIT CONVERSION BUTTON

Press the Unit Button to switch between measuring in ounces, ounces and pounds, grams, or grams and kilograms.

WEIGHT CAPACITY INDICATOR

The Weight Capacity Indicator shows the used capacity of the Scale between 0 and 11 lbs (or 0 and 5 kg). When maximum capacity is reached, all bars in the indicator will flash and "Err" will appear on the display. To protect Scale, remove excess weight immediately.

LOW BATTERY INDICATOR

The Low Battery Indicator will appear in the lower-left corner when batteries need to be changed.

USE

STANDBY MODE

After 6 minutes of inactivity, the display will switch to Standby Mode and the memory will be retained. Touch any button or place weight on Scale after 6 minutes to return the Scale to active mode.

AUTO SHUT OFF

After 30 minutes of inactivity, the Scale will shut off and memory will be lost. To turn the Scale on again, press the power button.

MANUAL SHUT OFF

To turn Scale off manually, press and hold the Power Button until display is blank.

CARING FOR YOUR FOOD SCALE

BATTERY LOADING (4 AAA BATTERIES INCLUDED)

Locate battery compartment on the bottom of the Scale. Push tab in to remove battery door. Ensure +/- ends of batteries line up with +/- symbols in battery compartment. Replace battery door.

CLEANING

Remove platform and wipe clean with a damp cloth. Do not run Scale under water, do not put in dishwasher.

STORAGE

Do not place heavy objects on top of the Scale during storage. Doing so may affect the accuracy of the Scale.