 


OUTSIDE

ZEROING AND ADD & WEIGH OPERATION

 
To weigh ingredients in a container, press the zero button to offset the weight of the container, so that only the weight of the ingredients to be added is displayed. The zero button can also be used to weigh multiple ingredients consecutively without removing items from the Scale. Pressing zero will zero-out the Scale before adding a new ingredient.

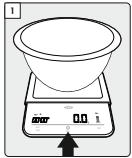

Add container to Scale, then press zero button to set weight to zero.



Add ingredients and weight will appear on display.

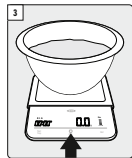

Press zero to reset display back to zero again and continue to add ingredients until complete or until maximum capacity is reached.

 
After container is removed from Scale, a negative number will appear on the display. To reset Scale back to zero for a new measurement, press zero and weigh directly on platform or add a new container and press zero again.

Note: If your scale is displaying a negative number, it needs to be zeroed.

For pour-over tips and/or troubleshooting visit www.oxo.com

OXO
GOOD GRIPS®
PRECISION SCALE


6lb
capacity

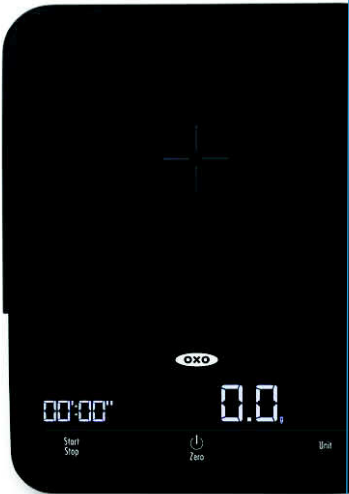

SATISFACTION
GUARANTEED

INSIDE

 INTERFACE FEATURES

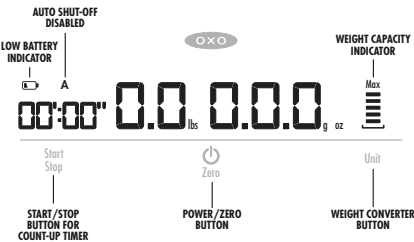

POWER/ZERO BUTTON

Tap power/zero button once to turn Scale on. While it's on, press the button again to reset the Scale before adding additional ingredients or to offset the weight of a plate or bowl. Hold button down for two seconds to shut Scale off.

UNIT CONVERSION BUTTON

Press the Unit Button to switch between measuring in ounces, ounces and pounds, or grams.

STOP/START

To start stopwatch feature, tap stop/start button once. Tap again to pause. Hold two seconds to clear stopwatch, and hold for four seconds to shut off the stopwatch entirely.

LOW BATTERY INDICATOR

The Low Battery Indicator will appear in the upper-left corner when batteries need to be changed.

USE

STANDBY MODE

After 5 minutes of inactivity, the display will switch to Standby Mode and the memory will be retained. Touch any button or place weight on Scale after 5 minutes to return the Scale to active mode.

AUTO SHUT-OFF

After 30 minutes of inactivity, the Scale will shut off and memory will be lost. To turn the Scale on again, press the power button.

DISABLING AUTO SHUT-OFF

To disable Auto Shut-Off function, ensure Scale is off, then hold the power button and the start/stop button down at the same time for 2 seconds. "A-ON" will appear and then the start screen will be displayed. You will see an "A" in the top left corner of the screen when Auto Shut-Off is disabled. Auto Shut-Off will remain disabled until you repeat these steps to enable it again.

MANUAL SHUT-OFF

To turn Scale off manually, press and hold the Power Button until display is blank.

CALIBRATION

Every time you turn the scale on, it will count down from 3 to calibrate before it will be ready for use. If the screen is ever stuck on 1, ensure Scale is on a flat, even surface.

SILICONE MAT

Place silicone mat on Scale to protect surface from hot items or scratching. Ensure edges of mat are hanging off the edge, and zero scale after placing mat on Scale. Silicone mat is easy to clean and dishwasher safe. Do not place hot containers or items directly on Scale.

CARING FOR YOUR FOOD SCALE

BATTERY LOADING (4 AAA BATTERIES INCLUDED)

Locate battery compartment on the bottom of the Scale. Push tab in to remove battery door. Ensure +/- ends of batteries line up with +/- symbols in battery compartment. Replace battery door.

CLEANING

Wipe platform clean with a damp cloth. Do not run Scale under water, do not put in dishwasher.

STORAGE

Do not place heavy objects on top of the Scale during storage. Doing so may affect the accuracy of the Scale.