


SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY

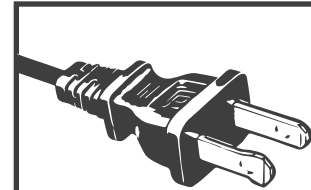

POLARIZED PLUG

This appliance has a polarized plug, (one blade is wider than the other). As a safety feature to reduce the risk of electrical shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature or modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

SHORT POWER SUPPLY CORD INSTRUCTIONS:

A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTICES:

- Some countertop and table surfaces are not designed to withstand the prolonged heat generated by certain appliances. Do not set the heated unit on a finished wood table. We recommend placing a hot pad or trivet under your coffee maker to prevent possible damage to the surface.
- During initial use of this appliance, some slight smoke and/or odor may be detected. This is normal with many heating appliances and will not recur after a few uses.

CLEANING & MAINTENANCE

NOTE: Always unplug the coffeemaker and allow to cool before cleaning.

- Remove and wash the Glass Carafe, Carafe Lid, and Cone Style Filter Basket in a mixture of mild detergent and water. Rinse each with clean water, and dry thoroughly. You can also place in the dishwasher and wash (on the top rack only).

NOTE: Never use abrasive cleansers, steel wool pads or other abrasive materials. Dishwasher (top rack only): Glass Carafe, lid and Removable Cone Style Filter Basket.

DECALCIFYING YOUR CALPHALON® SPECIAL BREW COFFEE MAKER

Minerals (calcium/ limestone) found in water will leave deposits in your coffee maker and can affect performance.

- Fill Glass Carafe (10 cups) with a solution of equal parts water and vinegar and pour the solution into the Water Reservoir.
- Close the Carafe Lid on the Glass Carafe and place on the Warming Plate. Press the BREW/OFF button.
- Once the brewing cycle has completed, discard the contents in the Glass Carafe and rinse with water. Fill the Glass Carafe with water only (10 cups) and pour the water into the water reservoir. Press the BREW/OFF button to rinse the machine.
- Once the brewing cycle has completed, discard the contents in the Glass Carafe and clean the Carafe per the above instructions.

CAUTION: Never immerse the coffeemaker itself in water, in any other liquid or place in the dishwasher.

This appliance has no user serviceable parts. Any servicing beyond that described in the Cleaning Section should be performed by an Authorized Service Representative only. See Warranty Section.

3 YEAR WARRANTY

For additional information on your Calphalon® Special Brew Coffee Maker and detailed warranty information, visit us at www.calphalon.com or call us at 1-800-809-7267

SUGGESTED DECALCIFYING INTERVAL

Type of Water	Cleaning Frequency
Soft Water	Every 80 Brew Cycles
Hard Water	Every 40 Brew Cycles

P.N. 194902

Calphalon®



SPECIAL BREW COFFEE MAKER

USER MANUAL

WWW.CALPHALON.COM

MODEL: BVCLDCG1



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

READ AND SAVE THESE INSTRUCTIONS

- READ ALL INSTRUCTIONS, PRODUCT LABELS AND WARNINGS BEFORE USING THE PRECISION CONTROL COFFEE MAKER.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not place or immerse cord, plugs, or appliance in water or other liquid.
- This appliance is not to be used by children or by persons with reduced physical, sensory or mental capabilities.
- Close supervision is necessary when any appliance is used near children. Children should not play with the appliance.
- Unplug from outlet when either the appliance or display clock is not in use, and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to an Authorized Service Center for examination, repair or adjustment. Do not attempt to replace or splice a damaged cord.
- The use of an accessory not recommended by the appliance manufacturer for use with this appliance may result in fire, electric shock or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to the off position, then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- All lids should be closed during use.
- Scalding may occur if the lid is removed or brew basket door is opened during or immediately after the brewing cycles. Contents may be hot. Allow to cool before opening the lid.

For appliances with glass containers:

- The container is designed for use with this appliance. It must never be used on a range top.
- Do not set a hot container on a wet or cold surface.
- Avoid sudden temperature changes, such as rinsing, washing, filling, or immersing a hot container with cold liquids.
- Do not use a cracked or chipped container or a container having a loose or weakened handle.
- Do not clean container with cleansers, steel wool pads, or other abrasive material.

PRODUCT DIAGRAM

1. Water Reservoir Lid
2. Water Reservoir
3. Water Window
4. Removable Cone Style Filter Basket *
5. Brew Basket
6. 10 Cup Glass Carafe
7. LCD Screen Display
8. BREW LATER, STRONG, and BREW/OFF Button
9. HR/Warming timer and MIN Selector Buttons
10. Warming Plate
11. Cord Storage

*These parts can be replaced on calphalon.com or at 1-800-809-7267

PREPARING YOUR USE

Cleaning your coffeemaker before using the first time

- Wash the Glass Carafe, Carafe Lid and the Removable Cone Style Filter Basket as per cleaning instructions in this manual. Rinse each thoroughly (please refer to the parts diagram).
- Replace all the parts and close the lid. Then, run a brew cycle with water only, without adding coffee and coffee filter.
- When brewing is complete, turn your coffeemaker off, discard the water in the Glass Carafe and rinse the Glass Carafe, Carafe Lid and the Removable Cone Style Filter Basket.

SETTING THE CLOCK AND DELAY BREW TIME

- Plug the power cord into a standard electrical outlet. The clock will flash on indicating that the time has not yet been set.
- Press the HR and MIN Buttons, until you reach the current time.

NOTE: Pressing any button before setting the clock will cause the clock to start keeping time from 12:00 a.m. You must set the clock if you want to use the Delay Brew feature.



ADDING WATER AND COFFEE

- Once coffeemaker is plugged in and clock is set, open the Brew Basket by swinging it all the way to the left. Place disposable #4 cone-shaped filter into the Removable Cone Style Filter Basket and swing Brew Basket all the way to the right to secure in place. (See the Suggested Coffee Measurement Chart.)
- Fill the Glass Carafe with cold fresh water to the desired capacity. For easy and accurate filling, the water markings on the Glass Carafe and on the Water Window show the amount of water needed to make the corresponding desired number of cups.
- Do not fill past the "10 cup line" or water will flow out of the overflow hole in the back of the coffeemaker.
- Place the Glass Carafe on the Warming Plate.
- The amount of coffee brewed will always be slightly less than the amount of water poured in the Water Reservoir. This is due to the minimum absorption of water by the coffee grounds.

NOTE: Make sure the Glass Carafe is fully placed on the Warming Plate or the water and the grounds will overflow from the Filter Basket. An overflow may cause personal injury or damage to property.

CAUTION! To reduce the risk of damaging the Glass Carafe and/or the risk of personal injury, do not add cold water to the Carafe if it is hot. Allow it to cool before using.

BREWING COFFEE

- After addition of water and coffee and the Glass Carafe and the filter basket securely in place, turn the coffeemaker on by pressing the BREW/OFF Button once. The LED light will illuminate signaling that the coffeemaker is on and brewing.
- When brewing begins the LCD Screen will continue to show real time. Press the HOUR button once and the LCD screen will show the time the coffee is being kept warm. In this way, you can keep track of the coffee keep-warm time.
- You can go back to real time on the LCD Screen by simply pressing the HOUR button.
- To enjoy a fuller and stronger cup of coffee, press the STRONG Button. If brewing to the SCA guidelines for Golden Cup Standard, do not use the STRONG setting.
- When the coffee has finished brewing, the Coffee Maker will continue to warm coffee for 4 hours, before automatically shutting off.
- Once you are finished, allow Coffee Maker to cool before cleaning.
- To turn the coffeemaker off, press the BREW/OFF button once. Be sure to turn your coffeemaker off when no longer using it.

SUGGESTED COFFEE MEASUREMENT

Water	Ground Coffee
10 Cups	17 Tbsp.*
8 Cups	13 Tbsp.
6 Cups	10 Tbsp.
4 Cups	6.5 Tbsp.
1 level tablespoon (tbsp) = 5gr./0.17 oz. 1 cup = 5 fl. oz. of brewed coffee Use more or less coffee to suit your taste	

NOTE: For best results, use a level tablespoon for ground coffee measurement. Make sure you use medium grind coffee for a perfect brew.

*May cause overflow if using fine coffee or decaf coffee

NOTE: For further details on product features and usage instructions, please visit www.calphalon.com