

8 Cup French Press $\{$ Instruction Manual

Table of Contents

Important Safeguards	2
Getting to Know your brim 8 Cup French Press	
Before Using for the First Time	
Practice the art of French Press Brewing	4
Using your French Press	
Hints for Great Tasting Brewed Coffee	6
Care & Cleaning Instructions	
Replacing the Filter	7
Storing Instructions	
Tasting Notes	

IMPORTANT SAFEGUARDS

 
- 1. Read all instructions before using.
- 2. Not for stove top use.
- 3. Check glass beaker for scratches, cracks or chips. Do not use a pot which is scratched, chipped or cracked a loose or weakened handle.
- 4. **SCALD HAZARD:** Excessive plunging force can cause scalding hot liquid to shoot out of pot. Do not plunge with force.
- 5. Use only coarse ground coffee.
- Keep children away while using. Hot water is a hazard to small children!
- 7. The French Press is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 8. Stand the appliance on a table or flat surface.
- Do not place appliance on or near a hot gas or electric burner or in a heated oven.
- 10. Do not use this appliance for other than its intended use.


SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

Getting to Know Your brim 8 Cup French Press

Product may vary slightly from illustration

- 1. Lid Knob (to push down plunger)
- 2. Pouring Spout
- 3. Silicone Grip
- 4. Cool Touch Handle
- 5. Plunger Rod
- 6. Filter Assembly
- 7. Lid
- 8. Lid Filter
- Extra Replacement Filter Assembly



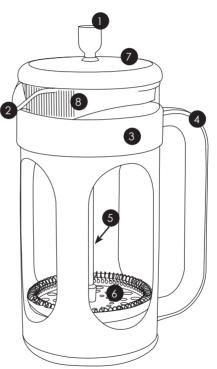


Before Using for the First Time

- Remove all packing material and labels from the inside and outside of the French Press and other accessories.
- 2. Before preparing coffee, thoroughly clean the French Press and all parts by hand in hot, sudsy water. Rinse and dry.

Practice the art of French Press Brewing

Sometimes the right answer is also the simplest. Classically designed with a modern twist, the \overrightarrow{brim} 8 Cup French Press features a durable Borosilicate Glass large capacity carafe with a 3 part stainless steel plunger and a premium mesh filter to retain all the subtle flavors of your coffee beans. Brew up to 8 cups of excellent coffee in just 4 minutes. With no absorption from a paper filter, pressed coffee extracts the perfect amount of aromatic oils and acids for maximum flavor. Press on.

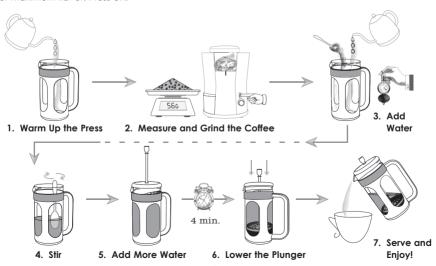

Using your French Press

- 1. **Warm up the press:** Warm up the empty French Press by rinsing it with very hot water. This helps maintain the temperature while brewing for best extraction.
- Measure and grind the coffee: Measure out 56g (about 8 tablespoons) of coffee and grind it coarse (should be the same consistency as breadcrumbs).
 - **CAUTION:** Use only coarse ground coffee. A fine grind can clog the filter and create high pressure. Make sure to place the brim French Press on a heat proof, non-slip surface.
- Add water: Now that the brim French Press is warmed up, discard the hot water, and dry
 the inside with a soft cloth then add the coffee into the empty press. Start a count-up timer
 as soon as you add hot water. Fill up the carafe halfway, saturating all the grounds, making
 sure that there are no dry spots.
 - **NOTE:** Hot water temperature for brewing coffee should be around 197.6°F 204.8°F (92°C 96°C). Using boiling water can affect the taste of the coffee.
- Stir: At 1:00, use a wooden or plastic spoon or spatula to break the top layer, aiving it a good stir.
 - CAUTION: Metal spoons can scratch or chip the glass beaker and cause breakage.
- 5. Add more water: Fill the carafe almost all the way to the top with water, but leave a minimum of 2.5 cm,1 inch of space at the top. Put the lid on and allow the coffee to brew without pressing it down.
- 6. Lower the plunger: At around 4:00 hold the carafe handle firmly with the spout turned away from you, then using just the weight of your hand apply slight pressure on top of the knob to lower the plunger straight down into the pot. Lowering the plunger slowly with minimal pressure produces best results. If the filter clogs or it becomes difficult to push down the plunger you should remove the plunger from the pot, stir the brew and then slowly plunge again.
 - WARNING: Using excessive force can cause scalding liquid to shoot out of the pot.
- 7. Serve and enjoy: Serve it up. Pour coffee into a carafe immediately or serve in mugs right away to avoid over extraction. If the coffee sits on the grounds too long, it continues to extract and will become bitter.

Hints for Great Tasting Pour Over Brewed Coffee

- Use coffee ground specifically for a French Press. Don't use fine ground coffee as it will clog the filter.
- Periodically check the filter assembly. Over time, it may need to be replaced.
- · Never use the pot without water.
- Never use other contents besides coffee, such as: teas, cacao powder or instant coffee
 as it will clog the filter plate.
- If the water heat is too high, coffee may have a burnt taste. Getting the optimum temperature for brewing may take some trial and error.
- Store coffee beans or grounds in airtight container, away from sunlight.
- · Use freshly roasted coffee.
- Grind your coffee fresh, within 15 minutes of brewing.
- Use filtered water for best coffee flavor.
- for more great hints and tips visit www.brim.coffee

Care & Cleaning Instructions

- 1. To clean the French Press first remove the lid and filter assembly rod.
- 2. Add a little water to the grounds, give it a good swirl, and empty into the trash or compost bin.
- 3. Unscrew the filter assembly and clean the plunger unit after each use.
- 4. All parts are dishwasher safe.

Replacing the Filter

- Once you notice it's time to replace your filter assembly simply remove the plunger from the carafe.
- 2. Hold the filter assembly in one hand while holding the rod in the other hand turn the rod counter clockwise until the filter assembly detaches.
- 3. Take the new filter assembly and simply screw it back on to the rod clockwise until it is secured into place.

Storing Instructions

1. Store the French Press in a safe, dry place, or in its box.

 $\ensuremath{\mbox{\bf h}}$ Perfect the art of coffee tasting. For tips on how to use the brim tasting wheel visit $\underline{\mbox{www.brim.coffee}}$


Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

Tasting Wheel




brim


Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

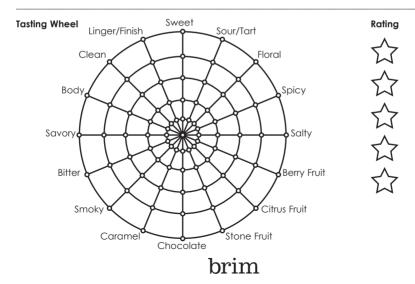


Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

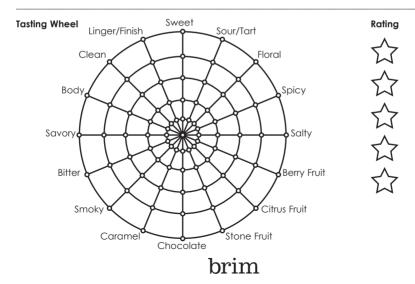


Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

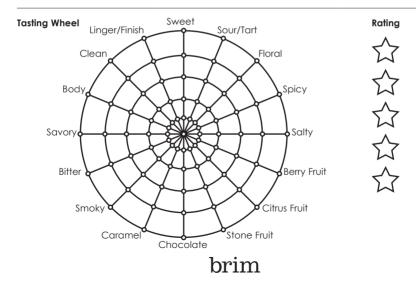


Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

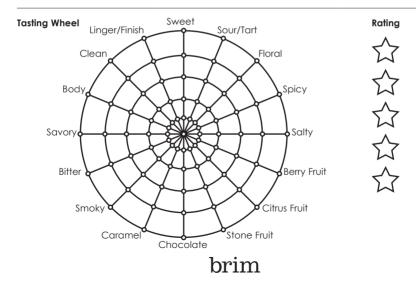

Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

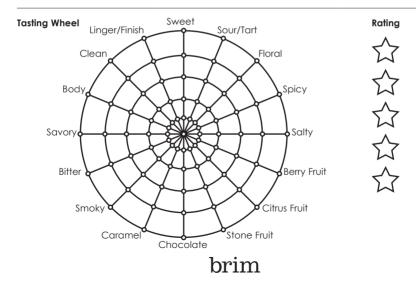

Coffee Origin/Name:	
Roaster:	
Variety:	
Price:	
Notes:	

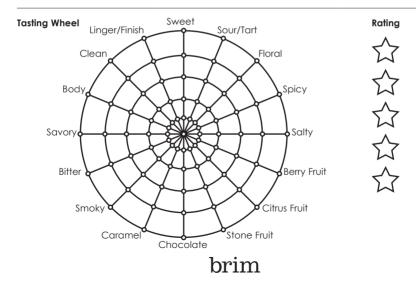

Limited Two-Year Warranty

SENSIO Inc. hereby warrants that for a period of **TWO YEARS** from the date of purchase, this product will be free from mechanical defects in material and workmanship, and for 90 days in respect to non-mechanical parts. At its sole discretion, SENSIO Inc. will either repair or replace the product found to be defective, or issue a refund on the product during the warranty period.

The warranty is only valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt, as proof of purchase is required to obtain warranty validation. Retail stores selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.

Exclusions:

The warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use of the product, use of improper voltage or current, improper routine maintenance, use contrary to the operating instructions, disassembly, repair, or alteration by anyone other than qualified SENSIO Inc. personnel. Also, the warranty does not cover Acts of God such as fire, floods, hurricanes, or tornadoes.

SENSIO Inc. shall not be liable for any incidental or consequential damages caused by the breach of any express or

implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty. Some states, provinces or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, and therefore, the above exclusions or limitations may not apply to you. The warranty covers specific legal rights which may vary by state, province and/or jurisdiction.

How To Obtain Warranty Service:

You must contact Customer Service at our toll-free number: 1-866-832-4843. A Customer Service Representative will attempt to resolve warranty issues over the phone. If the Customer Service Representative is unable to resolve the problem, you will be provided with a case number and asked to return the product to SENSIO Inc. Attach a tag to the product that includes: your name, address, daytime contact telephone number, case number, and description of the problem.

Also, include a copy of the original sales receipt. Carefully package the tagged product with the sales receipt, and send it (with shipping and insurance prepaid) to SENSIO Inc.'s address. SENSIO Inc. shall bear no responsibility or liability for the returned product while in transit to SENSIO Inc.'s Customer Service Center



Perfect the art of artisanal brewing and discover great video tutorials, recipes, tips & more by following us.

@brimcoffee f P @ m h www.brim.coffee