

# Instant™

## OMNI™ PLUS

### Toaster Oven



## Safety, Maintenance & Warranty

Important Safeguards  
Care & Cleaning  
Troubleshooting  
Warranty  
Contact Us



Full Manual, How to Videos and Recipes available online at [instantappliances.com](https://www.instantappliances.com)  
Register your product today at [instantappliances.com/support/register](https://www.instantappliances.com/support/register)

# IMPORTANT SAFEGUARDS

When using your appliance, basic safety precautions should be followed, including the following:

1. READ ALL INSTRUCTIONS, SAFEGUARDS, AND WARNINGS BEFORE OPERATING APPLIANCE.
2. Always operate the appliance on a stable, non-combustible, level surface.
3. **⚠ CAUTION** The appliance's outer surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs. Wear Instant Pot® mini mitts or oven mitts when handling hot components to avoid burns. Extreme caution must be used when moving the appliance. Let the appliance cool to room temperature before handling or moving.
4. **⚠ CAUTION** To protect against the risk of electrical shock, do not immerse any part of the appliance in water or other liquid. Do not rinse the appliance under a tap. Proper maintenance is recommended after each use. Let the appliance cool to room temperature before cleaning or storage. Refer to "Care & Cleaning".
5. **⚠ CAUTION** This appliance is NOT to be used by children or by persons with reduced physical, sensory, or mental capabilities. Close supervision is necessary when this appliance is used near children and these individuals. Children should not use or play with this appliance.
6. Unplug the appliance when not in use, before assembling or disassembling parts and before cleaning. To unplug the appliance, grasp the plug and pull from the outlet. Never pull from the power cord. Allow to cool before putting on or taking off parts.
7. Regularly inspect the appliance and power cord. Do not operate an appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. For assistance, contact Customer Care at [support@instantappliances.com](mailto:support@instantappliances.com) or **1-800-828-7280**.
8. Do not use any accessories or attachments not authorized by Instant Brands™ Inc. The use of attachments not recommended by the manufacturer may cause a risk of injury, fire or electric shock.
9. Avoid contact with moving parts.
10. For household countertop use only. Do not use outdoors. Not for commercial use.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

# IMPORTANT SAFEGUARDS

11. **⚠ CAUTION**
  - Spilled food can cause serious burns.
  - Keep the appliance and cord away from children.
  - A short power-supply cord is provided to reduce the hazards resulting from grabbing, entanglement and tripping.
  - Never drape the power cord over edge of table or counter, never plug into a below-counter power outlet, and never use with an extension cord.
12. Do not use the appliance in electrical systems other than 120V~60Hz. Do not use with power converters or adapters or floor level power outlet.
13. Do not place the appliance or power cord on or near a hot gas or electric burner, or a heated oven. Heat from an external source will damage the appliance.
14. Do not use the appliance for other than its intended use.
15. **⚠ CAUTION** Extreme caution should be exercised when using containers constructed of materials other than metal or glass in the appliance. Failure to do so may result in fire or burns.
16. **⚠ CAUTION** Do not place any combustible materials in the cooking chamber, such as paper, cardboard, plastic, Styrofoam or wood, or any other materials that are not oven safe and may catch fire or melt. Failure to do so may result in fire or burns.
17. Do not cover or block the air vents while the appliance is in operation. Doing so will prevent even cooking and may damage the appliance or cause it to overheat. Failure to do so may result in fire or burns.
18. **⚠ WARNING** Never pour oil into the fry basket, or directly into the oven's cooking chamber. Fire and personal injury could result.
19. **⚠ CAUTION** While cooking, the internal temperature of the appliance reaches several hundred degrees. To avoid personal injury, never place unprotected hands inside the appliance until it has cooled to room temperature. Exercise caution and avoid the hot steam and air when opening the oven door.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

# IMPORTANT SAFEGUARDS

20. To avoid scalding injury, use extreme caution when removing the cooking pan or disposing of hot grease. Use oven mitts when handling hot items.
21. Do not store any materials other than authorized Instant Brands™ accessories in the appliance.
22. When cooking, do not place the appliance against a wall or against other appliances. Leave at least 5" of free space on the back, sides, and above the appliance. Do not operate the appliance on or near combustible materials such as tablecloths and curtains. Do not place anything on top of the appliance when in operation. A fire may occur if the oven is covered or touching flammable material, including curtains, drapes, walls and the like.
23. **⚠ CAUTION** When in operation, hot air is released through the air vents. Keep your hands and face at a safe distance from the air vents and take extreme caution when removing the accessories from the appliance. Failure to do so may lead to burns and/or injury.
24. **⚠ CAUTION** To avoid risk of fire or electrical shock, oversize foods, metal foil packages and metal utensils must not be inserted into the appliance. Do not overfill the cooking pans. Overfilling may cause food to contact the heating element, which may result in fire and/or personal injury.
25. **⚠ CAUTION** Do not clean the appliance with metal scouring pads or steel wool. Pieces can break off and touch electrical parts, causing a risk of electric shock. Failure to do so may lead to electric shock, burns and/or injury.
26. To avoid risk of electrical shock, do not attempt to dislodge food while the appliance is plugged into an electrical outlet. Failure to do so may lead to electric shock, burns and/or injury.
27. **⚠ WARNING** To avoid risk of fire, NEVER leave the appliance unattended during use. Never connect this appliance to an external timer switch or separate remote-control system. Failure to do so may lead to burns and/or injury.
28. Should the appliance emit black smoke press **Cancel** and unplug immediately. Wait for smoking to stop and unit to cool before removing accessories.
29. Do not rest cooking utensils or baking dishes on the appliance's hot surfaces.



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

# IMPORTANT SAFEGUARDS

30. Do not use the accessories included with the oven in a microwave, convection oven or conventional oven. Do not use these accessories on a ceramic cooktop, electrical coil, gas burner range, or outdoor grill.

## SAVE THESE INSTRUCTIONS.

### **WARNING**

To avoid injury, read and understand instruction manual before using this appliance.

### **WARNING**

Electrical shock hazard. Use grounded outlet only. DO NOT remove ground. DO NOT use an adapter. DO NOT use an extension cord. Failure to follow instructions can cause electrical shock, injury and/or death.

### **NOTICE**

THE FAILURE TO FOLLOW ANY OF THE IMPORTANT SAFEGUARDS AND THE IMPORTANT INSTRUCTIONS FOR SAFE USE IS A MISUSE OF YOUR APPLIANCE THAT CAN VOID YOUR WARRANTY AND CREATE THE RISK OF SERIOUS INJURY.

## Special Cord Set

As per safety requirements, a short power supply cord (0.6 m to 0.9 m / 24 in to 35 in) is provided to reduce the hazards resulting from grabbing, entanglement and tripping.

This appliance has a 3-prong grounding plug. To reduce the risk of electric shock, plug the power cord into a grounded (earthed) electrical outlet that is easily accessible. Failure to follow this instruction could lead to electric shock and/or injury.

## Product Specifications



Omni Plus 26



27 Quarts  
26 Litres



1800 watts



120V ~ 60 Hz



24.18 lb  
9.7 kg



in: 17.68L × 16.34W × 14.39H  
cm: 44.9L × 41.5W × 36.5H

### **WARNING**

Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

# Use, Care & Cleaning

**⚠ CAUTION** Unplug your Omni™ Plus Toaster Oven and let it cool to room temperature before cleaning. Never use harsh chemical detergents, scouring pads, or powders on any of the parts or components. Failure to do so may lead to injury.

Part / Accessory	Instructions	Cleaning Method
Cooking Pan	Optionally, spray with non-stick cooking spray or line the pan with aluminum foil for easier cleaning.	Dishwasher Safe / Hand Washable (May be submerged)
Rotisserie Spit & Forks	Disassemble and clean after each use.	
Rotisserie Lift	Clean as needed.	
Oven Rack	Do not cover the oven rack when cooking.	
Air Fry Basket	Optionally, spray with non-stick cooking spray before adding food.	
Crumb Tray	Remove and clean after each use and ensure all grease and food debris is fully removed. Optionally, prior to use, line the pan with aluminum foil for easier cleaning.	Damp Cloth Only
Cooking Chamber	Clean after each use once the cooking chamber is cool. Use a damp cloth or sponge to ensure the heating element, surrounding area, and chamber walls are free of grease and food debris. You may use any commercial oven cleaner to remove stubborn grease residue.	
Toaster Oven Exterior	Clean with a soft, damp cloth or sponge, and wipe dry to avoid streaking.	

*Note: To remove baked on grease residue from accessories and the cooking chamber, unplug the appliance and wait for it to cool. Then spray the affected area with a mixture of baking soda and vinegar, and wipe clean. For stubborn stains, allow the mixture to sit on the affected area for several minutes before removing residue.*

<b>⚠ WARNING</b>		
Do not immerse the appliance in water. Do not rinse the appliance under a tap. Do not wet prongs of power cord.	Without proper cleaning, food and grease splatter may build up around the heating element, leading to a risk of smoke, fire, and personal injury.	If you see or smell smoke, touch <b>Cancel</b> and unplug the appliance. Once cool, remove food splatter or grease with a soft cloth and mild detergent.

<b>⚠ WARNING</b>
Failure to follow these instructions may result in injury.

# Troubleshooting

Register your product today at [www.instantappliances.com/support/register](http://www.instantappliances.com/support/register)

Scenario	Possible Reason	Possible Solution
Toaster Oven is plugged in but will not turn on	The appliance is not properly plugged in.	Ensure the power cord is plugged firmly into a 120V outlet.
	Bad power connection or no power.	Plug in another appliance to the same outlet to check the outlet for power.
		Move the Toaster Oven to another outlet to ensure there is nothing else plugged in on the same circuit or in the general area.
		Inspect power cord for damage. If damage is noticed discontinue use and contact Customer Care.
Condensation is forming on countertops	Toaster Oven does not have proper ventilation.	Ensure the Toaster Oven has at least 5 inches of space around all sides while in use.
Water is dripping onto the counter from under the door		
Oven light will not turn on	Oven is not plugged in.	Ensure that the Toaster Oven is plugged in securely and the oven is in Standby.
Black smoke is coming from the Toaster Oven	Using an oil with a low smoke point.	Press <b>Cancel</b> , then unplug the appliance and allow it to cool to room temperature. Choose a neutral oil with a high smoke point, such as Canola, Avocado, Soybean, Safflower, or Rice Bran.
	Food particles or residue on the bottom of the cooking chamber, air fry basket, oven rack, cooking pan, rotisserie spit and forks, or crumb tray.	Press <b>Cancel</b> , then unplug the oven and allow it to cool to room temperature. Remove all accessories from the cooking chamber and clean the area as well as all accessories thoroughly. Line the crumb tray of your Toaster Oven with baking paper for easier clean-up.
	Faulty circuit or heating element.	Stop using appliance immediately. Press <b>Cancel</b> , then unplug the toaster oven and allow it to cool. Contact Customer Care. <b>Note:</b> Do not attempt to repair the appliance.

For additional issues, please contact customer care:

**1-800-828-7280**

[support@instantappliances.com](mailto:support@instantappliances.com)

[www.instantappliances.com/#Chat](http://www.instantappliances.com/#Chat)



Read this manual carefully and completely, and retain for future reference. Failure to adhere to safety instructions may result in serious injury.

# Troubleshooting

Scenario		Possible Reason	Possible Solution
White Smoke is coming from Toaster Oven		Cooking foods with excess fat, such as bacon, sausage, and burgers may result in white smoke.	Avoid air frying foods with a high fat content.
			Check the cooking pan for excess oil or fat and carefully remove as needed after cooking.
		Water is vaporizing producing thick steam	Pat dry moist food ingredients before air frying. Do not add water or other liquid to the oven's cooking chamber.
		Seasoning on food has blown into element.	Be mindful when seasoning food. Spray vegetables and meats before adding seasoning so they adhere to the ingredients.
Error code appears on display	E1	Open circuit	Contact Customer Care: <b>1-800-828-7280</b> <a href="mailto:support@instantappliances.com">support@instantappliances.com</a> <a href="http://www.instantappliances.com/#Chat">www.instantappliances.com/#Chat</a>
	E2	Short circuit	
	E3	Abnormal circuit	
	E6	Abnormal function	
	E7	Abnormal function	

Any other servicing should be performed by an authorized service representative. Contact customer care:  
**1-800-828-7280**  
[support@instantappliances.com](mailto:support@instantappliances.com)  
[www.instantappliances.com/#Chat](http://www.instantappliances.com/#Chat)



# Warranty

---

## Limited Warranty

This Limited Warranty is effective for one year from the date of original consumer purchase. Proof of original purchase date and, if requested by an authorized representative of Instant Brands Inc. ("Instant Brands"), return of your appliance, is required to obtain service under this Limited Warranty. Provided that this appliance is operated and maintained in accordance with written instructions attached to or furnished with the appliance, Instant Brands will, in its sole and exclusive discretion, either: (i) repair defects in materials or workmanship; or (ii) replace the appliance. In the event that your appliance is replaced, the Limited Warranty on the replacement appliance will expire 12 months from the date of original consumer purchase.

**This Limited Warranty extends only to the original purchaser and use of the appliance in the United States of America and Canada. This warranty does not cover units that are used outside of the United States of America and Canada.**

Any modification or attempted modification to your appliance may interfere with the safe operation of the appliance and will void this Limited Warranty. This Limited Warranty does not apply in respect of any appliance or any part thereof that has been altered or modified unless such alterations or modifications were expressly authorized by an Instant Brands representative.

## Limitation and Exclusions

The liability of Instant Brands, if any, for any allegedly defective appliance or part shall in no circumstances exceed the purchase price of a comparable replacement appliance.

### **This Limited Warranty does not cover:**

1. Damage resulting from accident, alteration, misuse, abuse, neglect, unreasonable use, use contrary to the operating instructions, normal wear and tear, commercial use, improper assembly, disassembly, failure to provide reasonable and necessary maintenance, fire, flood, acts of God or repair by anyone unless directed by an Instant Brands Representative;
2. Repairs where your appliance is used for other than normal, personal use or when it is used in a manner that is contrary to published user or operator instructions; or
3. Use of unauthorized parts and accessories, or repairs to parts and systems resulting from unauthorized repairs or modifications made to this appliance.

The cost of repair or replacement under these excluded circumstances shall be borne by you.

# Warranty

---

## Disclaimer of Implied Warranties

EXCEPT AS EXPRESSLY PROVIDED HEREIN AND TO THE EXTENT PERMITTED BY LAW, INSTANT BRANDS MAKES NO WARRANTIES, CONDITIONS OR REPRESENTATIONS, EXPRESS OR IMPLIED, BY STATUTE, USAGE, CUSTOM OF TRADE OR OTHERWISE WITH RESPECT TO THE APPLIANCES OR PARTS COVERED BY THIS WARRANTY, INCLUDING BUT NOT LIMITED TO, WARRANTIES, CONDITIONS, OR REPRESENTATIONS OF WORKMANSHIP, MERCHANTABILITY, MERCHANTABILITY QUALITY, FITNESS FOR A PARTICULAR PURPOSE OR DURABILITY.

Some states or provinces do not allow for the exclusion of implied warranties of merchantability or fitness, so this limitation may not apply to you. In these states and provinces, you have only the implied warranties that are expressly required to be provided in accordance with applicable law.

## Limitation of Remedies; Exclusion of Incidental and Consequential Damage

YOUR SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE APPLIANCE REPAIR OR REPLACEMENT AS PROVIDED HEREIN. INSTANT BRANDS SHALL NOT BE LIABLE FOR INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE APPLIANCE OR DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, PERSONAL INJURY, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE OR KIND.

## Warranty Registration

Please visit [www.instantappliances.com/support/register](http://www.instantappliances.com/support/register) to register your new Instant Brands™ appliance and validate your warranty within thirty (30) days of purchase. You will be asked to provide the store name, date of purchase, model number (found on the back of your appliance) and serial number (found on the bottom of your appliance) along with your name and email address. The registration will enable us to keep you up to date with product developments, recipes and contact you in the unlikely event of a product safety notification. By registering, you acknowledge that you have read and understand the instructions for use, and warnings set forth in the accompanying instructions.

## Warranty Service

**To obtain service under this warranty, please contact our Customer Service Department by phone at 1-800-828-7280 or by email to [support@instantappliances.com](mailto:support@instantappliances.com). You can also create a support ticket online at [www.instantappliances.com/support](http://www.instantappliances.com/support). If we are unable to resolve the problem, you may be asked to send your appliance to the Service Department for quality inspection.** Instant Brands is not responsible for shipping costs related to warranty service, save and except for shipping costs associated with the return of your appliance from Canada or within the 48 contiguous states and the District of Columbia of the United States of America, as provided herein. When returning your appliance, please include your name, mailing address, email address, phone number, and proof of the original purchase date as well as a description of the problem you are encountering with the appliance.



# Instant™

Instant Brands Inc.  
11 - 300 Earl Grey Dr. Suite 383  
Ottawa, Ontario  
K2T 1C1  
Canada

Register your product today at:  
[www.instantappliances.com/support/register](http://www.instantappliances.com/support/register)

Contact Customer Care:  
1-800-828-7280  
[support@instantappliances.com](mailto:support@instantappliances.com)  
[www.instantappliances.com/#Chat](http://www.instantappliances.com/#Chat)

[www.instantappliances.com](http://www.instantappliances.com)  
[www.store.instantappliances.com](http://www.store.instantappliances.com)