

# WILLIAMS-SONOMA

## Adjustable Floor Task Lamp Assembly Instructions

### Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 60-watt maximum TYPE T tube bulb (not included) OR 13-watt compact fluorescent bulb (included in box). To avoid the risk of fire, do not exceed the recommended wattage.

### Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

### Parts Enclosed:

- (1) Shade (A)
- (1) Socket tube (B)
- (1) Inner pole (C)
- (1) Lamp pole (D)
- (1) Lamp base (E)
- (1) Base weight (F)
- (1) Adjustment break (H)
- (1) 13W CFL bulb (J)

### Hardware included:

- (1) Spring washer (a)
- (1) ½" Hex nut (b)

### To Assemble You Will Need:

- (1) Wrench (G) (Enclosed)

### Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

### To Assemble:

1. Carefully open the box removing all packing material.
2. Join parts (D), (E) & (F) together by tightening washer (a) and nut (b).
3. Tighten with Allen wrench (G) provided.
4. Attach the handle of shade (A) to socket tube (B).
5. Insert bulb (either standard incandescent or Compact Fluorescent Bulb (J) into threaded socket.
6. Remove protective plug cover from plug.
7. Plug into proper electrical outlet and test fixture.
8. Assembly is complete.

### To Adjust Base Height:

- Loosen adjustment break (H) found on lamp stem.
- Adjust lamp by pulling or pushing upper lamp pole (C) up or down to desired height.
- Tighten adjustment break (H).

### Care Instructions:

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish

