

WILLIAMS-SONOMA

Adjustable Table Lamp Assembly Instructions

Important Safety Instructions:

- For safety purposes, this lamp is equipped with a polarized plug (one blade is wider than the other). If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) 60-watt maximum TYPE T tube bulb (not included) OR 13-watt compact fluorescent bulb (included in box). To avoid the risk of fire, do not exceed the recommended wattage.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on.
- Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Parts Enclosed:


- (1) Lamp base (A)
- (1) Lamp pole (B)
- (1) Break (C)
- (1) Upper pole (D)
- (1) Socket (E)
- (1) Lamp shade (F)
- (1) Cord with plug (G)
- (1) Protective plug cover (H)
- (1) 13W CFL bulb (J)

Hardware included:

- (1) Spring washer (a)
- (1) ½" Hex nut (b)

To Assemble You Will Need:

- (1) Wrench (K) (Enclosed)

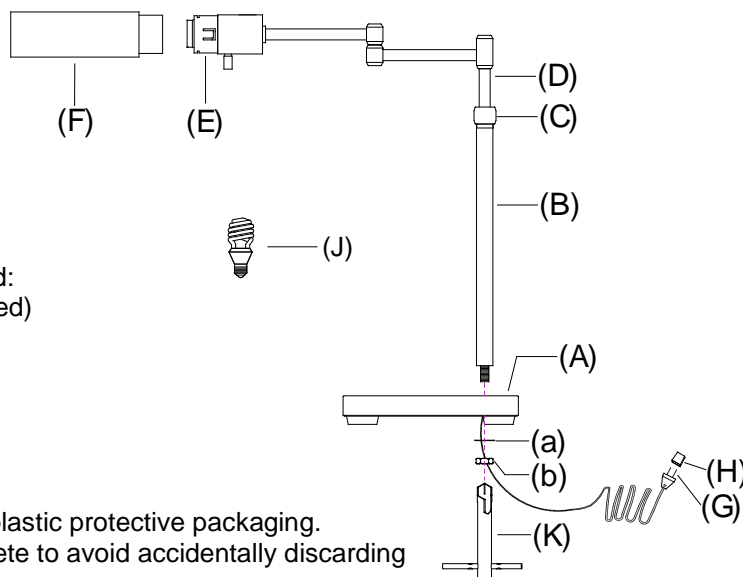

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

To Assemble:

1. Insert threaded nipple of lamp pole (B) into lamp base (A) until the threaded nipple protrudes through the underside of the lamp base (A).
2. Insert the spring washer (a), followed by the ½" hex nut (b) over the threaded pole nipple and tighten with the box wrench (K) provided.
3. Slide the metal shade (F) onto the socket sleeve (E).
4. Insert bulb, either standard incandescent or Compact Fluorescent Bulb (J) into threaded socket.
5. Remove protective plug cover (H) from plug (G).
6. Plug into proper electrical outlet and test fixture.
7. Assembly is complete.

To Adjust Base Height:

- Loosen break (C) by turning counter-clockwise.
- Adjust lamp by pulling or pushing upper pole (D) up or down to desired height.
- Turn clockwise to tighten the break (C).

Care Instructions:

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish

Thank you for your purchase

Williams Sonoma, Inc. | Customer Service 1.877.812.6235 | www.williams-sonoma.com