

Leopard Hide Table Lamp Assembly Instructions

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- This portable luminaire has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not alter the plug. Do not attempt to defeat this safety feature.
- This fixture has been rated for up to one (1) 100-watt maximum TYPE A standard incandescent light bulb (not included) or one (1) 23-watt compact fluorescent light bulb (not included) or (1) 9-watt LED light bulb(included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- Use with approved Williams-Sonoma Home Shades only, having a minimum opening diameter of 4 inches and a minimum lamp-to-shade spacing of 3-1/2 inches.
- This lamp is meant for indoor use.
- Save these instructions.

WARNING:


- To reduce the risk of fire, electrical shock or personal injury, always turn off and unplug the light fixture and allow it to cool prior to replacing the light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included:


- (A) Finial (1)
- (B) Harp Top (1)
- (C) Harp (1)
- (D) Harp Caps (2)
- (E) Socket (1)
- (F) Saddle (1)
- (G) Shade (not included)
- (H) LED Light Bulb (1)

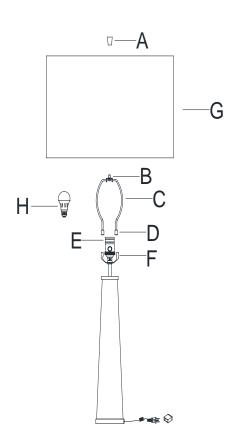


To Assemble:

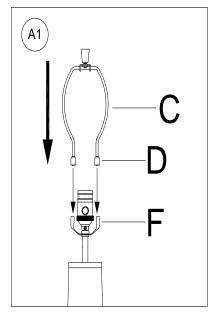


Raise the Harp Caps (D) and insert the bottom ends of Harp (C) into the Saddle (F)

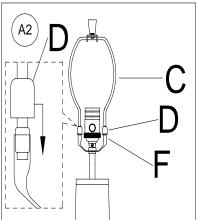

Lower the Harp Caps (D) until they cover the two-pronged Saddle (F)

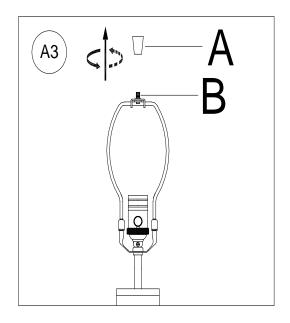

Unscrew the Finial (A) from the Harp Top (B)

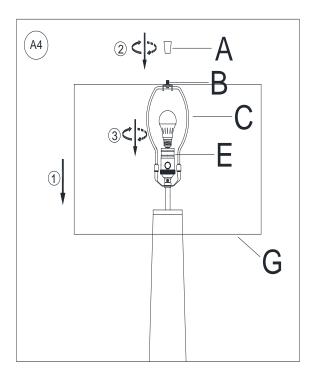

- Place the Shade (G) (not included) over the Harp (C) making sure the Harp Top (B) extends through the top ring of Shade.
- Secure the Shade (G) (not included) by turning the Finial (A) onto the Harp Top (B) clockwise until tight.
- 3. Insert the specified light bulb into the Socket (E)

Care instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish

Thank you for your purchase Stores | catalog | www.williams-sonoma.com USA 1.877.812.6235