

To grind press button in front of the grinder. Ground coffee is deposited in the receptacle. Do not grind more than directly needed.
After grinding take off receptacle by turning to the left.
After having emptied receptacle put it back in place by turning to the right.

As a result of air-circulation the last few coffee beans are being blown aloft in the hopper.
We advise to refill hopper before being completely empty.
The stainless-steel sieve of the coffee grinder produces the right grain for the filter grind method for use in our Moccamaster coffeemakers.
Please use the measuring spoon for the required amount of coffee.

Maintenance of the coffee grinder

First unplug coffee grinder.

Regularly clean the outside of the sieve and the grinding chamber with the brush supplied with the grinder.

Should a new cutter blade or sieve be needed, please contact your supplier for instructions.

Never clean coffee grinder with a very wet cloth or put it under water.



MOCCAMASTER

the coffeemaker makers.

COFFEE GRINDER KM4 “Table Top”



DIRECTIONS FOR USE


“Household type”

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against fire, electrical shock and injury to persons do not immerse coffee grinder, cord or plugs in water or other liquid.
3. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
7. Avoid contacting moving parts
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment
9. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury of persons.
10. Do not use outdoors.
11. Do not let cord hang over edge of table or counter where it can be pulled on by children, or touch hot surface
12. Do not place on or near a hot gas or electric burner, or in a heated oven.
13. To disconnect, turn any control to "off", then remove plug from wall outlet.
14. Do not use appliance for other than intended use.
15. Always place the lid and receptacle in the right position as shown in the figure on the next page.
16. Unwrap the coffee grinder with care and remove all packaging materials. Keep the packaging (plastic bags and cardboard) out of reach of children.

17. SAVE THESE INSTRUCTIONS

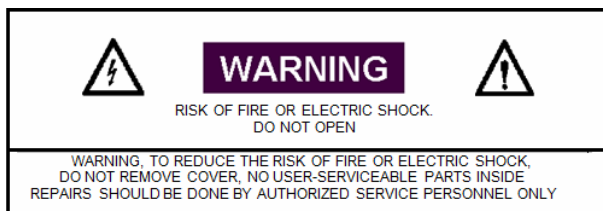

Dangerous voltage



Important operating and maintenance instructions

Technivorm-Moccamaster Coffee grinder KM4

1. hopper lid
2. hopper
3. push button switch
4. sieve
5. cutter blade
6. grinding chamber
7. receptacle
8. support



Directions for use

Installation of the coffee grinder

Place the grinder on a flat stable surface.

Find a place close to a plug-connection and leave sufficient space over grinder (about 20 cm) to enable filling of the hopper.

Operating the Coffee grinder

The coffee grinder is only meant for grinding coffee beans

Before filling the hopper of the grinder with coffee beans remove cardboard jigs from the grinder's interior.

Check hopper for presence of foreign objects before using

Never add anything else to the beans as this may cause damage to the grinder.

To prevent overheating of the motor:

Don't grind longer than 1 minute each time.

Always leave space between sieve bottom and ground coffee level.