

# WILLIAMS-SONOMA

## Crmc Twst Lmp Bse Shrt Assembly Instructions

### Important Safety Instructions:

- This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If it does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) **60-watt maximum TYPE A standard bulb (not included) or A 13W CFL lamp (included)**. To avoid the risk of fire, do not exceed the recommended wattage.

### Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- All wires are connected at the factory. When unpacking the lamp, do not pull on wires, as they could be damaged.

### CALIFORNIA PROPOSITION 65 WARNING:

- This lighting fixture contains lead, a chemical know to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

### Pre-assembly:


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

### Parts Enclosed:

- (1) Finial(A)
- (2) Lamp Shade (B) (not included)
- (1) Harp (C)
- (1) Lamp Body(D)

### To Assemble

1. Carefully remove all parts from the box and remove all plastic covering.
2. Place the lamp body assembly (D) on the floor or table.
  1. Insert harp (C) into the two-pronged saddle as shown.
  2. Place lamp shade (B) (not included) over the assembled harp (C)
  3. Attach finial (A) to harp nipple and turn clockwise to secure
3. Insert the bulbs **60-watt maximum TYPE A standard bulb (not included) or A 13W CFL lamp (included)** into the socket.
4. Remove red protective plug cover from cord with plug
5. Plug into proper electrical outlet and test fixture.
6. Assembly is complete.

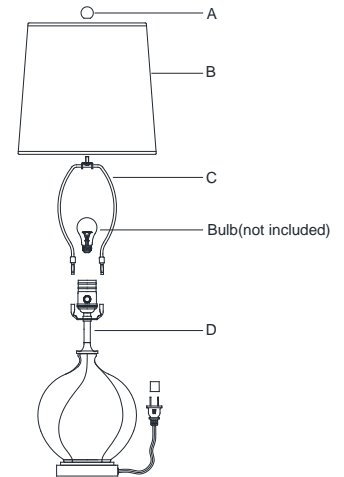

### Care Instructions:

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish

Thank you for your purchase

Williams Sonoma Home | Customer Service 1.888.922-4105 | [www.williams-sonoma.com](http://www.williams-sonoma.com)