

WILLIAMS-SONOMA

BANKS TABLE LAMP

IMPORTANT SAFETY INSTRUCTIONS:

- This lamp is equipped with a 2 Prong plug. If the plug does not fit securely into your outlet, do not force it – contact a professional electrician. Use the plug with an extension cord only if it can be fully inserted into the cord's socket. Never alter the plug in any way.
- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (1) **40-watt maximum TYPE A Bulb** (not included). To avoid the risk of fire, do not exceed the recommended wattage.
- Install the bulb before Plugging-in and switching on the power.
- This lamp is an electrical device and not a toy. Please ensure to keep children away from it at all times.
- Save these instructions.

Warning:

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.

Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts List:

- TABLE LAMP

Instructions:

1. Unpack Table Lamp from the box.
2. Insert bulb Type A Max 40W (not included) into socket.
3. Plug into proper electrical outlet and test fixture.
4. Assembly is complete and lamp is ready for use.



Care Instructions:

- Wipe with soft dry cloth only.
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish.

thank you for your purchase
stores | catalog | www.william-sonoma.com