

Emmet Pendant Assembly Instructions

CAUTION:

• BEFORE INSTALLING FIXTURE, MAKE SURE THE POWER TO THE CIRCUIT IS TURNED OFF AT THE MAIN FUSE BOX / CIRCUIT BREAKER UTILITY BOX.

Important Safety Instructions:

- These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning the assembly and installation of this lighting fixture.
- We strongly recommend that a professional electrician install all direct wire fixtures.
- THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODES BY A
 PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS
 INVOLVED.
- The lighting fixture is meant for indoor use. It must be connected only to 3-wire, single-phase electrical supply systems (provided with Ground wire or equivalent protection system).
- For your safety, it is strongly recommended that two people install the lighting fixture.
- This fixture has been rated for up to (1) 150-watt maximum TYPE A standard bulb (not included) or one (1) 35-watt compact fluorescent light bulb (not included). To avoid the risk of fire, do not exceed the recommended lamp wattage.
- The lighting fixture is meant for indoor use, DRY LOCATIONS ONLY.
- · Save these instructions.

WARNING:

- To reduce the risk of fire, electrical shock or personal injury, always turn off light fixture and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- · Keep flammable materials away from lit bulb.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects
 and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light
 fixture.

Pre-assembly:

- · Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included:

- (3) Plastic wire nut connectors (A)
- (1) Mounting plate (B)
- (2) J-box mounting screws (C)
- (1) Canopy (D)
- (3) Canopy screws (E)
- (1) Set screw (F)

TOOLS REQUIRED (not included):

- Ladder
- Phillips Head & Flat Blade Screwdrivers
- Wire Cutter/Stripper
- Pliers
- Electrical Tape

To adjust the suspension length of the fixture:

- 1. Note: The adjustment or shortening of the lighting fixture's suspension length is only needed if the factory set chain length is not appropriate for your installation. We recommend that you adjust the chain to the proper desired length before cutting the electrical cord.
- 2. Determine the desired hanging length of pendant. The pendant hangs by it's own power cord.

- 3. Adjust cord length by using screwdriver to loosen and tighten set screw (F).
- 4. If needed, (depending upon final fixture hanging position from the ceiling), cut off the extra power cord length on the 3-wire cord. Make sure when cutting the power cord to cut it so that it is at least 6 inches (152.4 mm) long within the outlet junction box (J-box).
- 5. Prepare the cut power cord wire using the following steps.
 - Use wire strippers to remove approximately 2 inches of the outer black plastic wire covering.
 - Use wire strippers to prepare the ends of the three internal wires (black, white, green) so that there is about 1/2 inch of exposed wire for the plastic wire nut connectors (T).

Assembly & Installation Instructions:

- 1. SHUT OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER!
- 2. Carefully unpack all fixture parts and hardware and lay them out on a clear workspace.

3. Remove mounting plate screws (E) from the canopy (D). Do not remove the mounting plate (B). Ensure that the power cord is running through the center hole of the mounting plate (B).

- 4. With the help of another person to support the weight of the pendant, attach the GROUND WIRE from the fixture to the GROUND JUNCTION BOX WIRE from the ceiling outlet junction box (J-box) (usually green insulation or bare wire). Fasten each together with a plastic wire nut connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. If your outlet junction box DOES NOT have a GROUND WIRE, be sure to insert the green ground screw into the mounting plate (B), marked as "GND", facing downward and wrap the fixture's bare ground wire around the green ground screw. Tighten screw to clamp ground wire between ground screw head and mounting plate (B). IT IS IMPERATIVE THAT THE JUNCTION BOX IN YOUR HOME BE PROPERLY GROUNDED!
- Connect the NEUTRAL FIXTURE WIRE to the NEUTRAL JUNCTION BOX WIRE (usually white insulation). Fasten each together with a plastic wire nut connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed.
- Connect the HOT FIXTURE WIRE to the HOT JUNCTION BOX WIRE (usually black insulation). Fasten each together with a plastic wire nut connector (A) by twisting the connector in a clockwise direction and wrap the connection with electrical tape. Be sure that no wire strands are exposed. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 7. Check the wiring connections and if all looks good, gently tuck the wire connections neatly into the ceiling junction box.
- 8. Attach the mounting plate (B) to the ceiling outlet box using the 2 J-box mounting screws (C). Align the slots of the mounting plate (B) with the two threaded holes located on the J-Box. Use a screwdriver to tighten each screw until the mounting plate (B) is firmly secured to the J-Box.
- 9. Attach canopy (D) to mounting plate (B), and secure with canopy screws (E).
- 10. Insert one (1) 150-watt maximum TYPE A standard bulb (not included) or one (1) 35-watt compact fluorescent light bulb (not included).
- 11. Restore power and enjoy your new pendant.

Care Instructions:

- Wipe clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners as they may cause damage to the fixture's finish.

