

CONTENTS

02	Important Safeguards	18	How to Disassemble and Clean
04	Safety Warning	20	How to Clean Silicone Parts
06	Parts	21	OPTIONAL How to Use the Cleaning Tool
08	Assembly	22	OPTIONAL How to Use the Blank Strainer
10	Operation	24	OPTIONAL How to Use the Smoothie Strainer
12	Tips on Operation	26	Troubleshooting Q&A
13	Tips on Ingredients	28	Specifications
14	Ingredient Preparation		

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. To protect against risk of electrical shock do not put motor or base of unit in water or other liquid.
3. Always supervise children while operating appliance.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
7. The use of attachments not recommended or sold by the manufacturer's may cause fire, electric shock, or injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter.
10. Always make sure juicer cover is clamped securely in place before motor is turned on. Do not unfasten clamps while juicer is in operation.
11. Turn switch to OFF position after using juicer. Make sure the motor stops completely before disassembling.

12. Do not put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in opening, use food pusher or another piece of fruit or vegetable to push it down. When this method is not possible turn the motor off and disassemble juicer to remove the remaining food.
13. Do not use the appliance if the rotating sieve is damaged.
14. Make sure pulp container is in place before operating juicer.
15. Do not alter appliance.
16. Do not use the appliance for anything other than it's intended purpose as described in the manual.
17. The appliance should be used for limited period of time.
18. This appliance can be used by children age from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they been given supervision of instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
19. This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision of instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

- **This appliance is for household use only. Please carefully follow the instructions in the manual.**
(The appliance cannot be covered under the manufacturer's warranty if the product is abnormally or commercially used.)
- **Save the instruction manual for future reference**
- **If the appliance is given as a gift, include the manual with the product.**
- **Instruction included here can also be found at.**
www.kuvings.com