

# PRECISION<sup>™</sup> COOKER

---

## Quick Start Guide

**A**NOVA





# Say Hello to Your Precision™ Cooker

- A Current Temperature
- B WI-FI®
- C Set Temperature
- D Start/Stop
- E Numeric Scroll Wheel
- F Removable Skirt
- G Adjustable Ring Clamp
- H Water Pump Cap





# Setting up Your Precision™ Cooker

---

- 1 Attach the clamp to the side of your pot by rotating the lower knob.
- 2 Slide your Precision™ Cooker into the clamp ring.
- 3 Secure your Precision™ Cooker in place by twisting the upper knob.
- 4 Plug your Precision™ Cooker into a nearby electrical outlet.

You're ready to start cooking! For more information and the complete user manual, please go to [support.anovaculinary.com](https://support.anovaculinary.com)

# Setting up WI-FI® on Your Precision™ Cooker

---

With your Precision™ Cooker WI-FI®, you can schedule a cook from your phone and come home to the best meal ever. Your Precision Cooker WI-FI® is smart enough to remember your WI-FI® network every time you cook, so once you've set it up, it's good to go. Here's how to do the one-time initial setup:

- 1 Download the Anova Culinary WI-FI® app.
- 2 Make sure your device's WI-FI® and Bluetooth® are turned on.
- 3 Make sure your phone is connected to your preferred WI-FI® network.
- 4 Open the Anova Culinary WI-FI® app on your phone.
- 5 Follow the steps listed on your screen to complete setup.

You can now cook from your phone anywhere, anytime. For the most current information on your Precision™ Cooker WI-FI® capabilities and a list of compatible devices, go to [support.anovaculinary.com](https://support.anovaculinary.com)



## More Resources

---

For tips and tricks check out our community page at [community.anovaculinary.com](https://community.anovaculinary.com)

For recipe ideas, visit [recipes.anovaculinary.com](https://recipes.anovaculinary.com)

For a complete user manual, FAQs, help with troubleshooting, or contacting support, please visit [support.anovaculinary.com](https://support.anovaculinary.com)

**Bon appétit!**



## IMPORTANT SAFETY INFORMATION

Please read this safety information before operating your Anova Precision™ Cooker. You'll find additional safety tips in the complete user manual, which can be found at [support.anovaculinary.com](http://support.anovaculinary.com)

- The Precision™ Cooker is hot when in use. Use caution to avoid burns and always allow the system to cool before emptying water from the cooking container/pot.
- To avoid risk of fire or electric shock, never immerse your Precision™ Cooker past the top MAX etch mark of its stainless steel skirt.
- When using your Precision™ Cooker, place your pot on a potholder or on a stove top to protect your counter top.
- Never use extension cords or a damaged cord or plug with your Precision™ Cooker. Use properly grounded electrical outlets and unplug the cooker when not in use.
- Never place your cooking container/pot on a marble or Corian® counter top as the heat generated by your Precision™ Cooker may damage those surfaces.
- Never place the cooking container/pot in which your Precision™ Cooker is immersed on a stove or in a heated oven where the power cord may be damaged.
- Never disassemble your Precision™ Cooker for cleaning beyond the steps explained in the complete user manual found at [support.anovaculinary.com](http://support.anovaculinary.com)
- Never use deionized water (DI water) with your Precision™ Cooker as it may damage the cooker's surfaces.
- Always supervise children when they are in the area where your Precision™ Cooker is in use.
- Always put food in a sealed bag/jar before submerging it in the water of the pot/container in which your Precision™ Cooker is immersed.
- Consuming raw or undercooked meats, poultry, seafood, shellfish or eggs may increase risk of food borne illness.

## ANOVA LIMITED WARRANTY

The following Limited Warranty and Limitation of Remedies and Damages apply to all Anova products. Purchase and use of the Anova Precision™ Cooker ("product") constitutes acceptance of this Limited Warranty and Limitation of Remedies and Damages. The remedies provided under this Limited Warranty are exclusive and in lieu of all other remedies. **Read carefully—the terms of this Limited Warranty affect your legal rights.**

## LIMITED WARRANTY

Anova warrants to the Buyer that the product is free from defects in material and workmanship for a period of one (1) year from the date the product is purchased.

**RETURNS** For return requests, please access [anovaculinary.com/pages/returns/](http://anovaculinary.com/pages/returns/) and follow the instructions.

**SHIPPING** Anova will send to Buyer a prepaid shipping label that will cover shipping and handling charges for the product to be returned to Anova or its authorized representative. After repair or replacement, Anova will be responsible for shipping and handling for the return of the product to Buyer.

**CLAIM DEADLINE** Buyer must return the product and record of purchase to Anova or one of Anova's authorized representatives within 10 business days of the expiration of this Limited Warranty in order to make a claim under this Limited Warranty.

**EXCLUSIONS** This Limited Warranty does not cover damage to the product resulting from accident, misuse, improper installation or operation, failure to provide proper maintenance, unreasonable use or abuse of the product, or failure to follow written installation or operating instructions. Water damage generally and damage arising from the use of deionized water is not covered. Use of the product in a commercial environment voids this Limited Warranty. Service, repair or alteration of the product by Buyer or any person or entity not authorized by Anova voids this Limited Warranty.

### **LIMITATION OF REMEDIES AND DAMAGES**

ANOVA'S LIMITED WARRANTY IS BUYER'S EXCLUSIVE REMEDY WITH REGARD TO THE PRODUCT. NEITHER THIS LIMITED WARRANTY, NOR ANY OTHER CONTENT OR STATEMENT ON ANOVACULINARY.COM, NOR ANY OTHER STATEMENT BY OR ON BEHALF OF ANOVA, SHOULD BE CONSTRUED AS AN EXPRESS OR IMPLIED WARRANTY FOR ANY ANOVA PRODUCT. ANOVA PRODUCTS ARE SUBJECT TO THE SPECIFIC, LIMITED WARRANTY INCLUDED WITH EACH PRODUCT, WHICH IS INCLUDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR PARTICULAR PURPOSE.

ANOVA SHALL NOT BE LIABLE TO BUYER, OR TO ANYONE CLAIMING UNDER BUYER, FOR ANY OBLIGATIONS OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, OBLIGATIONS OR LIABILITIES ARISING OUT OF BREACH OF CONTRACT, BREACH OF WARRANTY, STATUTORY CLAIMS, NEGLIGENCE OR OTHER TORT OR ANY THEORY OF STRICT LIABILITY, WITH RESPECT TO THE ANOVA PRODUCT OR ANOVA'S ACTS OR OMISSIONS OR OTHERWISE. BUYER AGREES THAT IN NO EVENT SHALL ANOVA BE LIABLE FOR INCIDENTAL, COMPENSATORY, PUNITIVE, CONSEQUENTIAL, INDIRECT, SPECIAL OR OTHER DAMAGES.

**Anova Applied Electronics, Inc.**  
**San Francisco, CA USA**  
**Phone: 855.421.8282**  
**Email: [support@anovaculinary.com](mailto:support@anovaculinary.com)**

Precision™ is a trademark of Anova Applied Electronics, Inc.  
2014 Anova Applied Electronics, Inc. San Francisco, CA USA.  
All Rights Reserved.

This Precision™ Cooker WI-FI contains FCC ID: AZY-HF-LPB100

Bluetooth® is a registered trademark owned by Bluetooth SIG, Inc.  
All other trademarks are properties of their respective owners.