


CHEFMAN®

LONG ELECTRIC WARMING TRAY USER GUIDE

- Safety Instructions
- Features
- Operating Instructions
- Tips and Troubleshooting
- Cleaning and Maintenance
- Terms and Conditions
- Warranty Registration

RJ22-BLACK-L

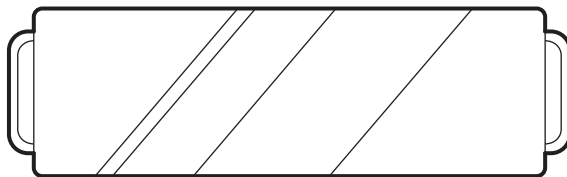

COOKING FORWARD™

Welcome!

Whether this is your first Chefman appliance purchase or you're already part of our family, we're happy to be cooking with you. With your new sleek, portable, space-saving Long Electric Warming Tray, you can keep food warm in style at your next party or event. It's also handy for keeping dishes hot when stove space is at a premium, something especially helpful at holiday time.

We know you're excited to try your Long Electric Warming Tray, but please take a minute to read our directions, safety instructions, and warranty information.

For more information about this product and all our other fabulous appliances, visit chefman.com.

From our kitchen to yours,

The Chefman® Team



READ ALL INSTRUCTIONS BEFORE USE

For your safety and continued enjoyment of this product, always read the instruction manual before using.

CONTENTS

- 1** Safety Instructions
- 4** Features
- 5** Operating Instructions
- 6** Tips and Troubleshooting
- 6** Cleaning and Maintenance
- 7** Terms and Conditions
- 8** Chefman® Warranty Registration

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock do not immerse cord, plugs, or unit body in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Chefman may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

SAFETY INSTRUCTIONS

IMPORTANT SAFEGUARDS

12. Plug cord into wall outlet before turning on. To disconnect, turn any control to “off,” then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Never use a broken cooktop. If cooktop should break, cleaning solutions and spillovers may penetrate the broken surface and create a risk of electric shock.
15. Use caution when cleaning cooktop. If a wet sponge or cloth is used to wipe spills on a hot surface, be careful to avoid steam and the risk of burns.
CAUTION: Some cleaners can produce noxious fumes if applied directly to a hot surface.
16. **CAUTION:** DO NOT cover surface or side vents. Covering this unit can cause fire hazard. Covering this unit with aluminum foil can cause glass to shatter

SAVE THESE INSTRUCTIONS

SAFETY PRECAUTIONS

IMPORTANT SAFEGUARDS

SHORT CORD INSTRUCTIONS

A short power supply cord is provided to reduce the hazards of entanglement or tripping over a longer cord. Longer detachable power supply cords or extension cords are available and may be used if care is exercised in their use. If a longer detachable power supply extension cord is used:

1. The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance.
2. The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

POWER CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert the plug, grasp it firmly and guide it into the outlet.
3. To disconnect appliance, grasp the plug and remove it from the outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced, and the power cord replaced. Please contact Chefman® Customer Support for assistance.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE OR IF THE APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

*California Proposition 65:
(Applicable for California Residents only)*




WARNING:
Cancer and Reproductive Harm -
www.P65Warnings.ca.gov.



**Do not place the appliance
on a stovetop or any other
hot surface.**

FEATURES

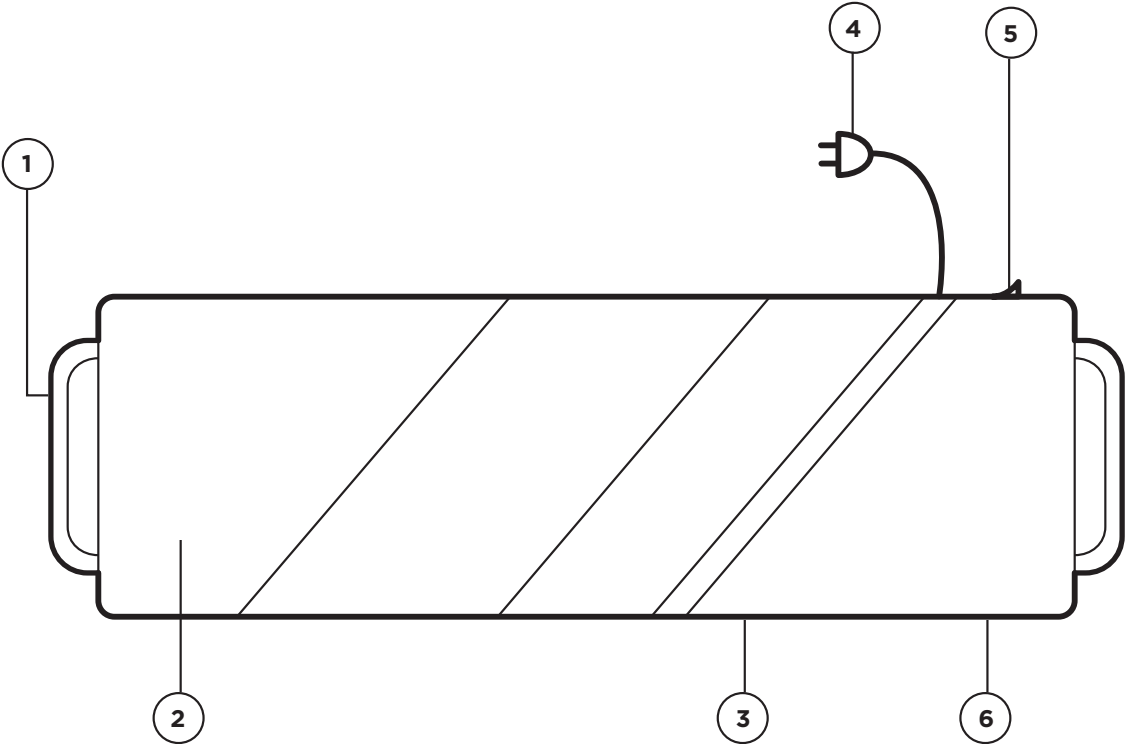

- 1. Convenient cool-touch handles
- 2. Tempered glass heating surface
- 3. Brushed stainless-steel housing (Front of product, not shown)

- 4. Power cord
- 5. Power switch with indicator light
- 6. Non-slip feet (Underneath product, not shown)

OPERATING INSTRUCTIONS

BEFORE FIRST USE

1. Remove all packaging materials, such as plastic bags and foam inserts.
2. Read and remove all stickers on unit.
3. Wipe surface with damp towel to remove any packaging dust.

WARMING INSTRUCTIONS

1. Put tray on hard, flat surface near an outlet; surface does not need to be heatproof.
2. Turn tray on by pressing the switch in back. When tray is on, the switch will illuminate.
3. Let tray heat for at least 5 minutes before using.
4. Place hot or warm food, in ovenproof dishes or pans, on the tray. Do not place plastic on surface.

CAUTION: The surface of the tray, especially in the center, heats up to well over 200°F. Do not touch surface with bare hands. Use stay-cool handles to move tray, if necessary, and use potholders to handle hot dishes and pans.

5. The warming tray can be used for up to 72 hours. After use, switch the tray off and unplug it from outlet. Note that surface will stay hot for a while after unit is shut off.

TIPS AND TROUBLESHOOTING

The warming tray works best when used to keep already hot foods warm and is not meant for cooking or defrosting food. Hot dishes can go right from the oven to the warming tray.

To retain both heat and moisture, consider covering any foods kept on the tray.

Serve desserts that taste best warm, such as bread pudding and fruit crumbles and crisps, right from the tray.

Use the tray for keeping hot drinks like mulled wine warm during serving.

Be sure to follow proper food-safety guidelines for keeping and serving warm foods.

Ceramic, stoneware, and cast-iron cookware may have unfinished, rough bases that can scratch surface. Avoid using these on tray or use with care.

Check that bottoms of dishes and pans are clean before placing on tray; if dirty, they can leave marks on the glass.

CLEANING AND MAINTENANCE

The glass surface of the warming tray is easy to keep clean.

1. Before cleaning, turn off unit, unplug from power outlet, and let cool completely.
2. Clean the warming tray with a mild detergent and a soft damp cloth. Do not use abrasive cleansers or metal pads, which can scratch. Do not allow water to spill or seep into frame.
3. Do not immerse warming tray or plug in water or other liquid.

TERMS & CONDITIONS

Limited Warranty

Our products are backed by a limited 1-year warranty. To register, follow the instructions on the Chefman® Warranty Registration page in this User Guide.

We offer a limited 1-year warranty from the date of purchase. This warranty is void without proof of purchase within the USA, Canada or Mexico. Service centers and retail stores do not have the right to alter or change the Terms & Conditions of this warranty.

WHAT THE WARRANTY COVERS

- **Manufacturer Defects**

Chefman® products are warranted against defects in material and workmanship for a period of 1 year from the date of purchase, when used in accordance with the Chefman® User Guide.

- **Qualified Replacements**

If your product does not work as it should, we will send you a new one. If the product is no longer available, we will replace it with an identical product or one that is comparable.

THIS WARRANTY DOES NOT COVER

- **Misuse** - Damage that occurs from neglectful or improper use of products; damage that occurs as a result of usage with incompatible voltage. See Safety Instructions for information on proper use.
- **Poor Maintenance** - General lack of proper care. See Cleaning & Maintenance Instructions for information on proper maintenance.
- **Commercial Use** - Damage that occurs from commercial use.
- **Altered Products** - Damage that occurs from alterations or modifications by any entity other than Chefman®; removal of rating label.
- **Catastrophic Events** - Damage that occurs from fire, floods or natural disasters.
- **Loss of Interest** - Claims of loss of interest or enjoyment.

CHEFMAN® WARRANTY REGISTRATION

Register your product to extend your warranty for 3 months.

What do I need to register my product?



- Contact Information
- Model Number
- Proof of Purchase
(i.e. online confirmation, receipt, gift receipt)
- Date code

How do I register my product?

We offer 2 convenient ways to access the Chefman® registration form:

1. Visit chefman.com/register.
2. Scan the QR code below to access the form:



Need more information?

Please visit us at Chefman.com.

OTHER LIMITATIONS: ALL WARRANTIES OF ANY KIND WHATSOEVER, EXPRESS, IMPLIED AND STATUTORY, ARE HEREBY DISCLAIMED. ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED; PROVIDED THAT IF ANY IMPLIED WARRANTIES OF ANY KIND IS REQUIRED BY ANY JURISDICTION, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, THE DURATION OF SUCH IMPLIED WARRANTY IS LIMITED TO ONE (1) YEAR. THIS WARRANTY DOES NOT COVER, AND CHEFMAN® SHALL NOT BE LIABLE, FOR INCIDENTAL, INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, DAMAGE TO, OR LOSS OF USE OF THE PRODUCT, OR LOST SALES OR PROFITS OR DELAY OR FAILURE TO PERFORM THIS WARRANTY OBLIGATION. THE REMEDIES PROVIDED HEREIN ARE THE EXCLUSIVE REMEDIES UNDER THIS WARRANTY, WHETHER BASED ON CONTRACT, TORT OR OTHERWISE.

This Warranty gives you specific legal rights, and you may also have other rights that vary from state to state or Province to Province. Some states or Provinces do not allow the exclusions or limitations set forth in this Warranty, so the above limitations or exclusions may not apply to you depending on the jurisdiction of purchase.

Chefman® is a registered trademark of RJ BRANDS, LLC. ETL® is a registered certification mark of Intertek Testing Services NA, Inc.

CHEFMAN®



CHEFMAN.COM | @MYCHEFMAN

©CHEFMAN 2020