



*recipes
inside!*




#DPM200

POCKET SANDWICH MAKER

Instruction Manual | Recipe Guide



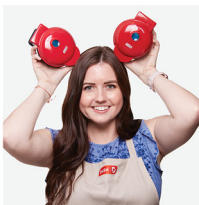

POCKET **SANDWICH MAKER**

Important Safeguards.....	4-9
Parts & Features.....	10
Using Your Pocket Sandwich Maker	12-15
Cleaning & Maintenance.....	16
Troubleshooting	18
Tips & Tricks	19
Recipe Guide	20-23
Notes.....	24-25
Customer Support	26
Warranty	27

 *the dash team!*

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

When using electrical appliances, basic safety precautions should be followed, including:

- FOR HOUSEHOLD USE ONLY.
- Read all instructions.
- Remove all bags and packaging from appliance before use.
- Never leave appliance unattended when in use.
- Make sure the appliance is cleaned thoroughly before using.
- Do not use appliance for applications other than intended use. Do not use outdoors.
- Allow the Dash Pocket Sandwich Maker to cool completely before moving, cleaning, or storing.
- Close supervision is necessary when any appliance is used by or near children.
- DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner.
- Return appliance to the nearest authorized service facility for examination, repair, or adjustment.

- Do not use metal utensils on the Cooking Surface as this will damage the nonstick Cooking Surface.
- For maintenance other than cleaning, please contact StoreBound directly at 1-800-898-6970 from 7AM - 7PM PT Monday-Friday or by email at support@bydash.com.
- WARNING: Hot surfaces! Never touch the Cooking Surface or Cover while appliance is in use. Always lift and lower the Cover by the Handle.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- To prevent the risk of fire, electric shock, or personal injury, do not put cord, plug, or appliance in or near water or other liquids. The Pocket Sandwich Maker is NOT dishwasher safe.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Pocket Sandwich Maker and its nonstick Cooking Surface.
- Do not place appliance on or near a hot gas burner, hot electric burner, or in a heated oven.
- DO NOT use the Pocket Sandwich Maker near water or other liquids, with wet hands, or while standing on a wet surface.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not let the cord touch hot surfaces.
- Do not let cord hang over the edge of a table or counter, or touch hot surface.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they are provided with supervision and instruction concerning use of the appliance by a person responsible for their safety.

- Always be sure to unplug the appliance from outlet prior to moving, cleaning, storage, and when not in use.
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- Improper use of the Pocket Sandwich Maker can result in property damage or even in personal injury.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit a polarized outlet only one way. If the plug does not completely fit in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop of table where it can be pulled on by children or tripped over unintentionally.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION AND CARE MANUAL.

MESURES DE SÉCURITÉ IMPORTANTES: VEUILLER LIRE ET CONSERVER CE MANUEL D'UTILISATION

Lors de l'utilisation d'appareils électriques, des précautions élémentaires de sécurité doivent être respectées, notamment:

- POUR USAGE DOMESTIQUE SEULEMENT.
- Lisez toutes les instructions.
- Retirez tous les sacs et emballages de l'appareil avant utilisation.
- Ne laissez jamais l'appareil sans surveillance lorsqu'il est utilisé.
- Assurez-vous que l'appareil est bien nettoyé avant de l'utiliser.
- N'utilisez pas l'appareil pour d'autres applications que celles prévues. Ne pas utiliser à l'extérieur.
- Laissez le Dash Pocket Sandwich Maker refroidir complètement avant de le déplacer, de le nettoyer ou de le ranger.
- Une surveillance étroite est nécessaire lorsqu'un appareil est utilisé par ou près des enfants.
- NE PAS soulever le couvercle de manière à ce que votre bras soit au-dessus de la surface de cuisson car il est chaud et pourrait causer des blessures. Soulevez du côté.
- Ne faites pas fonctionner cet appareil avec un cordon endommagé ou une fiche endommagée après un dysfonctionnement, une chute ou un endommagement de l'appareil.
- Retournez l'appareil à l'établissement de service autorisé le plus proche pour qu'il soit examiné, réparé ou réglé.
- N'utilisez pas d'ustensiles en métal sur la surface de cuisson car cela

MESURES DE SÉCURITÉ IMPORTANTES

- endommagerait la surface de cuisson antiadhésive.
- Pour une maintenance autre que le nettoyage, veuillez contacter StoreBound directement au 1-800-898-6970 de 7h à 19h du lundi au vendredi ou par courriel à support@bydash.com.
 - **AVERTISSEMENT:** Surfaces chaudes! Ne touchez jamais la surface de cuisson ou le couvercle lorsque l'appareil est en cours d'utilisation. Toujours soulever et abaisser le couvercle par la poignée.
 - Des précautions extrêmes doivent être prises lors du déplacement d'un appareil contenant de l'huile chaude ou d'autres liquides chauds.
 - Pour éviter tout risque d'incendie, d'électrocution ou de blessure, ne placez pas le cordon, la fiche ou l'appareil dans ou près de l'eau ou d'autres liquides. Le Pocket Sandwich Maker n'est PAS compatible avec le lave-vaisselle.
 - N'utilisez jamais de produits nettoyants abrasifs pour nettoyer votre appareil car cela pourrait endommager le Pocket Sandwich Maker et sa surface de cuisson antiadhésive.
 - Ne placez pas l'appareil sur ou près d'un brûleur à gaz chaud, d'un brûleur électrique chaud ou dans un four chauffé.
 - **N'UTILISEZ PAS** le Pocket Sandwich Maker à proximité d'eau ou d'autres liquides, avec les mains mouillées ou lorsque vous vous tenez sur une surface humide.
 - Évitez d'utiliser des accessoires qui ne sont pas recommandés par le fabricant de l'appareil, car cela pourrait provoquer un incendie, une électrocution ou des blessures.
 - Ne laissez pas le cordon toucher des surfaces chaudes.
 - Ne laissez pas le cordon pendre sur le bord d'une table ou d'un comptoir, ou touchez une surface chaude.
 - Cet appareil n'est pas destiné à être utilisé par des personnes (y compris les enfants) ayant des capacités physiques, sensorielles ou mentales réduites ou un manque

MESURES DE SÉCURITÉ IMPORTANTES

- d'expérience et de connaissances à moins d'être supervisé et instruit par une personne responsable de leur sécurité.
- Assurez-vous toujours de débrancher l'appareil de la prise de courant avant de le déplacer, de le nettoyer, de le ranger et lorsqu'il n'est pas utilisé.
 - StoreBound décline toute responsabilité pour les dommages causés par une mauvaise utilisation de l'appareil.
 - Une mauvaise utilisation du Pocket Sandwich Maker peut entraîner des dommages matériels ou même des blessures.
 - Cet appareil a une fiche polarisée (une lame est plus large que l'autre). Pour réduire le risque d'électrocution, cette fiche ne peut être branchée que d'une seule façon sur une prise polarisée. Si la fiche ne rentre pas complètement dans la prise, inversez la prise. Si cela ne vous convient toujours pas, contactez un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit.
 - Un cordon d'alimentation court doit être fourni pour réduire le risque de s'emmêler ou de trébucher sur un cordon plus long. Une rallonge peut être utilisée si son utilisation est minutieuse. Si une rallonge est utilisée, la puissance électrique indiquée sur la rallonge doit être au moins égale à la puissance nominale de l'appareil. La rallonge doit être placée de manière à ne pas se déposer sur le comptoir de la table où elle pourrait être tirée par des enfants ou trébucher involontairement.

**MESURES DE SÉCURITÉ IMPORTANTES:
VEUILLEZ LIRE ET CONSERVER CE
MANUEL D'UTILISATION**

PARTS & FEATURES



USING YOUR POCKET SANDWICH MAKER

Before first use, remove all packaging material and thoroughly clean your Pocket Sandwich Maker.



Never touch the Cooking Surface or Cover while appliance is in use.



DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury.



Always lift and lower the Cover by the Cover Handle. Lift from the side.

USING YOUR POCKET SANDWICH MAKER



- 1 Place your Dash Pocket Sandwich Maker on a stable and dry surface. Plug the cord into a power outlet. The blue Indicator Light will illuminate (**photo A**), signaling that the Pocket Sandwich Maker is heating up.



- 2 Once the Cooking Surface reaches its optimal temperature, the Indicator Light will turn off. Carefully lift the Cover by the Handle (**photo B**).

USING YOUR POCKET SANDWICH MAKER



- 3** Spray both Cooking Surfaces with a little cooking spray or basting brush with butter (**photo C**).
- 4** Place your ingredients on the Cooking Surface (**photo D**). Close Cover and Latch.

USING YOUR POCKET SANDWICH MAKER



- 5** After a few minutes, or until your pockets are crisped and golden, lift the Cover (**photo E**). Remove your pockets from the Cooking Surface with a heat-resistant nylon or silicone cooking utensil (**photo F**).
- Note:** DO NOT use metal utensils to remove or place food on the Cooking Surface as this will damage the nonstick Cooking Surface.
- 6** Once finished, unplug the appliance and allow to cool before moving or cleaning. Wrap the cord around the base and store.
- Caution:** DO NOT lift Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.

CLEANING & MAINTENANCE

Always allow the appliance to cool completely before moving, cleaning, or storing. Do not submerge appliance in water or any other liquids. Never use abrasive cleaning agents to clean your Pocket Sandwich Maker as this may damage the appliance.

In order to keep your Pocket Sandwich Maker in pristine working order, thoroughly clean the appliance after each use. This will prevent the build-up of food or oil.

- Unplug Pocket Sandwich Maker and allow it to cool completely.
- Using a damp, soapy cloth, wipe down the Cooking Surface, its edges and the Cover. Thoroughly rinse the cloth and wipe again.
- Thoroughly dry the Pocket Sandwich Maker before storing.
- If there is food burned onto the Cooking Surface, pour on a little cooking oil and let sit for 5 to 10 minutes. Scrub the Surface with a sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Thoroughly rinse the cloth and wipe again. If any food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.
- Never use abrasive cleaning agents to clean your appliance as this may damage the Pocket Sandwich Maker and its nonstick Cooking Surface.



The blue Indicator Light on the Pocket Sandwich Maker keeps shutting off.

This is normal. During the cooking process, the heating element will automatically turn on and off to regulate the temperature and ensure that the Cooking Surface does not get too hot or cold. When this occurs, the Indicator Light turns on and off.

How do I know when the Pocket Sandwich Maker is heated and ready to use?

When the Pocket Sandwich Maker reaches the optimal temperature, the blue Indicator Light will turn off and that means you're ready to get cooking!

There is no on/off button.

How do I turn the Pocket Sandwich Maker off and on? To turn on, simply plug in the power cord. When you're done cooking, turn off the Pocket Sandwich Maker by unplugging it.

When using my Pocket Sandwich Maker, the Cover gets hot.

Always lift and lower the Cover by the Cover Handle. To prevent personal injury, DO NOT lift the Cover so that your arm is over the Cooking Surface as it is hot and may cause injury. Lift from the side.

After using my Pocket Sandwich Maker a few times, food is starting to stick to the surface. What is happening?

There is probably a build-up of burnt food residue on the Cooking Surface. This is normal, especially when cooking foods with sugar. Allow the appliance to cool fully, pour on a little cooking oil and let sit for 5-10 minutes. Scrub the Cooking Surface with a non-abrasive sponge or soft bristled brush to dislodge food. Use a damp, soapy cloth to wipe down the Cooking Surface. Rinse the cloth and wipe again. If food remains, pour on cooking oil and let sit for a few hours, then scrub and wipe clean.

My Pocket Sandwich Maker is making a hissing sound while it's cooking. Is this normal?

If you overfill the Pocket Sandwich Maker, it will make a noise as extra steam is released.

The Indicator Light will not turn on and the Cooking Surface is failing to heat.

Ensure that the power cord is plugged into the power outlet.

Check to make sure the power outlet is operating correctly.

Determine if a power failure has occurred in your home, apartment, or building.



For soft or jelly-like sandwich fillings, use medium sliced white or whole wheat bread. For small amounts of filling use thinner bread.



Add butter to the Cooking Surface for extra flavor or use a basting brush on the bread slices before grilling.



Get fancy! Suggested garnishes for sandwiches include: Lettuce, parsley, mint, stuffed olive halves, onion, tomato etc...



A teaspoon of sugar sprinkled on the outside makes toasted sandwiches crispier (especially for sandwiches with fruit fillings).



RECIPE GUIDE



Follow us!

@bydash | recipes, videos, & inspiration

@unprocessyourfood | veg & vegan-friendly meals


Bacon, Tomato & Cheese Pocket	2 slices bread 1 slice tomato, sliced thin 1 slice Swiss cheese 1 slice bacon
Quesadilla Pocket	4" tortilla (corn or flour) ¼ cup shredded Mexican cheese blend 2 tbsp salsa
Cinnamon Bun	1 piece refrigerated cinnamon roll dough dusting of powdered sugar
Meat Pie / Empanada	4 triangles refrigerated crescent roll dough ¼ cup seasoned ground beef filling (beef, tomato sauce, sofrito, chopped onions)
Cheesy Biscuit Pocket	1 large biscuit, sliced in half lengthwise 1 slice sharp Cheddar cheese
Stuffed Mac & Cheese Pocket	2 slices bread 2 tbsp macaroni & cheese 1 tbsp butter, to coat bread
Breakfast Sunshine Pocket	large English muffin, buttered 1 egg, scrambled 1 turkey sausage sliced thin 1 slice American cheese

Pizza Pocket	2 slices bread 3 slices pepperoni ¼ cup mozzarella, shredded marinara sauce for dipping
Ham & Cheese Pocket	2 slices bread 1 slice ham 1 slice Swiss cheese
Nutella® & Banana Pocket	2 slices bread ¼ banana, sliced thin 1 tbsp Nutella®
PB & J Pockets	2 slices bread 1 tbsp peanut butter 1 tbsp organic jam
Tuna Melt Pocket	2 slices bread 2 tbsp tuna salad 1 slice provolone
Baked Brie Pocket	2 slices bread 1 slices Brie, very thinly sliced and 4" in length 1 tbsp raspberry jam

**FEEL GOOD
GUARANTEE™**

Dash values quality and workmanship and stands behind this product with our Feel Good Guarantee™. To learn more about our commitment to quality, visit bydash.com/feelgood.

Our customer support teams in the US and Canada are at your service Monday - Friday during the times below.
Contact us at **1 (800) 898-6970** or support@bydash.com

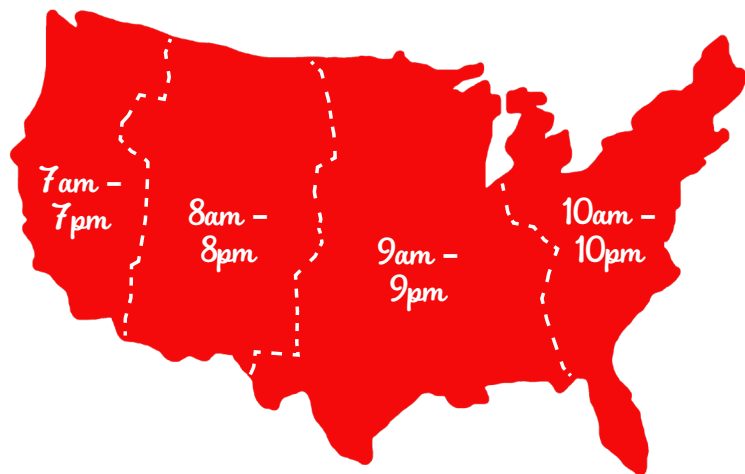

Hey **Hawaii!** You can reach our customer service team from **5AM to 5PM**.
And also, **Alaska**, feel free to reach out from **6AM - 6PM**.

STOREBOUND, LLC - 1 YEAR LIMITED WARRANTY

Your StoreBound product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of the original purchase when utilized for normal and intended household use. Should any defect covered by the terms of the limited warranty be discovered within one (1) year, StoreBound, LLC will repair or replace the defective part. To process a warranty claim, contact Customer Support at 1-800-898-6970 for further assistance and instruction. A Customer Support agent will assist you by troubleshooting minor problems. If troubleshooting fails to fix the problem, a return authorization will be issued. Proof of purchase indicating the date and place of purchase is required and should accompany the return. You must also include your full name, shipping address, and telephone number. We are unable to ship returns to a PO box. StoreBound will not be responsible for delays or unprocessed claims resulting from a purchaser's failure to provide any or all of the necessary information. Freight costs must be prepaid by the purchaser.

Send all inquiries to support@bydash.com.

There are no express warranties except as listed above.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER. STOREBOUND SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT EXCEPT TO THE EXTENT REQUIRED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts. Therefore, the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

REPAIRS

DANGER! Risk of electric shock! The Dash Pocket Sandwich Maker is an electrical appliance. Do not attempt to repair the appliance yourself under any circumstances. Contact Customer Support regarding repairs to the appliance.

TECHNICAL SPECIFICATIONS

Voltage 120V ~ 60Hz
Power Rating 420W
Stock#: DPM200_20210412_V3

Made in China



1-800-898-6970 | @bydash | bydash.com