

Blauen Text nicht übersetzen (SYMBOL)

1. Blade holder
2. Lid
3. Pusher, removable from lid
4. Container
5. Fine cutting grid (7 x 7 mm)
6. Coarse cutting grid (13 x 13 mm)
7. Lock function for cutting grid
8. Storage cover
9. Cleaning comb

First use

- Remove all parts from the packaging and clean them before first use. Please also note the information under “**Cleaning**”.
- To use the chipper and dicer, place the container on a dry, stable work surface.

Use



- Lift up the lid and insert the selected cutting grid.
- Insert the cutting grid by taking the handle, with the side labelled *THIS SIDE UP* facing upwards.



- **PLEASE NOTE:** to insert the cutting grid, the slider should be set to *SYMBOL*. Once the cutting grid has been inserted, set the slider to *SYMBOL* to fix in place,



- then place the items to be chopped on the cutting grid.
PLEASE NOTE: the items to be cut should not extend beyond the edge of the cutting grid. Large and / or hard items should be cut into smaller pieces beforehand.
- Press the lid down by applying force to the areas set aside for that purpose with the ball of your thumb.


Safety advice

- The cutting grids are very sharp: take good care when using and cleaning them.
- Before using the chipper and slicer, ensure that the device has no visible defects or damage.

Cleaning



- All parts are dishwasher-safe.
- However, we recommend cleaning the cutting grids under running water to keep the blades sharp for a long time to come.

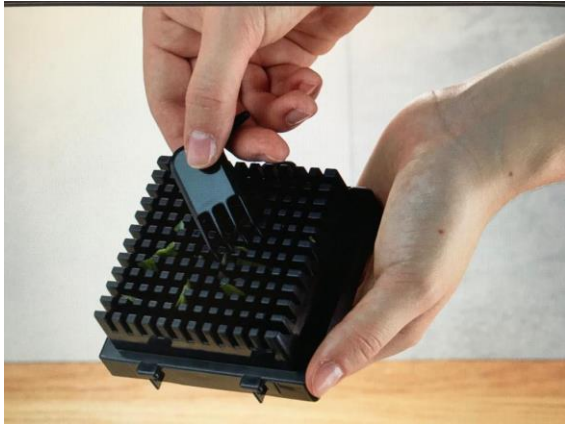

- Remove the pusher from the lid by grasping the holder and pulling it forward.
- For an easy way to clean the pusher, use the cleaning comb.