

*jura*®



## Z6 Instructions for Use



For your safety; read and understand manual before use.

# Your Z6

<b>IMPORTANT SAFEGUARDS</b>	<b>4</b>
<b>Control elements</b>	<b>8</b>
<b>1 Preparing and using for the first time</b>	<b>10</b>
JURA on the Internet.....	10
Setting up the machine .....	10
Filling the bean container.....	10
Determining the water hardness .....	10
First-time use .....	11
Connecting milk .....	14
Filling the water tank.....	14
<b>2 Preparation</b>	<b>15</b>
Ways of preparing a beverage .....	15
Ristretto, espresso and coffee.....	17
2 ristretti, 2 espressi and 2 coffees .....	17
Latte macchiato, cappuccino and other specialty coffees with milk .....	17
Ground coffee .....	18
Permanently setting the amount of water for the cup size .....	19
Adjusting the grinder .....	20
Hot water .....	20
<b>3 Daily operation</b>	<b>21</b>
Switching on the machine.....	21
Daily maintenance.....	21
Regular maintenance .....	22
Switching off the machine.....	22
<b>4 Permanent settings in programming mode</b>	<b>23</b>
Product settings .....	24
Adjusting the product settings.....	25
Adding products to the start screen, duplicating and personalizing .....	26
Renaming a product.....	27
Setting milk and milk foam temperature .....	28
Automatic switch-off.....	29
Energy-saving mode .....	29
Setting the water hardness .....	30
Display settings .....	31
Unit for amount of water.....	31
Restore factory settings .....	32
Water tank illumination .....	32
Language .....	33
Querying information .....	34

<b>5</b>	<b>Maintenance</b>	<b>35</b>
	Rinsing the machine.....	36
	Automatic milk system rinsing.....	36
	Cleaning the milk system.....	36
	Dismantling and rinsing the dual spout.....	37
	Inserting the filter.....	39
	Changing the filter.....	40
	Cleaning the machine.....	40
	Descaling the machine.....	42
	Descaling the water tank.....	44
	Cleaning the bean container.....	44
<b>6</b>	<b>Display messages</b>	<b>45</b>
<b>7</b>	<b>Troubleshooting</b>	<b>46</b>
<b>8</b>	<b>Transport and environmentally friendly disposal</b>	<b>47</b>
	Transport / Emptying the system.....	47
	Disposal.....	47
<b>9</b>	<b>Technical data</b>	<b>48</b>
<b>10</b>	<b>Index</b>	<b>49</b>
<b>11</b>	<b>JURA contact details / Legal information</b>	<b>52</b>

## Symbol description

### Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.



DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.



WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION, used with the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### NOTICE

NOTICE is used to address practices not related to personal injury.

### Symbols used



**Prompt to take action.** This symbol means that you are being prompted to perform some action.



**Information** and tips to make it even easier to use your Z6.



**Display message**

## IMPORTANT SAFEGUARDS

**Follow the basic safety precautions**

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee.
- For household use only.

**SAVE THESE INSTRUCTIONS.**

Pass them on to any subsequent user.

**Intended use** The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

**Special power cord set instructions**

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Extension cords are available and may be used if care is exercised in their use.

If the user chooses to use an extension cord,

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

** WARNING**



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact JURA customer service.

## IMPORTANT SAFEGUARDS

### **⚠ CAUTION**


This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher.
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.
- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

### **NOTICE**

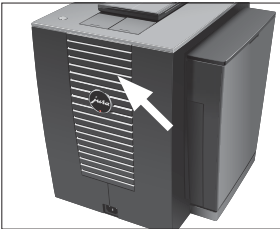


**NEVER DO  
(or you will void your  
warranty protection):**


- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container. In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

Control elements

# Control elements

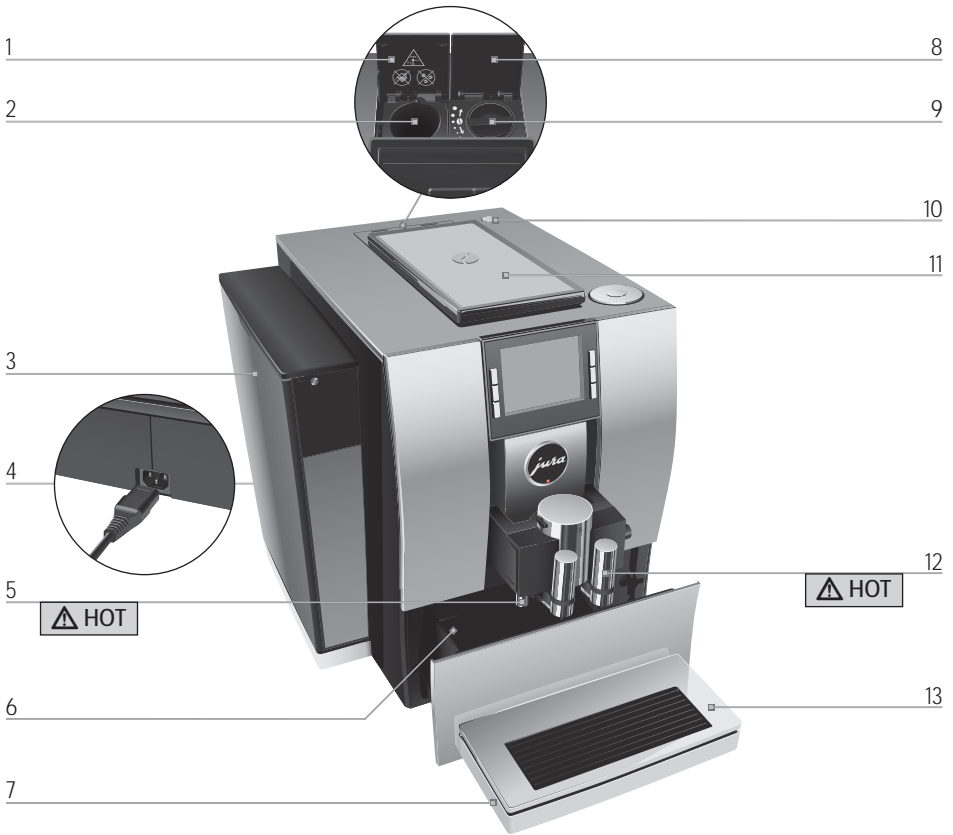

- 1 Cover for powder chute for ground coffee
- 2 Powder chute for ground coffee
- 3 Water tank
- 4 Plug-in power cord (back of the machine)
- 5 Hot-water spout
- 6 Coffee grounds container
- 7 Drip tray

- 8 Cover cap for grinder adjustment switch
- 9 Grinder adjustment switch
- 10 On/Off button 
- 11 Bean container with aroma preservation cover
- 12 Height- and width-adjustable dual spout
- 13 Cup platform





**Front**


- 1 Display
- 2 Multi-function buttons (button function depends on what is shown in the display)

**Top of the machine**


- 3 Rotary Switch

**Accessories**


Container for milk system cleaning

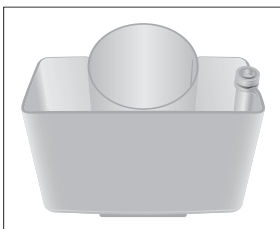

Measuring spoon for ground coffee

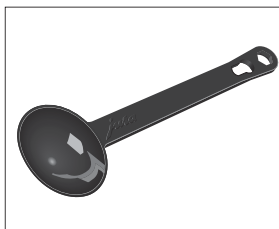

Filler funnel for ground coffee

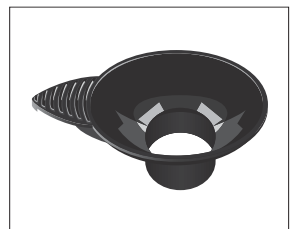


## 1 Preparing and using for the first time

### JURA on the Internet

Visit us on the Internet. You can download **short operating instructions** for your machine from the JURA website ([www.jura.com](http://www.jura.com)). You will also find interesting and up-to-date information on your Z6 and on every aspect of coffee.

### Setting up the machine

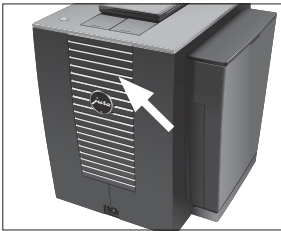

When setting up your Z6, please note the following:

- Place the Z6 on a horizontal surface that is not sensitive to water.
- Choose a spot for your Z6 which protects the machine against overheating. Ensure that the ventilation slots are not covered.

### Filling the bean container

The bean container has an aroma preservation cover. This will ensure that your coffee beans retain their aroma for longer.

#### NOTICE


Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- ▶ Only use roasted, untreated coffee beans to fill the bean container.
- 
- ▶ Remove the aroma preservation cover.
  - ▶ Remove any dirt or foreign objects from inside the bean container.
  - ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

### Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you do not know the hardness of your water, you can find this out first. Use the Aquadur® test strips supplied with the machine.

- ▶ Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ▶ Wait for about 1 minute.

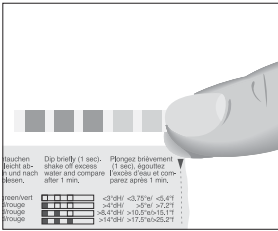

- ▶ You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.

Level	Display German Degree (°dH)	Degrees of general hardness (°dGH)	Parts per million (ppm)	Indicator Strip number of 'reddish' fields
Not active	–	–	–	–
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3


### First-time use

When using the machine for the first time, you can choose whether you want to operate Z6 **with** or **without** the CLEARLY Smart filter cartridge. If the water hardness is 10 °dH or more, we recommend using the filter cartridge.




If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ▶ Never use a machine which is damaged.
- ▶ Never use a machine which has a defective power cord.

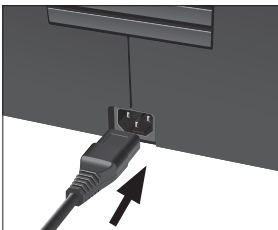

**Precondition:** The bean container has been filled.

- ▶ Connect the power cord to the machine.
  - ▶ Insert the power plug into a power socket.
  - ▶ Press the On/Off button  to switch the Z6 on.
- ‘Choose language’ / ‘English’

**i** To view more languages, turn the Rotary Switch.

- ▶ Press the ‘Save’ button.

‘Saved’ appears briefly on the display to confirm the setting.  
‘Water hardness’

**i** If you do not know the hardness of your water, you must find this out first (see Chapter 1 ‘Preparing and using for the first time – Determining the water hardness’).

## 1 Preparing and using for the first time

- ▶ Turn the Rotary Switch to change the water hardness setting, e.g. to '25 °dH'.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Insert filter'

**i** Now decide whether you want to operate your Z6 **with** or **without** a CLEARYL Smart filter cartridge.

Operation **with** filter cartridge: go straight to the next section (see Chapter 1 'Preparing and using for the first time – First-time use with filter cartridge activation').


Operation **without** filter cartridge (see Chapter 1 'Preparing and using for the first time – First-time use without filter cartridge activation').

### First-time use with filter cartridge activation

#### NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

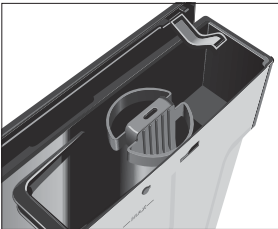

- ▶ Place a receptacle under the dual spout.
- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fit the filter cartridge extension supplied on top of a CLEARYL Smart filter cartridge.

- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

**i** The machine automatically detects that you have just inserted the filter cartridge.

'Use filter' / 'Saved'

'Filter is being rinsed', the filter is rinsed. The water flows directly into the drip tray.

'System is filling', water flows out of the dual and hot-water spout.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Machine is heating'

'Machine is rinsing', the system is rinsed. The rinse stops automatically. 'Please select product' appears on the display.

Your Z6 is ready for use.

- i** The display shows the products you can prepare.
- i** If the filter is active, this is indicated by a blue filter symbol in the top right of the display.

### First-time use without filter cartridge activation

#### NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.



- ▶ Only fill the water tank with fresh, cold water.

- ▶ Press the 'No filter' button.

'Descaling mode' / 'Saved'

'Fill water tank'

- ▶ Place a receptacle under the dual spout.

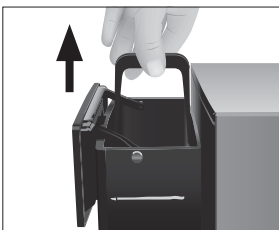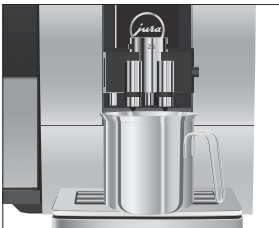

- ▶ Remove the water tank and rinse it with cold water.

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

'System is filling', water flows out of the dual and hot-water spout.


## 1 Preparing and using for the first time

'Machine is heating'

'Machine is rinsing', the system is rinsed. The rinse stops automatically. 'Please select product' appears on the display. Your Z6 is ready for use.

**i** The display shows the products you can prepare.

### Connecting milk

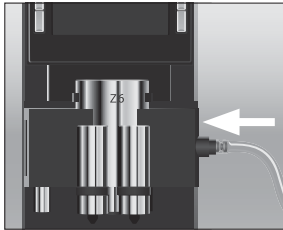

Your Z6 creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 39–46 °F (4–8 °C). We would therefore recommend using a milk cooler or a vacuum milk container.

- ▶ Connect the milk pipe to the dual spout.
- ▶ Connect the other end of the milk pipe to a milk container or immerse it in a milk carton.


### Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

#### NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- ▶ Only fill the water tank with fresh, cold water.

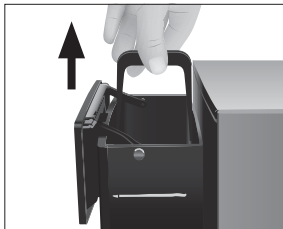


- ▶ Remove the water tank and rinse it with cold water.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

## 2 Preparation

### WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

- 
- i** You can stop the machine at any time while a specialty coffee or hot water is being prepared. To do this, press the ‘’ button.
  - i** During the grinding operation you can select the coffee strength of **single products** by turning the Rotary Switch.
  - i** During preparation, you can change the preset **amounts** (e.g. amount of water or milk foam) by turning the Rotary Switch.
  - i** You can follow the current status of preparation on the display.
  - i** The water volume is given as standard in ‘oz’. You can change this setting to ‘ml’ in programming mode (see Chapter 4 ‘Permanent settings in programming mode – Unit for amount of water’).

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 ‘Permanent settings in programming mode – Adjusting the product settings’).

### Ways of preparing a beverage

The Z6 offers various ways of preparing a specialty coffee, milk or hot water:

- **Preparation using the start screen:** Simply press the corresponding preparation button for the product shown on the display (start screen) that you want.

The following products are displayed as standard on the start screen:

- 'Espresso'
  - 'Coffee'
  - 'Hot water'
  - 'Cappuccino'
  - 'Latte macchiato'
  - '1 portion milk foam'
- **Using the product selector view (Rotary Selection):** Only some of the products you can prepare are shown on the start screen. As soon as you turn the Rotary Switch, more products are displayed in a **product selector view**.

Turn the Rotary Switch to bring the product you want into focus. Start preparation by pressing the Rotary Switch.

The following additional products are shown in the product selector view:

- 'Ristretto'
- 'Macchiato'
- 'Flat White'
- '1 portion milk'

- i** The product selector view disappears automatically after 10 seconds if no preparation is started.
- i** The last product selected always appears first in the product selector view.
- i** You can move any of the standard products programd in your Z6 to your preferred position on the start screen or in the product selector and make it one of your favorites. You can duplicate and personalize your favorite specialty coffees by giving them a new product name and individual settings (e.g. amount and coffee strength) (see Chapter 4 'Permanent settings in programming mode – Adding products to the start screen, duplicating and personalizing'). Please note that the descriptions provided in the following sections always refer to the default settings.



## Ristretto, espresso and coffee



**Example:** Proceed as follows to prepare one coffee.

**Precondition:** The start screen is displayed.

- ▶ Place a cup under the dual spout.
- ▶ Press the 'Coffee' button.

Preparation starts. 'Coffee' and the coffee strength are displayed. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. 'Please select product' appears on the display.

## 2 ristretti, 2 espressi and 2 coffees



**Example:** Proceed as follows to prepare two coffees.

**Precondition:** The start screen is displayed.

- ▶ Place two cups under the dual spout.
- ▶ Press the 'Coffee' button twice (**within two seconds**) to start preparation of 2 coffees.

Coffee preparation starts. The preset amount of water for coffee flows into the cups. Preparation stops automatically. Your Z6 is once more ready for use.

## Latte macchiato, cappuccino and other specialty coffees with milk



Your Z6 prepares latte macchiato, cappuccino, flat white and other specialty coffees with milk at the touch of a button. There is no need to move the glass or cup.

**Example:** Proceed as follows to prepare one latte macchiato.

**Precondition:** The start screen is displayed.

- ▶ Place a glass under the dual spout.
- ▶ Press the 'Latte macchiato' button.

'Latte macchiato', the preset amounts of milk and milk foam flow into the glass.

**i** There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

Coffee preparation starts. The preset amount of water for espresso flows into the glass. Preparation stops automatically. 'Please select product' appears on the display.

## 2 Preparation

- i** 15 minutes after preparation, the milk system is automatically rinsed (see Chapter 5 ‘Maintenance – Automatic milk system rinsin’). Therefore always place a receptacle under the dual spout after preparing milk.

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** (see Chapter 5 ‘Maintenance – Cleaning the milk system’).

## Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- i** Never add more than two level measuring spoons of ground coffee.
- i** Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i** If you did not fill the machine with a sufficient amount of ground coffee, ‘**Not enough ground coffee**’ is displayed and the Z6 stops the operation.
- i** The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the Z6 stops the operation and is once more ready for use.


All specialty coffees with ground coffee are always prepared following the same model.


**Example:** Proceed as follows to prepare one espresso using ground coffee.

**Precondition:** The start screen is displayed.

- ▶ Place an espresso cup under the coffee spout.
- ▶ Open the powder chute cover.

‘**Please add ground coffee**’

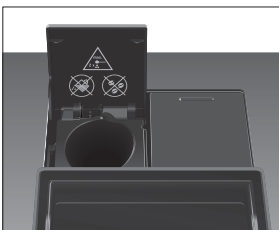

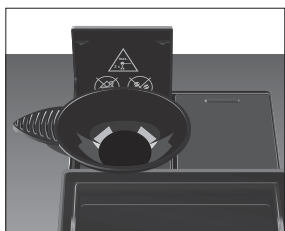

- ▶ Fit the filler funnel for ground coffee.
- ▶ Place one level measuring spoon of ground coffee into the filler funnel.
- ▶ Remove the filler funnel and close the cover of the powder chute.

'Please select product'

- ▶ Press the 'Espresso' button.

Preparation starts. 'Espresso', the preset amount of water for espresso flows into the cup. Preparation stops automatically.

'Please select product' appears on the display.

## Permanently setting the amount of water for the cup size

It is easy to permanently adjust the amount of water for all **single products** to the cup size. Adjust the amount once as shown in the following example. Every time you prepare a drink in the future, this amount will be dispensed.

**Example:** Proceed as follows to **permanently** set the amount of water for one coffee.

**Precondition:** The start screen is displayed.



- ▶ Place a cup under the dual spout.
  - ▶ Press and **hold** the 'Coffee' button until 'Enough coffee? Press button' appears.
  - ▶ Release the 'Coffee' button.
- Preparation starts and the coffee flows into the cup.
- ▶ Press any button as soon as there is sufficient coffee in the cup.

Preparation stops. 'Saved' appears briefly on the display. The set amount of water for one coffee is permanently stored.

'Please select product' appears on the display.

- i** You can alter this setting at any time by repeating the above procedure.
- i** The amount can be permanently adjusted to the cup size for the products shown in the product selector too. To do this, press and hold the Rotary Switch until 'Enough coffee? Press button' appears.
- i** You can also permanently set the amount of water for all specialty coffees and hot water in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

## Adjusting the grinder

You can adjust the grinder on a continuous scale to suit the degree of roast of your coffee.

### CAUTION

If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment switch could be damaged.

- ▶ Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.


**Example:** Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

**Precondition:** The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ▶ Open the cover of the grinder adjustment switch.
- ▶ Press the **'Espresso'** button to start preparation.
- ▶ Turn the grinder adjustment switch to the desired position **while** the grinder is running.

The preset amount of water flows into the cup. Preparation stops automatically.

- ▶ Close the cover of the grinder adjustment switch.

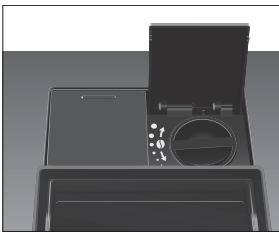

## Hot water

### ⚠ CAUTION

There is a danger of scalding from hot water splashes.

- ▶ Avoid direct contact with the skin.


**Precondition:** The start screen is displayed.

- ▶ Place a cup under the hot-water spout.
  - ▶ Press the **'Hot water'** button.
- 'Hot water'**, the preset amount of water flows into the cup. Preparation stops automatically. **'Please select product'** appears on the display.




## 3 Daily operation

### Switching on the machine

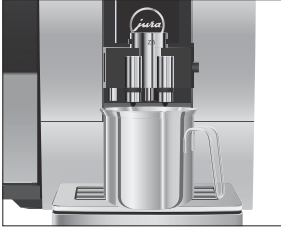

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily**.

- ▶ Place a receptacle under the dual spout.
- ▶ Press the On/Off button  to switch the Z6 on.


‘Welcome to JURA’

‘Machine is heating’

‘Machine is rinsing’, the system is rinsed.

The rinse stops automatically. ‘Please select product’ appears on the display. Your Z6 is ready for use.

### Daily maintenance

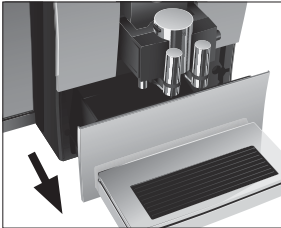

To ensure that you get many years of reliable service out of your Z6 and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- ▶ Empty the coffee grounds container and the drip tray. Rinse them both with warm water.

**i** Always empty the coffee grounds container when the machine is **switched on**. This is the only way of resetting the coffee grounds counter.

- ▶ Refit the coffee grounds container and the drip tray.
- ▶ Rinse the water tank with clean water.
- ▶ Remove the milk pipe and rinse it thoroughly under running water.
- ▶ Dismantle and rinse the dual spout (see Chapter 5 ‘Maintenance – Dismantling and rinsing the dual spout’).
- ▶ Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).


You will more information about caring for your Z6 in programming mode under ‘Maintenance status’ / ‘Maintenance information’.

## Regular maintenance

Carry out the following maintenance actions **regularly** or **as required**:

- In the interests of hygiene, we recommend changing the milk pipe on a regular basis (approximately every 3 months). Replacement pipes are available from specialized dealers (JURA original accessory set for milk systems).
- Clean the inside of the water tank, e.g. with a brush. Further information about the water tank is provided in these instructions for use (see Chapter 5 'Maintenance – Descaling the water tank').
- Traces of milk and coffee may stick to the top and bottom of the cup platform. If this happens, clean the cup platform.

## Switching off the machine

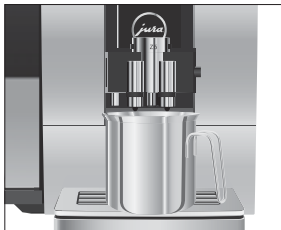

When the Z6 is switched off, the system is automatically rinsed if a specialty coffee has been prepared. If milk has been prepared, you will also be prompted to clean the milk system.

**Precondition:** 'Please select product' is displayed (or 'Clean the milk system' if milk has been prepared).

- ▶ Place a receptacle under the dual spout.
- ▶ Press the On/Off button

**i** If milk has been prepared, you will be prompted to clean the milk system ('Clean the milk system'). After 10 seconds the switch-off process continues automatically.

If milk has been prepared but you have not started milk system cleaning, the milk system is rinsed first ('Milk system is being rinsed').

'Machine is rinsing', the system rinses itself. The operation stops automatically. Your Z6 is switched off.

## 4 Permanent settings in programming mode



### WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

Briefly press the Rotary Switch to enter programming mode. You can navigate through the program items and permanently save the required settings simply by turning the Rotary Switch and using the multi-function buttons. The following settings can be made:

Program item	Sub-item	Explanation
'Maintenance status'	'Clean',	▶ <b>Start</b> the required maintenance program here.
	'Change the filter' (only if filter is activated),	
	'Descale' (only if filter is not activated),	
	'Clean the milk system',	
	'Rinse',	
	'Maintenance information'	
'Product settings'	'Expert mode'	▶ Select your settings for specialty coffees and hot water.
	'Classics'	▶ Replace the products on the start screen and in the product selector with your favorites. Duplicate and personalize your favorite specialty coffees by giving them a new product name and individual settings.
	'Milk temperature'	▶ Change the milk and milk foam temperature.
'Machine settings'	'Choose language'	▶ Select your language.
	'Switch off after'	▶ Set the time after which the Z6 should switch off automatically.
	'Save energy'	▶ Select an energy-saving mode.
	'Factory setting'	▶ Reset the machine to its factory setting.
	'Units'	▶ Select the unit for the amount of water.

Program item	Sub-item	Explanation
'Machine settings'	'Display'	▶ Change the display settings.
	'Water hardness'	▶ Adjust the water hardness.
	'Water tank illumination'	▶ Change the settings for water tank illumination.
	'Product counter' / 'Maintenance counter'	▶ Keep track of all products prepared and view the number of maintenance programs performed.

## Product settings



### WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ▶ Use extreme care when handling hot liquid or steam.
- ▶ Allow liquid to cool down before drinking.
- ▶ In the event of scalding, rinse affected area with cold water and seek medical attention.
- ▶ Keep children AWAY.

In the program item 'Product settings' you can make the following settings:

- 'Expert mode'
  - Set individual settings for all specialty coffees, milk and hot water (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').
  - Replace the products on the start screen and in the product selector with your favorites. Duplicate and personalize your favorite specialty coffees by giving them a new product name and individual settings (see Chapter 4 'Permanent settings in programming mode – Adding products to the start screen, duplicating and personalizing').
  - Change the names of individual products (see Chapter 4 'Permanent settings in programming mode – Renaming a product').
- 'Milk temperature'
  - Change the milk and milk foam temperature (see Chapter 4 'Permanent settings in programming mode – Setting milk and milk foam temperature').



## Adjusting the product settings

In the program item 'Product settings' / 'Expert mode' you can make individual settings for all specialty coffees and hot water. The following permanent settings can be made:

Product	Coffee strength	Amount	More settings
Ristretto, Espresso	10 levels	Coffee: 0.5 oz – 2.5 oz (15 ml – 80 ml)	Temperature (low, normal, high), Product name
Coffee	10 levels	Coffee: 0.5 oz – 8.0 oz (25 ml – 240 ml)	Temperature (low, normal, high),
2 ristretti, 2 espressi, 2 coffees	–	Coffee: The amount set for the single product is doubled.	Temperature (as for single product), Product name
Cappuccino, Latte macchiato, Flat white	10 levels	Coffee: 0.5 oz – 8.0 oz (25 ml – 240 ml) Milk foam: 0 sec. – 120 sec. Milk: 0 sec. – 120 sec. Interval: 0 sec. – 60 sec.	Temperature (low, normal, high), Product name
Espresso macchiato	10 levels	Coffee: 0.5 oz – 2.5 oz (15 ml – 80 ml) Milk foam: 0 sec. – 120 sec. Milk: 0 sec. – 120 sec. Interval: 0 sec. – 60 sec.	Temperature (low, normal, high), Product name
Portion of milk foam, Milk	–	Milk foam: 0 sec. – 120 sec.	Product name
Hot water	–	Water: 0.5 oz – 15.0 oz (25 ml – 450 ml)	Temperature (low, normal, high), Product name

You can also choose from ten levels for the milk and milk foam temperature (see Chapter 4 'Permanent settings in programming mode – Setting milk and milk foam temperature').

Permanent settings in programming mode always follow the same model.

**Example:** Proceed as follows to change the amount of water for one espresso and change the coffee strength.

**Precondition:** 'Please select product' is displayed.

► Press the Rotary Switch.

'Maintenance status'

- ▶ Turn the Rotary Switch until 'Product settings' is displayed.
- ▶ Press the Rotary Switch.  
'Expert mode'
- ▶ Press the Rotary Switch to enter the program item.  
'Expert mode'
- ▶ Press the 'Espresso' button.  
'Expert mode' / 'Espresso'
- ▶ Press the Rotary Switch.  
'Espresso'
- ▶ Press the Rotary Switch.
- ▶ Turn the Rotary Switch to change the coffee strength setting.
- ▶ Press the Rotary Switch to confirm the setting.
- ▶ Turn the Rotary Switch until 'Coffee' is in focus.
- ▶ Press the Rotary Switch.
- ▶ Turn the Rotary Switch to change the fill volume setting.
- ▶ Press the Rotary Switch to confirm the setting.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Expert mode' / 'Espresso'
- ▶ Press the '↵' button the number of times needed to display the start screen again.

## Adding products to the start screen, duplicating and personalizing

In the program item 'Product settings' / 'Classics' you will find all the products stored as standard in your Z6. You can move any of these products to your preferred position on the start screen or in the product selector and make it one of your favorites. You can **duplicate** and **personalize** your favorite specialty coffees by giving them a new product name and individual settings (e.g. amount and coffee strength).

**Example:** Proceed as follows to replace 'Latte macchiato' on the start screen with 'Macchiato'.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Product settings' is displayed.
- ▶ Press the Rotary Switch.  
'Expert mode'

- ▶ Turn the Rotary Switch until 'Classics' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Add to favourites'
- ▶ Press the Rotary Switch again.
- ▶ Turn the Rotary Switch until 'Macchiato' is in focus.
- ▶ Press the Rotary Switch.  
'Select position'
- ▶ Press the 'Latte macchiato' button.  
'Macchiato' / 'Do you want to replace the current product?'
- ▶ Press the 'Yes' button.  
'Saved' appears briefly on the display.  
'Product name'

**i** You can now give the product you just added a new name.

- ▶ Press the 'Save' button.  
'Macchiato'

**i** You can now change various settings for the product. To do this, briefly press the Rotary Switch to access the various setting options. Confirm the settings by pressing the 'Save' button.

**i** If you do not want to change any more settings, just press the '⏪' button.

- ▶ Press the '⏪' button the number of times needed to display the start screen again.

## Renaming a product

In the program item 'Product settings'/'Expert mode' you can rename all of the products.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Product settings' is displayed.
- ▶ Press the Rotary Switch.  
'Expert mode'
- ▶ Press the Rotary Switch to enter the program item.  
'Expert mode'
- ▶ Press the 'Coffee' button (example).  
'Expert mode' / 'Coffee'

#### 4 Permanent settings in programming mode

- ▶ Turn the Rotary Switch until 'Product name' is displayed.
- ▶ Press the Rotary Switch.  
The available letters, numbers and special characters appear on the display.
- i** By pressing the 'abc ABC' button, you can switch between lower and upper case letters.
  - ▶ Turn the Rotary Switch until the letter you want is highlighted.
  - ▶ Press the Rotary Switch to confirm the letter.
  - ▶ Continue until the new product name you want is displayed.
- i** Please note that there is a maximum text length.
  - ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
The new product name is displayed.
  - ▶ Press the '⏪' button the number of times needed to display the start screen again.

### Setting milk and milk foam temperature

You can choose from ten levels for the milk and milk foam temperature. This setting applies to **all** products for which milk is used.

**Example:** Proceed as follows to change the milk foam temperature.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Product settings' is displayed.
- ▶ Press the Rotary Switch.  
'Expert mode'
- ▶ Turn the Rotary Switch until 'Milk temperature' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Milk'
- ▶ Turn the Rotary Switch until 'Milk foam' is displayed.
- ▶ Press the Rotary Switch.  
'Milk foam'
- ▶ Turn the Rotary Switch to change the setting.

- i** You can change the temperature from level 1 (low) to level 10 (high).

- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Milk foam'
- ▶ Press the '⏪' button the number of times needed to display the start screen again.

## Automatic switch-off

By instructing your Z6 to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your Z6 switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–9 hours.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Switch off after' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Switch off after'
- ▶ Turn the Rotary Switch to change the switch-off time.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Switch off after'
- ▶ Press the '⏪' button the number of times needed to display the start screen again.

## Energy-saving mode

In the program item 'Machine settings' / 'Save energy' you can permanently set an energy-saving mode (Energy Save Mode, E.S.M.®):

- 'Active'
  - Soon after the last preparation, the Z6 stops heating up. After about 5 minutes the message 'Energy Save' is displayed.
  - Before you can prepare a specialty coffee, specialty coffee with milk, or hot water, the machine must heat up.

#### 4 Permanent settings in programming mode

- 'Inactive'

- All specialty coffees, specialty coffees with milk and hot water can be prepared without having to wait.

**Example:** Proceed as follows to change the energy-saving mode from 'Active' to 'Inactive'.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Save energy' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Save energy'
- ▶ Turn the Rotary Switch until 'Inactive' is displayed.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Save energy'
- ▶ Press the '↑' button the number of times needed to display the start screen again.

### Setting the water hardness

The harder the water is, the more frequently the Z6 needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness was set when the machine was first used. You can change this setting at any time.

The water hardness can be adjusted on a continuous scale between 1 °dH and 30 °dH.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Water hardness' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Water hardness'

- ▶ Turn the Rotary Switch to change the setting.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Water hardness'
- ▶ Press the '↵' button the number of times needed to display the start screen again.

## Display settings

In the program item 'Machine settings' / 'Display' you can set the display brightness (as a percentage).

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Display' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Display'
- ▶ Turn the Rotary Switch to change the setting.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Display'
- ▶ Press the '↵' button the number of times needed to display the start screen again.

## Unit for amount of water

In the program item 'Machine settings' / 'Units' you can select the unit used for the amount of water.

**Example:** Proceed as follows to change the unit for the amount of water from 'ml' to 'oz'.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Units' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Units'

#### 4 Permanent settings in programming mode

- ▶ Turn the Rotary Switch until 'oz' is displayed.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Units'
- ▶ Press the '↑' button the number of times needed to display the start screen again.

#### Restore factory settings

In the program item 'Machine settings' / 'Factory setting' the machine can be reset to its factory setting: **All user settings** (apart from the 'filter' and 'water hardness') are reset to factory settings. Your Z6 then switches off.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Factory setting' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Factory setting' / 'Reset the machine to the factory settings?'
- ▶ Press the 'Yes' button.  
'Saved' appears briefly on the display.  
Your Z6 is switched off.

#### Water tank illumination

In the program item 'Machine settings' / 'Water tank illumination' you can change the setting for water tank illumination:

- 'Permanent': The water tank is always illuminated.
- 'Temporary': The water tank is only illuminated when a product is being prepared.

**Example:** Proceed as follows to change the water tank illumination from 'Permanent' to 'Temporary'.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.



- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Water tank illumination' is displayed.
- ▶ Press the Rotary Switch to enter the program item.  
'Water tank illumination'
- ▶ Turn the Rotary Switch until 'Temporary' is displayed.
- ▶ Press the 'Save' button.  
'Saved' appears briefly on the display.  
'Water tank illumination'
- ▶ Press the ' ↱ ' button the number of times needed to display the start screen again.

## Language

In this program item you can set the language used by your Z6.

**Example:** Proceed as follows to change the language from 'English' to 'Deutsch'.

**Precondition:** 'Please select product' is displayed.

- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Turn the Rotary Switch until 'Machine settings' is displayed.
- ▶ Press the Rotary Switch.  
'Choose language'
- ▶ Press the Rotary Switch to enter the program item.  
'Choose language'
- ▶ Turn the Rotary Switch until 'Deutsch' is displayed
- ▶ Press the 'Save' button.  
'Gespeichert' appears briefly on the display  
'Sprachauswahl'
- ▶ Press the ' ↱ ' button.  
'Geräteeinstellungen'
- ▶ Press the ' ↱ ' button again.  
'Bitte wählen'

## Querying information

In the program item **'Machine settings'** you can view the following information:

- **'Product counter'**: Number of prepared coffee specialty coffees, specialty coffees with milk and hot water
- **'Maintenance counter'**: Number of maintenance programs performed (cleaning, descaling etc.)
- **'Version'**: Software version

**Example:** Proceed as follows to view the number of specialty coffees prepared.

**Precondition:** **'Please select product'** is displayed.

- ▶ Press the Rotary Switch.  
**'Maintenance status'**
  - ▶ Turn the Rotary Switch until **'Machine settings'** is displayed.
  - ▶ Press the Rotary Switch.  
**'Choose language'**
  - ▶ Turn the Rotary Switch until **'Product counter'** is displayed.
  - ▶ Press the Rotary Switch to enter the program item.  
**'Product counter'**
- i** Turn the Rotary Switch to view the number of other specialty coffees.
- ▶ Press the **'↑'** button the number of times needed to display the start screen again.

## 5 Maintenance

### WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
- ▶ Keep children away from the machine while it is performing a maintenance program.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ When using do not eat or drink.
- ▶ Keep maintenance products away from food, drink and animal food.
- ▶ Keep container tightly closed and dry. Keep in a cool place.

Your Z6 has the following integrated maintenance programs:


- Rinsing the machine
- Rinsing the milk system in the dual spout
- Cleaning the milk system in the dual spout ('Clean the milk system')
- Changing the filter ('Change the filter') (only if filter is activated)
- Cleaning the machine ('Clean')
- Descaling the machine ('Descale') (only if filter is not activated)

**i** Clean or descale the machine, rinse the milk system or change the filter when you are prompted to do so.

**i** Press the P button to view a list of the maintenance programs ('Maintenance status'). By referring to the bar you can see which maintenance program is due. When the bar is completely filled with red, your Z6 will prompt you to perform the appropriate maintenance program.

**i** In the interests of hygiene, you should clean the milk system **daily** when you have been preparing milk.

## Rinsing the machine

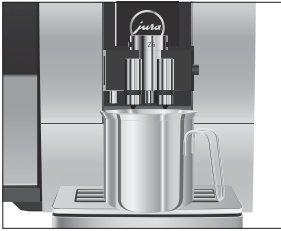

You can initiate the rinse operation manually at any time.

**Precondition:** 'Please select product' is displayed.

- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.  
'Maintenance status'
- ▶ Press the Rotary Switch.  
'Clean'
- ▶ Turn the Rotary Switch until 'Rinse' is displayed.
- ▶ Press the Rotary Switch to initiate the rinse operation.  
'Machine is rinsing', 'Milk system is being rinsed', water flows out of the dual spout. The rinse stops automatically.  
'Please select product' appears on the display.

## Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the dual spout after preparing milk.

15 minutes after milk preparation, 'Milk system is being rinsed' appears, water flows out of the dual spout. The rinse stops automatically. Your Z6 is once more ready for use.

## Cleaning the milk system

To ensure that the milk system in the dual spout always works properly, you must clean it **daily** when you have been preparing milk.

**⚠ WARNING**

---

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

- ▶ Use only original JURA milk system cleaner.

**⚠ WARNING**

---


Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
  - ▶ Avoid contact with skin and eyes.
  - ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
  - ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
  - ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
-

- i** JURA milk system cleaner is available from specialized dealers.
- i** To clean the milk system, use the container supplied.

**Precondition:** 'Clean the milk system' is displayed.

- ▶ Press the Rotary Switch.  
'Clean the milk system'
- ▶ Press the Rotary Switch again.
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.  
'Cleaning agent for milk system'
- ▶ Remove the milk pipe from the milk container or carton.
- ▶ Add 1 capful of milk system cleaner to the outer, rectangular part of the container.
- ▶ Place the container under the dual spout.

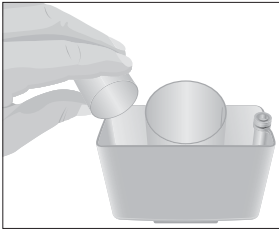

- ▶ Connect the milk pipe to the container.

- i** To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.

- ▶ Slide the dual spout down to fix the container in place.
- ▶ Press the 'Next' button.

'Milk system is being cleaned', the dual spout and the pipe are cleaned. Water flows out of the dual spout.


The operation stops automatically. 'Milk system cleaning complete' appears briefly on the display.

Your Z6 is once more ready for use.


### Dismantling and rinsing the dual spout

The dual spout must be dismantled and rinsed **daily** if milk has been prepared to make sure it functions perfectly and also in the interests of hygiene.


- ▶ Remove the milk pipe and rinse it thoroughly under running water.

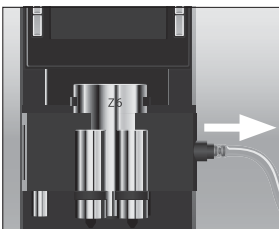


## 5 Maintenance

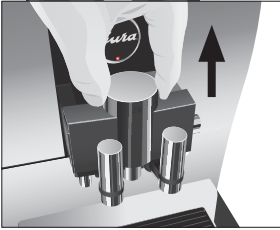


- ▶ Press the releasing devices and pull the cover of the dual spout up and off.

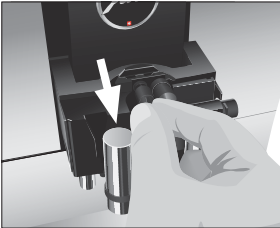


- ▶ Remove the milk system from the dual spout.

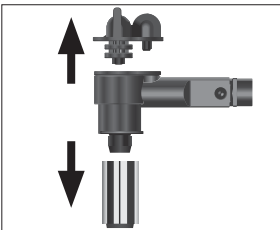



- ▶ Dismantle the milk system into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.

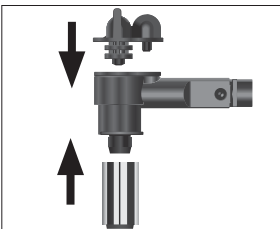

- ▶ Reassemble the milk system.

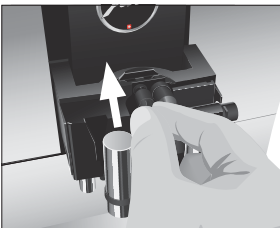

- ▶ Fit the assembled individual parts back in the dual spout and press it firmly.

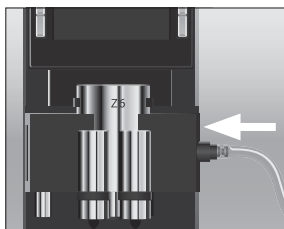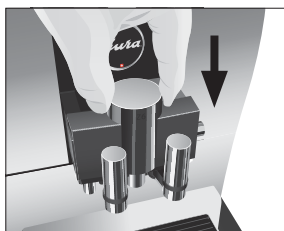

► Fit the cover of the dual spout. Make sure the cover of the dual spout is correctly fitted.


► Connect the milk pipe to the dual spout.

## Inserting the filter

Your Z6 no longer has to be descaled if you are using the CLEARLYL Smart filter cartridge. If you did not insert the filter cartridge the first time you used the machine, you can do this now as follows.

**Precondition:** 'Please select product' is displayed.

- Remove and empty the water tank.
- Fit the filter cartridge extension supplied on top of a CLEARLYL Smart filter cartridge.
- Insert the filter cartridge with its extension into the water tank.
- Turn the filter cartridge clockwise until it audibly clicks into place.
- Fill the water tank with fresh, cold water and reinsert the tank.

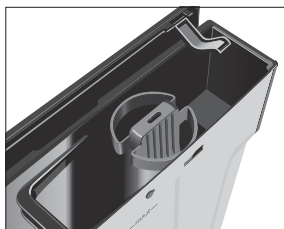

**i** The machine automatically detects that you have just inserted the filter cartridge.

'Use filter' / 'Saved'

'Filter is being rinsed', the filter is rinsed. The water flows directly into the drip tray.


'Empty drip tray'

► Empty the drip tray and put it back into the machine.

'Use filter', 'Filter rinsing complete'

'Please select product' appears on the display. Your Z6 is once more ready for use.

## Changing the filter

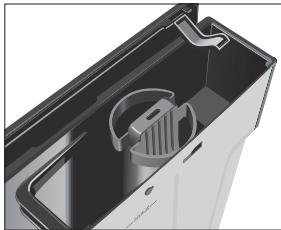

- i** Once the filter cartridge stops working (depending on the water hardness setting), the Z6 will prompt you to change the filter.
- i** CLEARYL Smart filter cartridges are available from specialized dealers.

**Precondition:** 'Change filter' is displayed.

- ▶ Press the Rotary Switch.  
'Change the filter'
- ▶ Press the Rotary Switch again.
- ▶ Remove and empty the water tank.
- ▶ Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ▶ Fit the filter cartridge extension on top of a **new** CLEARYL Smart filter cartridge.
- ▶ Insert the filter cartridge with its extension into the water tank.
- ▶ Turn the filter cartridge clockwise until it audibly clicks into place.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

- i** The machine automatically detects that you have just changed the filter cartridge.

'Change the filter' / 'Saved'

'Filter is being rinsed', the filter cartridge is rinsed. The water flows directly into the drip tray.

'Empty drip tray'

- ▶ Empty the drip tray and put it back into the machine.

'Change the filter', 'Filter rinsing complete'

'Please select product' appears on the display. Your Z6 is once more ready for use.

## Cleaning the machine

After 180 preparations or 80 switch-on rinses, the Z6 will prompt you to clean it.

### **⚠ WARNING**

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA cleaning tablets. These are specially formulated for your machine.



**⚠ WARNING**

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.


- ▶ Keep children AWAY.
- ▶ Avoid contact with skin and eyes.
- ▶ Avoid generation of dust. Do not inhale dust.
- ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- ▶ After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

- i** The cleaning program lasts approximately 20 minutes.
- i** Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialized dealers.

**Precondition:** 'Clean machine' is displayed.

- ▶ Press the Rotary Switch.  
'Clean'
- ▶ Press the Rotary Switch again.  
'Clean'
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.  
'Empty coffee grounds container'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Press the Rotary Switch'
- ▶ Place a receptacle under the dual spout.
- ▶ Press the Rotary Switch.  
'Machine is being cleaned', water flows out of the dual spout.  
The operation is interrupted, 'Add cleaning tablet'.
- ▶ Open the cover of the filler funnel for ground coffee.



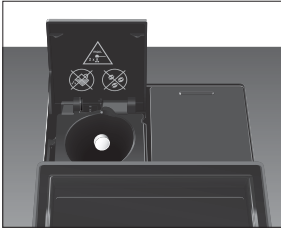

- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.  
**'Press the Rotary Switch'**
- ▶ Press the Rotary Switch.  
**'Machine is being cleaned'**, water flows out of the dual spout repeatedly.  
The operation stops automatically.  
**'Empty coffee grounds container'**
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
**'Please select product'** appears on the display. Cleaning is now complete.

## Descaling the machine

The Z6 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLEARYL Smart filter cartridge, you will not be prompted to descale.

---

### **⚠ WARNING**

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

- ▶ Use only original JURA descaling tablets. These are specially formulated for your machine.

---

### **⚠ WARNING**

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ▶ Keep children AWAY.
  - ▶ Avoid contact with skin and eyes.
  - ▶ Avoid generation of dust. Do not inhale dust.
  - ▶ After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
  - ▶ After eye contact, immediately flush eyes with plenty of water. Remove contact lenses. Seek medical advice.
  - ▶ If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
-



**NOTICE** If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling program to run to the end.

- i** The descaling program lasts approximately 45 minutes.
- i** JURA descaling tablets are available from specialized dealers.
- i** If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out. Clean up any splashes immediately.

**Precondition:** 'Decalcify machine' is displayed.

- ▶ Press the Rotary Switch.  
'Descale'
- ▶ Press the Rotary Switch again.  
'Descale'
- ▶ Press the 'Start' button.
- ▶ Press the 'Start' button again.  
'Empty drip tray'
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Pour descaling agent into water tank'
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a receptacle holding 20 oz (600 ml) of lukewarm water. This may take several minutes.
- ▶ Pour the solution into the empty water tank and insert it into the machine.  
'Press the Rotary Switch'
- ▶ Place a receptacle under the hot water spout.
- ▶ Press the Rotary Switch.  
'Machine is being descaled', water flows out of the hot water spout repeatedly.  
The operation is interrupted, 'Empty drip tray'.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
'Fill water tank'
- ▶ Empty the receptacle and place it under the hot water and dual spouts.
- ▶ Remove the water tank and rinse it thoroughly.

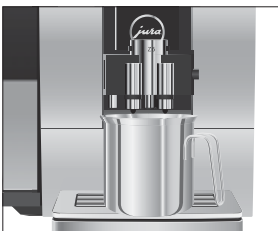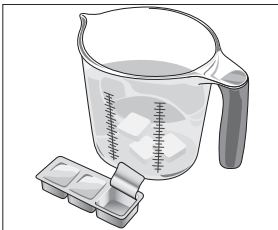

- ▶ Fill the water tank with fresh, cold water and reinsert the tank.  
**'Press the Rotary Switch'**
  - ▶ Press the Rotary Switch.  
**'Machine is being descaled'**, the descaling operation is continued, water flows out of the dual spout and the hot water spout.  
**'Empty drip tray'**
  - ▶ Empty the drip tray and coffee grounds container and put them back into the machine.  
**'Please select product'** appears on the display. Descaling is now complete.
- i** If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

## Descaling the water tank


Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLEARYL Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLEARYL Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

## Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

**Precondition:** **'Fill bean container'** is displayed.

- ▶ Switch the machine off with the On/Off button .
- ▶ Remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.

## 6 Display messages

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	► Fill the water tank (see Chapter 1 'Preparing and using for the first time – Filling the water tank').
'Empty coffee grounds container'	The coffee grounds container is full. You cannot prepare any products.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Fit the drip tray.
'Fill bean container'	The bean container is empty. You cannot prepare any specialty coffees, but you can prepare hot water and milk.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
'Clean the milk system'	The Z6 prompts you to clean the milk system.	► Perform milk system cleaning (see Chapter 5 'Maintenance – Cleaning the milk system').
'Change filter'	The filter cartridge no longer works. The Z6 is prompting a filter change.	► Replace the CLEARYL Smart filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
'Clean machine'	The Z6 is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
'Decalcify machine'	The Z6 is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
'Not enough ground coffee'	There is insufficient ground coffee in the machine; the Z6 stops the operation.	► The next time you prepare a beverage, add more ground coffee (see Chapter 2 'Preparation – Ground coffee').
'Spout is not fitted'	The cover of the dual spout has not been fitted.	► Correctly fit the cover of the dual spout.
'Machine too hot for maintenance'	The system is too hot to start a maintenance program.	► Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

## 7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed, or milk sprays from the dual spout.	The dual spout is dirty.	<ul style="list-style-type: none"> <li>▶ Make sure the cover of the dual spout is correctly fitted.</li> <li>▶ Clean the milk system in the dual spout (see Chapter 5 'Maintenance – Cleaning the milk system').</li> <li>▶ Dismantle and rinse the dual spout (see Chapter 5 'Maintenance – Dismantling and rinsing the dual spout').</li> </ul>
	The milk and milk foam temperature is set too high.	<ul style="list-style-type: none"> <li>▶ Set a lower milk and milk foam temperature (see Chapter 4 'Permanent settings in programming mode – Setting milk and milk foam temperature').</li> </ul>
Coffee only comes out in drips when it is being prepared.	Coffee or ground coffee has been ground too finely and is blocking the system. The water hardness may not have been correctly set.	<ul style="list-style-type: none"> <li>▶ Put the grinder on a coarser setting or use coarser ground coffee (see Chapter 2 'Preparation – Adjusting the grinder').</li> <li>▶ Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').</li> </ul>
'Fill water tank' is not displayed although the water tank is empty.	There is a lot of limescale in the water tank.	<ul style="list-style-type: none"> <li>▶ Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').</li> </ul>
Grinder is making a very loud noise.	There are foreign objects in the grinder.	<ul style="list-style-type: none"> <li>▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').</li> </ul>
'Error 2' or 'Error 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	<ul style="list-style-type: none"> <li>▶ Warm the machine at room temperature.</li> </ul>
Other 'Error' messages are displayed.	–	<ul style="list-style-type: none"> <li>▶ Switch the Z6 off with the On/Off button.</li> <li>▶ Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').</li> </ul>


**i** If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

## 8 Transport and environmentally friendly disposal


### Transport / Emptying the system

Keep the packaging for your Z6. It should be used to protect the machine during transport.

In order to protect the Z6 from frost during transport, the system must be emptied.

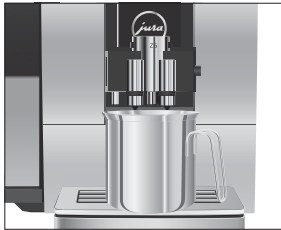

**Precondition:** 'Please select product' is displayed.


- ▶ Remove the milk pipe from the dual spout.
  - ▶ Place a receptacle under the dual spout.
  - ▶ Press the '1 portion milk foam' button.  
'1 portion milk foam', hot steam is discharged from the dual spout.
  - ▶ Remove and empty the water tank.
  - ▶ Turn the Rotary Switch until 'Amount of milk foam' / '60 sec.' is displayed.  
Steam will continue to be discharged from the dual spout until the system is empty.
  - ▶ 'Fill water tank'
  - ▶ Press the On/Off button .
- Your Z6 is switched off.

### Disposal

Please dispose of old machines in an environmentally neutral way.



## 9 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	
Energy consumption 'Save energy' / 'Active'	approx. 6 Wh
Energy consumption 'Save energy' / 'Inactive'	approx. 16 Wh
Pump pressure	static, max. 15 bar
Holding capacity of water tank	84 oz (2.4 l)
Holding capacity of bean container	10 oz (280 g)
Holding capacity of coffee grounds container	max. 20 portions
Cable length	approx. 47 in. (approx. 1.2 m)
Weight	approx. 26 lb (approx. 11.5 kg)
Dimensions (W × H × D)	12.6 × 14.8 × 17.7 in. (32 × 37.5 × 45 cm)

Information for testers (repeat test in accordance with DIN VDE 0701-0702): The central grounding point (CGP) is located on the back of the machine under the service cover.

- Directives** The machine complies with the following directives:
- Standard UL 1082
  - Canadian Standard CSA C22.2 No. 64



## 10 Index

### A

- Adding products to the start screen 26
- Addresses 52
- Adjusting the product settings 25
- Aroma preservation cover
  - Bean container with aroma preservation cover 8
- Automatic switch-off 29

### B

- Bean container
  - Bean container with aroma preservation cover 8
  - Cleaning 44
  - Filling 10
- Bus bar
  - Technical data 48
- Button
  - On/Off button 8

### C

- Caffè latte 17
- Cappuccino 17
- Cappuccino frother cleaning
  - Cleaning the milk system 36
- Central grounding point 48
- Changing a name 27
- Changing the product assigned to a button 26
- Classics 24
- Cleaning
  - Bean container 44
  - Machine 40
- CLEARYL Smart filter cartridge
  - Change 40
  - Insert 39
- Coffee 17
  - 2 coffees 17
- Coffee grounds container 8
- Consistency of grind
  - Adjusting the grinder 20
  - Grinder adjustment switch 8
- Contact details 52
- Cup platform 8
- Customer support 52

### D

- Descaling
  - Machine 42
  - Water tank 44
- Display 9
- Display messages 45
- Display settings 31
- Disposal 47
- Double product 17
- Drip tray 8
- Dual spout
  - Dismantling and cleaning 37
  - Height- and width-adjustable dual spout 8

### E

- Emptying the system 47
- Energy-saving mode 29
- Errors
  - Troubleshooting 46
- Espresso 17
  - 2 espressi 17
- Espresso macchiato 17
- Expert mode 24

### F

- Factory settings
  - Restore factory settings 32
- Filler funnel
  - Filler funnel for ground coffee 9
- Filling
  - Bean container 10
  - Water tank 14
- Filter
  - Change 40
  - Insert 39
- First-time use 11
  - With filter cartridge activation 12
  - Without filter cartridge activation 13
- Flat white 17

### G

- Grinder adjustment switch 8
- Ground coffee 18
  - Measuring spoon for ground coffee 9
  - Powder chute for ground coffee 8
- Grinding point 48

## H

- Hotline 52
- Hot water 20
- Hot-water spout 8

## I

- Important safeguards
  - Safety 4
- Instant coffee
  - Ground coffee 18
- Internet 10

## J

- JURA
  - Contact details 52
  - Internet 10

## L

- Language 33
- Latte macchiato 17

## M

- Machine
  - Cleaning 40
  - Descaling 42
  - Regular maintenance 22
  - Rinsing 36
  - Setting up 10
  - Switching off 22
  - Switching on 21
- Maintenance 35
  - Daily maintenance 21
  - Regular maintenance 22
- Measuring spoon for ground coffee 9
- Messages, display 45
- Milk
  - Connecting milk 14
- Milk and milk foam temperature
  - Set 28
- Milk system
  - Cleaning 36
- Milk system rinsing 36

## P

- Permanently setting the water for the cup size 19
- Permanent settings in programming mode 23
- Personalizing products 26
- Powder chute
  - Powder chute for ground coffee 8
- Power cord 8
- Preparation 15, 17
  - 2 coffees 17
  - 2 espressi 17
  - 2 ristretti 17
  - At the touch of a button 15
  - Caffè latte 17
  - Cappuccino 17
  - Coffee 17
  - Espresso 17
  - Espresso macchiato 17
  - Flat white 17
  - Ground coffee 18
  - Hot water 20
  - Latte macchiato 17
  - Ristretto 17
  - Two specialty coffees 17
  - Using the product selector 15
- Preparation options 15
- Problems
  - Troubleshooting 46
- Product selector view 15
- Product settings 24
  - Adjusting 25
- Programming mode 23
  - Adding products to the start screen 26
  - Automatic switch-off 29
  - Display settings 31
  - Duplicating products 26
  - Energy-saving mode 29
  - Language 33
  - Milk and milk foam temperature 28
  - Product settings 24
  - Querying information 34
  - Renaming a product 27
  - Restore factory settings 32
  - Setting the water hardness 30
  - Unit for amount of water 31
  - Water tank illumination 32

**Q**

Querying information 34

**R**

Regular maintenance 22

Renaming a product 27

Rinsing

Machine 36

Ristretto 17

2 ristretti 17

Rotary Selection 15

Rotary Switch 9

**S**

Safety

Important safeguards 4

Settings

Permanent settings in programming mode 23

Setting up

Setting up the machine 10

Short operating instructions 10

Spout

Height- and width-adjustable dual spout 8

Hot-water spout 8

Switching off 22

Switching on 21

Switch-off

Automatic switch-off 29

Symbol description 3

**T**

Technical data 48

Tel 52

Temperature

Setting milk and milk foam temperature 28

Transport 47

Troubleshooting 46

Two products 17

**U**

Unit for amount of water 31

Use, First-time 11

**W**

Water hardness

Determining the water hardness 10

Setting the water hardness 30

Water tank 8

Descaling 44

Filling 14

Water tank illumination 32

Website 10

## 11 JURA contact details / Legal information

## 11 JURA contact details / Legal information

JURA Elektroapparate AG  
 Kaffeeweltstrasse 10  
 CH-4626 Niederbuchsiten  
 Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm Fri 9 am – 8 pm Sat 9 am – 5 pm	
Distributor Address	20 Craig Road Montvale, NJ 07645	115 Matheson Boulevard East Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.jura.com	www.faema-canada.jura.com

@ You will find additional contact details for your country at [www.jura.com](http://www.jura.com).

**Technical changes** We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your JURA may vary.

**Feedback** Your opinion is important to us! Use the contact details at [www.jura.com](http://www.jura.com).

**Copyright** The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.