



S8 Instructions for Use



Table of contents

Your S8

I٨	MPORTANT SAFEGUARDS	4
C	ontrol elements	8
1	Preparing and using for the first time	10
	JURA on the Internet	10
	Operation with touchscreen display	10
	Setting up the machine	10
	Filling the bean container	11
	Determining the water hardness	11
	First-time use	12
	Connecting milk	
	Connect accessory (with wireless connection)	14
2	Preparation	15
	Ways of preparing a beverage	16
	Ristretto, espresso and coffee	17
	Two ristretti, two espressi and two coffees	
	Latte macchiato, cappuccino and other specialty coffees with milk	17
	Warm milk and milk foam	18
	Ground coffee	19
	Adjusting the grinder	20
	Hot water	20
3	Daily operation	22
	Filling the water tank	
	Switching on the machine	22
	Daily maintenance	
	Regular maintenance	23
	Switching off the machine	24
4	r critical care sectings in programming mode	25
	Product settings	
	Automatic switch-off	28
	Energy-saving mode	28
	Operating instructions	29
	Restore factory settings	30
	Unit for amount of water	
	Display brightness	31
	Setting the water hardness	
	Language	32
	Querying information	33

5	Maintenance	34
	Rinsing the machine	34
	Automatic milk system rinsing	35
	Cleaning the milk system	35
	Dismantling and rinsing the professional fine foam frother	36
	Inserting the filter	37
	Changing the filter	38
	Cleaning the machine	39
	Descaling the machine	40
	Cleaning the bean container	42
	Descaling the water tank	43
6	Display messages	44
7	Troubleshooting	45
8	Transport and environmentally friendly disposal	46
	Transport / Emptying the system	46
	Disposal	46
9	Technical data	47
10	Index	48
11	JURA contact details / Legal information	52

Symbol description

Warnings



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

▲ DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

★ WARNING
 WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.
 ★ CAUTION
 CAUTION, used with the safety alert symbol, indicates a hazardous situation

which, if not avoided, could result in minor or moderate injury.

NOTICE NOTICE is used to address practices not related to personal injury.

Symbols used

- **Prompt to take action.** This symbol means that you are being prompted to perform some action.
- Information and tips to make it even easier to use your S8.

 'Coffee'
 Display message

IMPORTANT SAFFGUARDS

Follow the basic safety precautions

When using electrical appliances, basic safety precautions shall always be followed, to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock and injury to persons, do not immerse power cord, plugs, or body of machine in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
 Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
- The use of an accessory attachment not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- To disconnect, turn any control to 'OFF' then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Use extreme caution when dispensing hot steam, hot water or hot coffee
- For household use only.

SAVE THESE INSTRUCTIONS.

Pass them on to any subsequent user.

Intended use

The appliance is designed and intended for household use only. It shall only be used for coffee preparation and to heat milk and water, according to these instructions. Use for any other purpose will be deemed improper. JURA Elektroapparate AG cannot accept any responsibility for the consequences of improper use.

People, including children, who

- do not have the physical, sensory or mental capabilities to use the appliance safely or
- are inexperienced or lack knowledge in how to use the appliance safely

must be supervised by a responsible person when using it, or must be instructed in how to use it correctly.

Special power cord set instructions

- A short power-supply cord is to be provided to reduce risks resulting from becoming entangled in or tripping over a longer cord.
- The cord shall be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over.
- This appliance has a 3-pin grounded plug.
- Do not modify the plug in any way.

Extension cords are available an may be used if care is exercised in their use.

If the user chooses to use an extension cord.

- the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and
- if the appliance is of the grounded type, the extension cord should be a grounding type 3-wire cord, and
- the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over.

⚠ WARNING



To reduce the risk of fire or electric shock, DO NOT remove any service covers. DO NOT modify the appliance in any way that is not described in these instructions. NO user serviceable parts included. Repair MUST be done by authorized personnel only.

In the event of signs of damage, for example if there is a smell of burning, unplug the machine immediately from outlet and contact IURA customer service.

IMPORTANT SAFEGUARDS

♠ CAUTION

This appliance is for household use. Any servicing other than cleaning and user maintenance shall be performed by an authorized service representative:

- Do not immerse base in water or try to disassemble.
- Do not put the appliance or any individual parts in the dishwasher
- Check voltage to be sure that the voltage indicated on the name plate complies with your voltage. The name plate is located on the underside of the appliance.
- Never use warm or hot water to fill the water container. Use cold water only.
- Keep your hands and the cord away from hot parts of the appliance during operation.

There is a risk of scalds or burns on the spouts and the cappuccino frother / nozzle.

- Keep children away.
- Do not touch any hot parts. Use the handles or knobs provided.
- Ensure that the cappuccino frother / nozzle is correctly fitted and clean. If incorrectly fitted or if they become blocked, the cappuccino frother or its parts might come off.

NOTICE




- Never clean with scouring powders or hard implements.
- Ensure that the ventilation slots are not covered.
- Never pull out the drip tray during the brewing process. Only pull the drip tray when the display instructs you or when the appliance is ready for use.

NEVER DO (or you will void your warranty protection):


- Never fill instant coffee, chocolate mix etc. into the bean container or ground coffee funnel (filler funnel for ground coffee). It will damage the functioning of the brewing chamber.
- Never fill sugar coated coffee beans into the bean container.
 In case of doubt, call your dealer.
- Never fill anything other than coffee beans into the bean container (no chocolate, no rice, no nuts, no spices, nothing other than roasted coffee beans).
- Never fill frozen beans into the bean container. If you store beans in the freezer, let them thaw 3 to 4 hours before filling them into the bean container.
- Never fill anything but fresh, cold and clean water into the water tank, except when decalcifying.
- Never use mineral or carbonated water. You can use tap water, bottled water, spring water and reverse osmosis water.
- Never do anything with the machine which is not described in these instructions. In case of doubt, call your dealer.

Control elements

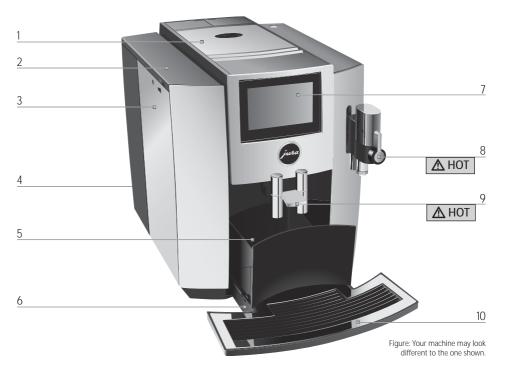

- 1 Bean container with aroma preservation cover
- 2 Water tank cover
- 3 Water tank
- 4 Power cord (back of the machine)
- 5 Coffee grounds container
- 6 Drip tray

- 7 Touchscreen display
- 8 Milk system with professional fine foam frother
- 9 Height-adjustable coffee spout
- 10 Cup platform

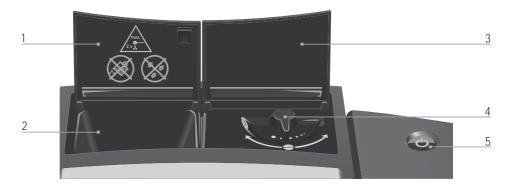

- 1 Filler funnel cover
- 2 Filler funnel for ground coffee
- 3 Cover cap for grinder adjustment switch
- 4 Grinder adjustment switch
- 5 On/Off button ♂

Service socket for optional JURA Smart Connect



Accessories

Container for milk system cleaning



Measuring spoon for ground coffee



Hot-water nozzle



1 Preparing and using for the first time

JURA on the Internet

Visit us on the Internet. You can download **short operating instructions** for your machine from the JURA website (www.jura.com). You will also find interesting and up-to-date information on your S8 and on every aspect of coffee.

If you need assistance with using your machine, you can find this at www.jura.com/service.

Operation with touchscreen display



Your S8 features a touchscreen display. There are two ways of operating the touch display:

Touch

Touch the display with your finger, for example to start coffee preparation or undertake various settings in programming mode



Slide

Move your finger across the display from left to right or from top to bottom (or vice versa). For example, you can select one of the specialty coffees in the product selector view or switch between program items in programming mode.

Setting up the machine



When setting up your S8, please note the following:

- Place the S8 on a horizontal surface that is not sensitive to water.
- Choose a spot for your S8 which protects the machine against overheating. Ensure that the ventilation slots are not covered.

Filling the bean container

NOTICE

Coffee beans which have been treated with additives (e.g. sugar), ground coffee or freeze-dried coffee will damage the grinder.

- Only use roasted, untreated coffee beans to fill the bean container.
 - ► Remove the aroma preservation cover.
 - Remove any dirt or foreign objects from inside the bean container.
 - Fill the bean container with coffee beans and close the aroma preservation cover.

Determining the water hardness

When you use the machine for the first time, you must set the water hardness. If you do not know the hardness of your water, you can find this out first. Use the Aquadur® test strips supplied with the machine.

- ► Hold the test strip briefly (for 1 second) under flowing water. Shake off the water.
- ► Wait for about 1 minute.
- ► You will then be able to read the degree of water hardness from the discoloration of the Aquadur® test strip and the description on the packaging.



Level	Display German	Degrees of general	Parts per	Indicator Strip number
	Degree (°dH)	hardness (°dGH)	million (ppm)	of 'reddish' fields
Not active	-	_	-	_
Very soft water	<3	<3	< 53.4	None
Soft water	> 4	> 4	> 71	1
Hard water	> 8.4	> 8.4	> 150	2
Very hard water	> 14	> 14	> 250	3

First-time use

⚠ WARNING

If the machine is operated with a defective power cord, there is a danger of potentially fatal electric shock.

- ► Never use a machine which is damaged.
- ► Never use a machine which has a defective power cord.

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- Only fill the water tank with fresh, cold water.
- i The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode Unit for amount of water').

Precondition: The bean container has been filled.

- ► Insert the mains plug into a power socket.
- ► Press the On/Off button o to switch the S8 on. 'Choose language' / 'English'
- i To display more languages, move your finger either downwards or upwards in the selection list until the desired language comes into focus.
 - ► Touch 'Save'.
 - 'Saved' appears briefly on the display to confirm the setting. 'Water hardness'
- i If you do not know the hardness of your water, you must find this out first (see Chapter 1 'Preparing and using for the first time Determining the water hardness').
 - Move your finger across the display to change the water hardness setting, e.g. to '25 °dH'.
 - ► Touch 'Save'.

'Saved' appears briefly on the display. 'Insert filter'

1 Preparing and using for the first time





- Place one receptacle under the coffee spout and another under the fine foam frother.
- ► Remove the water tank and rinse it with cold water.
- ► Fit the filter cartridge extension supplied on top of the CLEARYL filter cartridge Smart.
- ► Insert the filter cartridge with its extension into the water tank
- ► Turn the filter cartridge clockwise until it audibly clicks into place.
- ► Fill the water tank with fresh, cold water and reinsert the tank.
- i The machine automatically detects that you have just inserted the filter cartridge.

'Filter operation' / 'Saved'

'Filter is being rinsed', the filter is rinsed. Water flows out of the fine foam frother.

i The water may be slightly discolored. This is not harmful to health and does not affect the taste.

'System is filling' 'Empty drip tray'

- ► Empty the drip tray and put it back into the machine.
- ▶ Place a receptacle under the coffee spout.


'Machine is heating'

'Machine is rinsing', the system is rinsed. The rinse stops automatically. The start screen is displayed. Your S8 is ready for use.

i If the filter is active, this is indicated by a blue filter symbol at the top of the display.

1 Preparing and using for the first time

Connecting milk

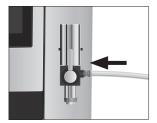

Your S8 creates fine, creamy, feather-light milk foam with a perfect consistency. The most important requirement for frothing milk is a milk temperature of 39–46 °F (4–8 °C). We would therefore recommend using a milk cooler or a milk container.

- ► Remove the protective cover from the milk system.
- ► Connect the milk pipe to the milk system.
- Connect the other end of the milk pipe to a milk container or a milk cooler.

Connect accessory (with wireless connection)

You have the option of connecting your S8 wirelessly to a compatible accessory. To do this, the JURA Smart Connect must be plugged into the service socket.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- Move your finger across the display until 'Connect accessory' is displayed in the center.
- ► Touch 'Connect accessory'.

 'Connect accessory'
- ► Now follow the instructions on the display to connect the accessory to the S8.

2 Preparation

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- Use extreme care when handling hot liquid or steam.
- Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water and seek medical attention.
- Keep children AWAY.

Basic information about preparing drinks:

- During the grinding operation you can change the coffee strength of single products. To do this, move your finger across the display.
- During preparation you can change the preset amounts (e.g. amount of water or milk foam). To do this, move your finger across the display.
- You can stop preparation at any time. To do this, touch 'Cancel'.
- **1** The water volume is given as standard in 'oz'. You can change this setting to 'ml' in programming mode (see Chapter 4 'Permanent settings in programming mode Unit for amount of water').

Coffee tastes best served hot. A cold porcelain cup cools the beverage – and impairs the taste. We therefore recommend prewarming the cups. The full coffee aroma can develop only in prewarmed cups. You can purchase a JURA cup warmer from your specialized dealer.

You can make **permanent settings** for all products in programming mode (see Chapter 4 'Permanent settings in programming mode – Adjusting the product settings').

2 Preparation

Ways of preparing a beverage

The S8 offers various ways of preparing a specialty coffee, milk or hot water.

Preparation using the start screen: Simply touch the desired product. The following products are displayed as standard on the start screen:

'Espresso'	'Coffee'	'2 x Coffee'	'Hot water'
'Cappuccino'	'Latte macchiato'	'Flat White'	'Milk foam'

Preparation using the product selector view: Only some of the products you can prepare are shown on the start screen. As soon as you touch the product selector symbol in the top right, more products are displayed in a **product selector view.**

Move your finger across the display to bring the desired product into focus. Touch the product to start preparation. The following additional products are shown in the product selector view:

- 'Milk'
- 'Caffè latte'
- 'Hot water for green tea'
- '2 x Ristretto'
- '2 x Espresso'
- 'Ristretto'
- 'Macchiato'
- **1** The product selector view disappears automatically after 10 seconds if no preparation is started.
- **1** The last product selected always appears first in the product selector view.
- You can move any of the standard products programd in your S8 to your preferred position on the start screen and make it one of your favorites. You can duplicate and personalise your favorite specialty coffees by giving them a new product name and individual settings (e.g. amount and coffee strength) (see Chapter 4 'Permanent settings in programming mode Adjusting the product settings'). Please note that the descriptions provided in the following sections always refer to the default settings.

Ristretto, espresso and coffee



Example: Proceed as follows to prepare one coffee.

Precondition: The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ► Touch 'Coffee'.

Preparation starts. The preset amount of water for coffee flows into the cup.

Preparation stops automatically. The start screen is displayed.

Two ristretti, two espressi and two coffees



Example: Proceed as follows to prepare **two ristretti** (using product selector view).

Precondition: The start screen is displayed.

- ▶ Place two cups under the coffee spout.
- ► Touch the product selector symbol (top right) to go to the product selector view.
- ► Move your finger across the display until '2 x Ristretto' is displayed in the center.
- ► Touch '2 x Ristretto' to start preparation.

Preparation starts. The preset amount of water for coffee flows into the cups. Preparation stops automatically. Your S8 is once more ready for use.

Latte macchiato, cappuccino and other specialty coffees with milk Your S8 prepares latte macchiato, cappuccino and other specialty coffees with milk at the touch of a button. There is no need to move the glass or cup.

Example: Proceed as follows to prepare one latte macchiato.

Precondition: The start screen is displayed. Milk is connected to the fine foam frother.

► Place a glass under the fine foam frother.



2 Preparation



- Set the selector switch for the professional fine foam frother to the Milk Foam position (see image).
- ► Touch 'Latte macchiato'. 'Latte macchiato' appears and the preset amount of milk foam flows into the glass.
- i There is a short interval while the hot milk separates from the milk foam. This allows the typical layers of a latte macchiato to form.

Coffee preparation starts. The preset amount of water for espresso flows into the glass. Preparation stops automatically. Your S8 is once more ready for use.

i 15 minutes after preparation, the fine foam frother is automatically rinsed (see Chapter 5 'Maintenance – Automatic milk system rinsing'). Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 'Maintenance – Cleaning the milk system').

Warm milk and milk foam





Example: Proceed as follows to prepare hot milk.

Precondition: The start screen is displayed. Milk is connected to the milk system.

► Place a cup under the fine foam frother.

- ► Set the selector switch for the professional fine foam frother to the Milk position (see image).
- i If you wish to prepare milk foam, set the selector switch to the Milk Foam position (selector switch in vertical position).

► Touch 'Milk foam'.

The milk foam is prepared. The preset amount of milk flows into the cup.

Preparation stops automatically. Your S8 is once more ready for use.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see Chapter 5 'Maintenance – Cleaning the milk system').

Ground coffee

You can choose to use a second coffee variety, for example decaffeinated coffee, with the filter funnel for ground coffee.

- i Never add more than two level measuring spoons of ground coffee.
- i Use ground coffee which is not ground too finely. Very fine coffee can block up the system so that the coffee only comes out in drips.
- i If you did not fill the machine with a sufficient amount of ground coffee, 'Not enough ground coffee' is displayed and the S8 stops the operation.
- i The desired specialty coffee must be prepared within approximately one minute after filling with the ground coffee. Otherwise the S8 stops the operation and is once more ready for use.

All specialty coffees with ground coffee are always prepared following the same model.

Example: Proceed as follows to prepare one espresso using ground coffee.

- ► Open the cover of the filler funnel for ground coffee. 'Please add ground coffee'
- ► Place one level measuring spoon of ground coffee into the filler funnel.
- ► Close the cover of the filler funnel.



2 Preparation

► Touch 'Espresso'.

Preparation starts. 'Espresso' appears and the preset amount of water for espresso flows into the cup.

Preparation stops automatically. Your S8 is once more ready for use.

Adjusting the grinder

You can adjust the grinder to suit the degree of roast of your coffee.

NOTICE

If you adjust the consistency of grind when the grinder is not operating, the grinder adjustment switch could be damaged.

 Only adjust the consistency of grind when the grinder is running.

The consistency of grind is correct if the coffee flows regularly from the coffee spout. In addition a fine, thick crema forms.

Example: Proceed as follows to change the consistency of grind **during** the preparation of an espresso.

Precondition: The start screen is displayed.

- ▶ Place a cup under the coffee spout.
- ► Open the cover of the grinder adjustment switch.
- ► Touch 'Espresso' to start preparation.
- ► Turn the grinder adjustment switch to the desired position while the grinder is running.

The preset amount of water flows into the cup. Preparation stops automatically.



Hot water

The S8 allows you to prepare different variants of hot water: 'Hot water' and 'Hot water for green tea'.

To obtain a perfect water flow, use the hot-water nozzle supplied.

△ CAUTION

There is a danger of scalding from hot water splashes.

Avoid direct contact with the skin.

Example: Proceed as follows to prepare hot water for **green tea. Precondition:** The start screen is displayed.

- ► Touch the product selector symbol (top right) to go to the product selector view.
- ► Move your finger across the display until 'Hot water for green tea' is displayed in the center.
- ► Touch 'Hot water for green tea'.
 - 'Insert hot-water nozzle'
- ► Remove the professional fine foam frother from the milk system.
- ► Fit the hot-water nozzle on the milk system.
- ► Touch 'Next'.
 - 'Hot water for green tea', the preset amount of water flows into the cup.
 - Preparation stops automatically. Your S8 is once more ready for use.



3 Daily operation

3 Daily operation

Filling the water tank

Daily maintenance of the machine and hygiene when handling milk, coffee and water are key to a perfect coffee result in the cup every time. You should therefore change the water **daily.**

NOTICE

Milk, sparkling mineral water or other liquids can damage the water tank or the machine.

- Only fill the water tank with fresh, cold water.
 - ► Open the water tank cover.
 - ▶ Remove the water tank and rinse it with cold water.
 - Fill the water tank with fresh, cold water and reinsert the tank.
 - ► Close the water tank cover.

Switching on the machine



- ▶ Place a receptacle under the coffee spout.
- ► Press the On/Off button 🖒 to switch the S8 on.
 - 'Welcome to JURA'
 - 'Machine is heating'
 - 'Machine is rinsing', the system is rinsed. The rinse stops automatically. Your S8 is ready for use.

Daily maintenance



To ensure that you get many years of reliable service out of your S8 and to guarantee the optimum coffee quality, the machine requires daily maintenance.

- ▶ Pull out the drip tray.
- Empty the coffee grounds container and the drip tray. Rinse them both with warm water.
- Always empty the coffee grounds container when the machine is switched on. This is the only way of resetting the coffee grounds counter.
 - ► Refit the coffee grounds container and the drip tray.
 - ► Rinse the water tank with clean water.

- Clean the milk system (see Chapter 5 'Maintenance Cleaning the milk system').
- Remove the milk pipe and rinse it thoroughly under running water.
- ► Dismantle and rinse the milk system (see Chapter 5 'Maintenance Dismantling and rinsing the professional fine foam frother').
- ► Wipe the surface of the machine with a clean, soft, damp cloth (e.g. microfiber cloth).
- i To clean the display, you can disable it under 'Maintenance status' / 'Lock display'.

You will find more information about caring for your S8 in programming mode under 'Maintenance status' / 'Maintenance information'.

Regular maintenance

Carry out the following maintenance actions **regularly** or **as required:**

- In the interests of hygiene, we recommend changing the milk pipe and interchangeable milk spout on a regular basis (approximately every 3 months). Replacements are available from specialized dealers.
- Clean the inside of the water tank, e.g. with a brush. Further information about the water tank is provided in these instructions for use (see Chapter 5 'Maintenance – Descaling the water tank').
- Traces of milk and coffee may stick to the top and bottom of the cup platform. If this happens, clean the cup platform.

3 Daily operation

Switching off the machine



When the S8 is switched off, the system is automatically rinsed if a specialty coffee has been prepared. If milk has been prepared, you will also be prompted to clean the milk system.

- ► Place one receptacle under the coffee spout and another under the milk system.
- ▶ Press the On/Off button 🖒.
- i If milk has been prepared, you will be prompted to clean the milk system ('Clean the milk system'). After 10 seconds the switch-off process continues automatically.

If milk has been prepared but you have not started milk system cleaning, the milk system is rinsed first ('Milk system is being rinsed').

'Machine is rinsing', the system rinses itself. The operation stops automatically. Your S8 is switched off.

⚠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- ► Use extreme care when handling hot liquid or steam.
- ► Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water an seek medical attention.
- ► Keep children AWAY.

Touch 'P' to enter programming mode. Move your finger across the display to navigate through the program items and permanently save the desired settings. The following settings can be made:

Program	Sub-item	Explanation		
item				
'Machine	'Switch off after'	► Set the time after which the S8 should switch off		
settings'		automatically.		
	'Save energy'	► Activate energy-saving mode.		
	'Operating instructions'	► Activate/deactivate the operating instructions on how		
		to use the professional fine foam frother and hot-water		
		nozzle.		
	'Factory setting'	► Reset the machine to its factory setting.		
	'Units'	► Select the unit for the amount of water.		
	'Display'	► Change the display brightness.		
	'Water hardness'	► You can set the water hardness of the water used.		
	'Choose language'	► Select your language.		
	'Product counter',	► Keep track of all products prepared and view the		
	'Maintenance counter'	number of maintenance programs performed.		
	'Demo mode'	You cannot prepare any products in demo mode.		
	'Version'	Software version		

Program	Sub-item	Explanation
item		
'Maintenance status'	'Clean the milk system', 'Clean', 'Change filter' (only if filter is fitted), 'Descale', 'Rinse', 'Lock display', 'Maintenance information'	► Here you can start the required maintenance program or find out what maintenance actions are required.
'Product settings'		► Select your settings for specialty coffees and hot water.

Product settings

♠ WARNING

Hot coffee, hot steam and hot water can cause scalding. Scalding is a serious burn.

- Use extreme care when handling hot liquid or steam.
- ► Allow liquid to cool down before drinking.
- In the event of scalding, rinse affected area with cold water an seek medical attention.
- Keep children AWAY.

Touch a product on the start screen for **about 2 seconds** to view the list of setting options:

- 'Product settings': Specify individual settings such as coffee strength, amount of water, etc.
- 'Product name': Change the name of the product.
- 'Delete': Remove a product from the start screen.
- 'Replace product': Replace the products on the start screen with your favorites.
- 'Copy product': Duplicate any product, for example to create a variant with a new product name and individual settings.
- 'Double product' (not for products with milk or hot water):
 Create a double product of the desired specialty.
- i You can only change the settings of products that are stored on the start screen.

Adjusting the product

settings

The following settings can be set permanently for all specialty coffees, milk and hot water:

Product	Coffee	Amount	More settings
D'abaatha	strength	C. ((0.F 2.F	Town on the order of the latest
Ristretto,	10 levels	Coffee: 0.5 oz – 2.5 oz	Temperature (low, normal, high),
espresso		(15 ml – 80 ml)	product name, delete/replace/copy/
			double product
Coffee	10 levels	Coffee: 0.5 oz – 8.0 oz	Temperature (low, normal, high),
		(25 ml – 240 ml)	product name, delete/replace/copy/
			double product
Two ristretti,	-	Coffee: the amount set	Temperature (as for single product),
two espressi,		for the single product is	product name, delete product
two coffees		doubled.	
Cappuccino,	10 levels	Coffee: 0.5 oz – 8.0 oz	Temperature (low, normal, high),
flat white,		(25 ml – 240 ml)	product name, delete/replace/
caffè latte		Milk: 1 sec. – 120 sec.	copy product
Latte macchiato	10 levels	Coffee: 0.5 oz – 8.0 oz	Temperature (low, normal, high),
		(25 ml – 240 ml)	product name, delete/replace/
		Milk: 1 sec. – 120 sec.	copy product
		Interval: 0 sec. – 60 sec.	
Espresso	10 levels	Coffee: 0.5 oz – 2.5 oz	Temperature (low, normal, high),
macchiato		(15 ml – 80 ml)	product name, delete/replace/
		Milk: 1 sec. – 120 sec.	copy product
Milk foam,	-	Milk: 1 sec. – 120 sec.	Product name, delete/replace/
milk			copy product
Hot water,	-	Water: 0.5 oz – 15.0 oz	Temperature (low, normal, high),
hot water for		(25 ml – 450 ml)	product name, delete/replace/
green tea			copy product

Permanent settings in programming mode always follow the same model.

Example: Proceed as follows to change the coffee strength for one espresso.

Precondition: The start screen is displayed.

► Touch 'Espresso' for about 2 seconds until the list of possible settings is displayed.

- ► Touch 'Product settings'.
 - 'Espresso'
- Move your finger across the display until 'Coffee strength' is displayed in the center.
- ► Now move your finger to the left or right to change the setting for the coffee strength.
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
- ► Touch 'Back' the number of times needed to display the start screen again.

Automatic switch-off

By instructing your S8 to automatically switch itself off, you can cut down your energy consumption. If this function is activated, your S8 switches off automatically after the preset time following the last action on the machine.

You can set the automatic switch-off to 15 minutes, 30 minutes or 1–9 hours.

Precondition: The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- ► Touch 'Switch off after'.
 - 'Switch off after'
- Now move your finger to the left or right to change the switch-off time
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
 - 'Switch off after'
- ► Touch 'Back' the number of times needed to display the start screen again.

Energy-saving mode

In the program item 'Machine settings' | 'Save energy' you can set an energy-saving mode:

- Save energy' | '1'
 - Soon after the last preparation, the S8 stops heating up. The 'ESM' symbol (E.S.M.®, Energy Save Mode) is displayed.

- Before you can prepare a specialty coffee, specialty coffee with milk, or hot water, the machine must heat up.
- "Save energy" | "0"
 - All specialty coffees, specialty coffees with milk and hot water can be prepared without having to wait.

Example: Proceed as follows to switch energy-saving mode off. **Precondition:** The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- Move your finger across the display until 'Save energy' is displayed in the center.
- ► Touch 'Save energy'.
 - 'Save energy'
- ► Now move your finger across the controller and set it to '0'.
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
 - 'Save energy'
- ► Touch 'Back' the number of times needed to display the start screen again.

Operating instructions

In the program item 'Machine settings' / 'Operating instructions' you can define whether the operating instructions on how to use the professional fine foam frother and hot-water nozzle should be displayed during preparation.

Example: How to stop the operating instructions from being displayed.

Precondition: The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- ► Move your finger across the display until 'Operating instructions' is displayed in the center.
- ► Touch 'Operating instructions'.

 'Operating instructions'

29

- ► Now move your finger across the controller and set it to '0'.
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
 - 'Operating instructions'
- ► Touch 'Back' the number of times needed to display the start screen again.

Restore factory settings

In the program item 'Machine settings' | 'Factory setting' the machine can be reset to its factory setting. Your S8 then switches off.

Precondition: The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- Move your finger across the display until 'Factory setting' is displayed in the center.
- ► Touch 'Factory setting'.
 - 'Factory setting' / 'Reset the machine to the factory settings?'
- ► Touch 'Yes'.
 - 'Saved' appears briefly on the display.

Your S8 is switched off.

Unit for amount of water

In the program item 'Machine settings' / 'Units' you can select the unit used for the amount of water.

Example: Proceed as follows to change the unit for the amount of water from 'ml' to 'oz'.

Precondition: The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- Move your finger across the display until 'Units' is displayed in the center.
- ► Touch 'Units'.

'Units'

- ► Now move your finger to the left or right to change the setting to 'oz'.
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
 'Units'
- ► Touch 'Back' the number of times needed to display the start screen again.

Display brightness

In the program item 'Machine settings' / 'Display' you can set the display brightness (as a percentage).

Precondition: The start screen is displayed.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- ► Move your finger across the display until 'Display' is displayed in the center.
- ► Touch 'Display'.
 - 'Display'
- ► Now move your finger to the left or right to change the setting.
- ► Touch 'Save'.
 - 'Saved' appears briefly on the display.
 - 'Display'
- ► Touch 'Back' the number of times needed to display the start screen again.

Setting the water hardness

The harder the water is, the more frequently the S8 needs to be descaled. It is therefore important to set the water hardness accurately.

The water hardness was set when the machine was first used. You can change this setting at any time.

The water hardness can be adjusted on a continuous scale between 1° dH and 30° dH.

- ► Touch 'P'.
 - 'Machine settings'

- ► Touch 'Machine settings'.
 - 'Switch off after'
- ► Move your finger across the display until 'Water hardness' is displayed in the center.
- ► Touch 'Water hardness'.
 - 'Water hardness'
- ► Now move your finger to the left or right to change the setting.
- ► Touch 'Save'.
- 'Saved' appears briefly on the display.
- 'Water hardness'
- ► Touch 'Back' the number of times needed to display the start screen again.

Language

In this program item you can set the language used by your S8.

Example: Proceed as follows to change the language from 'English' to 'Deutsch'.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- Move your finger across the display until 'Choose language' is displayed in the center.
- ► Touch 'Choose language'.
 - 'Choose language'
- ► Move your finger across the display until the desired language, e.g. 'Deutsch', is displayed in the center.
- ► Touch 'Save'.
 - 'Gespeichert' appears briefly on the display.
 - 'Sprachauswahl'
- ► Touch 'Zurück' the number of times needed to display the start screen again.

Querying information

In the program item 'Machine settings' you can view the following information:

- 'Product counter': Number of prepared coffee specialty coffees, specialty coffees with milk and hot water
- 'Maintenance counter': Number of maintenance programs performed (cleaning, descaling etc.)
- 'Version': Software version

Example: Proceed as follows to view the number of specialty coffees prepared.

- ► Touch 'P'.
 - 'Machine settings'
- ► Touch 'Machine settings'.
 - 'Switch off after'
- ► Move your finger across the display until 'Product counter' is displayed in the center.
- ► Touch 'Product counter'.
 - 'Product counter'
- ► Touch 'Next' to view the number of other products.
- ► Touch 'Back' the number of times needed to display the start screen again.

5 Maintenance

5 Maintenance

⚠ WARNING

Use of maintenance products that are harmful to health and discharge of liquids during maintenance program. Harmful if swallowed. Irritating to eyes and skin.

- Keep children AWAY.
- Keep children away from the machine while it is performing a maintenance program.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- When using do not eat or drink.
- Keep maintenance products away from food, drink and animal food.
- Keep container tightly closed and dry. Keep in a cool place.

Your S8 has the following integrated maintenance programs:

- Rinsing the machine ('Rinse')
- Cleaning the milk system ('Clean the milk system')
- Changing the filter ('Change filter') (only if filter is fitted)
- Cleaning the machine ('Clean')
- Descaling the machine ('Descale')
- i Clean the machine, descale the machine or change the filter when you are prompted to do so.
- i Touch 'P' to view the list of maintenance programs ('Maintenance status'). When the bar is completely filled with red, your S8 will prompt you to perform the appropriate maintenance program.
- i In the interests of hygiene, you should clean the milk system daily when you have been preparing milk.

Rinsing the machine



You can initiate the rinse operation manually at any time.

- ► Place one receptacle under the coffee spout and another under the fine foam frother.
- ► Touch ' P '.
 - 'Machine settings'
- ► Move your finger across the display until 'Maintenance status' is displayed in the center.

- ► Touch 'Maintenance status'.
 - 'Clean'
- Move your finger across the display until 'Rinse' is displayed in the center.
- ► Touch 'Rinse' to start the rinse operation.

'Machine is rinsing'

'Milk system is being rinsed'

The rinse stops automatically. The start screen is displayed.

Automatic milk system rinsing

15 minutes after milk preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the milk system after preparing milk.

Cleaning the milk system

To ensure that the milk system always works properly, you must clean it **daily** when you have been preparing milk.

⚠ WARNING

Non-recommended cleaning agents will not optimally remove milk residues. This may cause the cappuccino frother to become blocked and fly off the machine. Discharge of hot steam.

Use only original JURA milk system cleaner.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- Avoid contact with skin and eyes.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- i JURA milk system cleaner is available from specialized dealers.
- i To clean the milk system, use the container supplied.

Precondition: The start screen is displayed. 'Clean the milk system' is displayed.

► Touch 'Clean the milk system'.

5 Maintenance





- ► Touch 'Clean the milk system' again.
- ► Touch 'Start'.
- ► Touch 'Start' again.

'Milk system cleaner' | 'Connect the milk tube' | 'Fresh water'

- ► Remove the milk pipe from the milk container or milk cooler.
- Add milk system cleaner to the front part of the container up to the **bottom mark** (indicated by 23).
- ► Then fill with water up to the **upper mark.**
- ▶ Place the container under the fine foam frother.
- ► Connect the milk pipe to the container.
- i To connect the milk pipe to the container correctly, the pipe must be fitted with a connector.
 - ► Touch 'Next'.

'Milk system is being cleaned'


The operation is interrupted, 'Fresh water'.

- ► Rinse the container thoroughly and fill the front part with fresh water up to the **upper mark**.
- ► Place this under the fine foam frother and reconnect the milk pipe to the container.
- ► Touch 'Next'.

'Milk system is being cleaned'


The operation stops automatically.


Dismantling and rinsing the professional fine foam frother

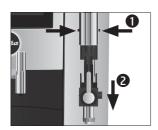


To make sure the professional fine foam frother works properly, and in the interests of hygiene, it must be dismantled and rinsed **daily** if you have been preparing milk.

 - Remove the milk pipe and rinse it thoroughly under running water.
- ► Remove the professional fine foam frother.

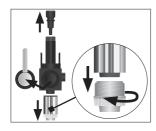



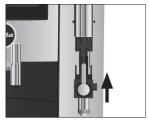

- ► Dismantle the fine foam frother into its individual parts.
- ▶ Rinse all the parts under running water. If there are severely dried-on milk residues, firstly immerse the individual parts in a solution of 8.5 oz (250 ml) cold water and 1 capful of JURA milk system cleaner. Then rinse the parts thoroughly.
- ► Re-assemble the professional fine foam frother.
- **i** Ensure that all individual parts are correctly and firmly connected to ensure optimum operation of the professional fine foam frother.
 - ▶ Re-fit the fine foam frother on the milk system.

Inserting the filter

Your S8 no longer has to be descaled if you are using the CLEARYL Smart filter cartridge.

Precondition: The start screen is displayed.

- ► Remove and empty the water tank.
- ► Fit the filter cartridge extension supplied on top of a CLEARYL Smart filter cartridge.
- ► Insert the filter cartridge with its extension into the water tank.
- ► Turn the filter cartridge clockwise until it audibly clicks into place.



- Fill the water tank with fresh, cold water and reinsert the tank.
- i The machine automatically detects that you have just inserted the filter cartridge.

'Saved' appears briefly on the display.

'Filter is being rinsed', water flows directly into the drip tray. Rinsing of the filter stops automatically.

'Empty drip tray'

► Empty the drip tray and coffee grounds container and put them back into the machine.

The start screen is displayed.

i If the filter is active, this is indicated by a blue filter symbol at the top of the display.

Changing the filter

- i Once the filter cartridge stops working (depending on the water hardness setting), the S8 will prompt you to change the filter.
- i CLEARYL Smart filter cartridges are available from specialized dealers.

Precondition: The start screen is displayed. 'Change the filter' is displayed.

- ► Touch 'Change the filter'.
- ► Touch 'Change the filter' again.

'Change filter'

- ► Remove and empty the water tank.
- ► Turn the filter cartridge anticlockwise and remove it along with the extension from the water tank.
- ► Fit the filter cartridge extension on top of a **new** CLEARYL Smart filter cartridge.
- ► Insert the filter cartridge with its extension into the water tank.
- ► Turn the filter cartridge clockwise until it audibly clicks into place.



 Fill the water tank with fresh, cold water and reinsert the tank.

'Saved' appears briefly on the display. The machine has automatically detected that you have just changed the filter cartridge.

'Filter is being rinsed', water flows directly into the drip tray. Rinsing of the filter stops automatically.

'Empty drip tray'

► Empty the drip tray and coffee grounds container and put them back into the machine.

The start screen is displayed.

i If the filter is active, this is indicated by a blue filter symbol at the top of the display.

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the S8 will prompt you to clean it.

⚠ WARNING

Non-recommended (e.g. liquid) cleaning agents may contain substances that could damage the machine or leave residues.

Use only original JURA cleaning tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating cleaning agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water and seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.
- **1** The cleaning program lasts approximately 20 minutes.
- i Do not interrupt the cleaning program. The quality of cleaning will be impaired if you do so.
- **i** JURA cleaning tablets are available from specialized dealers.

Precondition: The start screen is displayed. 'Clean machine' is displayed.

► Touch 'Clean machine'.

'Clean'

- ► Touch 'Clean'.
- ► Touch 'Start'.
- ► Touch 'Start' again.

'Empty coffee grounds container'

- ► Empty the drip tray and coffee grounds container and put them back into the machine.
- ► Place one receptacle under the coffee spout and another under the fine foam frother.
- ► Touch 'Next'.

'Machine is being cleaned' appears and water flows out of the coffee spout and the fine foam frother.

The operation is interrupted, 'Add cleaning tablet'.

- ▶ Open the cover of the filler funnel for ground coffee.
- ► Insert a JURA cleaning tablet into the filler funnel.
- ► Close the cover of the filler funnel.
- ► Touch 'Next'

'Machine is being cleaned', water flows repeatedly out of the coffee spout and the fine foam frother.

The operation stops automatically.

'Empty coffee grounds container'

► Empty the drip tray and coffee grounds container and put them back into the machine.

Cleaning is now complete. The start screen is displayed.





Descaling the machine

The S8 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

i If you are using a CLEARYL Smart filter cartridge, you will not be prompted to descale.

⚠ WARNING

Non-recommended descaling agents (e.g. vinegar) may contain substances that could damage the machine or leave residues.

 Use only original JURA descaling tablets. These are specially formulated for your machine.

⚠ WARNING

Harmful and irritating descaling agent. Harmful if swallowed. Irritating to eyes and skin.

- ► Keep children AWAY.
- Avoid contact with skin and eyes.
- Avoid generation of dust. Do not inhale dust.
- After contact with skin, wash immediately with plenty of water. In case of skin irritation, seek medical advice.
- After eye contact, immediately flush eyes with plenty of water.
 Remove contact lenses. Seek medical advice.
- If swallowed, rinse mouth immediately and drink large quantities of water. Do not induce vomiting. Seek medical advice immediately and show label.

NOTICE

If the descaling operation is interrupted, there may be damage to the machine.

- ► Allow the descaling program to run to the end.
- **1** The descaling program lasts approximately 45 minutes.
- i | JURA descaling tablets are available from specialized dealers.

Precondition: The start screen is displayed. 'Decalcify machine' is displayed.

- ► Touch 'Decalcify machine'.
 - 'Descale'
- ► Touch 'Descale'.
- ► Touch 'Start'.
- ► Touch 'Start' again.
 - 'Empty drip tray'
- Empty the drip tray and coffee grounds container and put them back into the machine.

'Pour descaling agent into water tank'

- ► Remove and empty the water tank.
- ► Completely dissolve 3 JURA descaling tablets in a receptacle holding 17 oz (500 ml) of water. This may take several minutes.
- Pour the solution into the empty water tank and insert it into the machine.







- Place one receptacle under the coffee spout and another under the fine foam frother.
- ► Touch 'Next'.

'Machine is being descaled' appears and water flows out of the fine foam frother repeatedly.

The operation is interrupted, 'Empty drip tray'.

► Empty the drip tray and coffee grounds container and put them back into the machine.

'Fill water tank'

- ► Remove the water tank and rinse it thoroughly.
- Fill the water tank with fresh, cold water and reinsert the tank.
- ► Place one receptacle under the coffee spout and another under the fine foam frother.
- ► Touch 'Next'.

'Machine is being descaled', the descaling operation is continued.

The operation is interrupted, 'Empty drip tray'.

► Empty the drip tray and coffee grounds container and put them back into the machine.

Descaling is now complete. The start screen is displayed.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

Precondition: 'Fill bean container' is displayed.

- ► Switch the machine off with the On/Off button 🖒.
- ► Remove the aroma preservation cover.
- ► Clean the bean container with a soft, dry cloth.
- ► Fill the bean container with coffee beans and close the aroma preservation cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ► Remove the water tank.
- ► If you use a CLEARYL Smart filter cartridge, remove this.
- ► Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ► Empty the water tank and rinse it thoroughly.
- ► If you use a CLEARYL Smart filter cartridge, insert this again.
- ► Fill the water tank with fresh, cold water and reinsert the tank.

6 Display messages

Message	Cause/Result	Action
'Fill water tank'	The water tank is empty. You cannot prepare any products.	► Fill the water tank (see Chapter 3 'Daily operation – Filling the water tank').
'Empty coffee grounds container'	The coffee grounds container is full. You cannot prepare any products.	► Empty the coffee grounds container and the drip tray (see Chapter 3 'Daily operation – Daily maintenance').
'Drip tray not fitted'	The drip tray is not inserted correctly or is not inserted at all. You cannot prepare any products.	► Fit the drip tray.
'Fill bean contai- ner'	The bean container is empty. You cannot prepare any specialty coffees, but you can prepare hot water and milk.	► Fill the bean container (see Chapter 1 'Preparing and using for the first time – Filling the bean container').
'Change the filter'	The filter cartridge no longer works.	► Replace the CLEARYL Smart filter cartridge (see Chapter 5 'Maintenance – Changing the filter').
'Clean machine'	The S8 is prompting you to clean it.	► Perform cleaning (see Chapter 5 'Maintenance – Cleaning the machine').
'Decalcify machine'	The S8 is prompting you to descale it.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine').
'Machine too hot for maintenance'	The system is too hot to start a maintenance program.	► Wait for several minutes until the system has cooled or prepare a specialty coffee or hot water.

7 Troubleshooting

Problem	Cause/Result	Action
Insufficient foam is produced when the milk is frothed or milk sprays out of the fine foam frother.	The fine foam frother is dirty.	 Clean the fine foam frother (see Chapter 5 'Maintenance – Cleaning the milk system'). Dismantle and rinse the fine foam frother (see Chapter 5 'Maintenance – Dismantling and rinsing the professional fine foam frother').
Coffee only comes out in drips when it is being prepared.	The coffee is ground too finely and obstructs the system.	► Set the grinder to a coarser setting (see Chapter 2 'Preparation – Adjusting the grinder').
	The water hardness may not have been correctly set.	► Perform descaling (see Chapter 5 'Maintenance – Descaling the machine ').
'Fill water tank' is displayed although the water tank is full.	The water tank float is trapped.	► Descale the water tank (see Chapter 5 'Maintenance – Descaling the water tank').
Grinder is making a very loud noise.	There are foreign objects in the grinder.	► Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').
'Error 2' or 'Error 5' is displayed.	If the machine has been exposed to the cold for a long period of time, heating may be disabled for safety reasons.	► Warm the machine at room temperature.
Other 'Error' messages are displayed.	-	► Switch the S8 off with the On/Off button ♂. Contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

i If you were unable to solve the problem, contact customer support in your country (see Chapter 11 'JURA contact details / Legal information').

8 Transport and environmentally friendly disposal

Transport / Emptying the system

Keep the packaging for your S8. It should be used to protect the machine during transport.

In order to protect the S8 from frost during transport, the system must be emptied.

Precondition: The start screen is displayed.

- ► Remove the milk pipe from the fine foam frother.
- ► Place a receptacle under the fine foam frother.
- ► Touch 'Milk foam'.
- ► Remove and empty the water tank.
- Change the time to '60 sec.'.
 Steam will continue to be discharged from the fine foam frother until the system is empty.

'Fill water tank'

► Press the On/Off button . Your S8 is switched off.



Please dispose of old machines in an environmentally neutral way.



9 Technical data

Voltage	120 V ~, 60 Hz
Power	1450 W
Conformity mark	c UL us
Pump pressure	static, max. 15 bar
Holding capacity of water tank (without filter)	64 oz (1.9 l)
Holding capacity of bean container	10 oz (280 g)
Holding capacity of coffee grounds	max. 16 portions
container	
Cord length	approx. 47 in.
	(approx. 1.2 m)
Weight	approx. 22 lb
	(approx. 10 kg)
Dimensions (W × H × D)	11 × 13.8 × 17.2 in.
	(28.0 × 34.8 × 43.9 cm)

Directives The machine complies with the following directives:

- Standard UL 1082
- Canadian Standard CSA C22.2 No. 64

10 Index

Addresses 52 Adjusting the product settings 27 Aroma preservation cover Bean container with aroma preservation cover 8 Automatic switch-off 28 Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Water tank 43 Display Machine 40 Water tank 43 Display hightness 31 Display prightness 31 Display maintenance 22 Descaling Machine 40 Water tank 43 Display Touchscreen display 8, 10 Display brightness 31 Display maintenance 22 Descaling Machine 40 Water tank 43 Display Touchscreen display 8, 10 Display brightness 31 Display maintenance 22 Descaling Machine 40 Water tank 43 Display Touchscreen display 8, 10 Display brightness 31 Display messages 44 Disposal 46 Double product 17 Drip tray 8 Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Espresso macchiato 17 Espresso macchiato 17 Espresso macchiato 17 User tank 22 Filter funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Green tea 20 Grinder adjustment switch 9 Forund coffee 19 Measuring spoon for ground coffee	Α		D	
Aroma preservation cover Bean container with aroma preservation cover 8 Automatic switch-off 28 Bean container Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel		Addresses 52		Daily maintenance 22
Bean container with aroma preservation cover 8 Automatic switch-off 28 Bean container Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Adjusting the product settings 27		Descaling
cover 8 Automatic switch-off 28 Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees pout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Ground coffee 19 Display Touchscreen display 8, 10 Display rouchscreen display 8, 10 Display ressages 44 Disposal 46 Double product 17 Drip tray 8 E Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel Factory settings Restore factory settings 30 Filler funnel Factory settings Restore factory settings 30 Filler funnel Factory settings Factory settings Restore factory settings Restore factory settings Factory settings Restore factory settings Two espress 17 Espresso macchiato 17 Factory settings Fact		Aroma preservation cover		Machine 40
Automatic switch-off 28 Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Ground coffee 19 Touchscreen display 8, 10 Display brightness 31 Display messages 44 Disposal 46 Double product 17 Drip tray 8 E Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Cappuccino frother cleaning Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Bean container with aroma preservation		Water tank 43
Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning He milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Gorndar adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Grinder adjustment switch 9 Ground coffee 19 Display brightness 31 Display messages 44 Disposal 46 Double product 17 Drip tray 8 E Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 F Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19		cover 8		Display
Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Gornact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Grinder adjustment switch 9 Goround coffee 19 Display prightness 31 Display messages 44 Disposal 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Automatic switch-off 28		Touchscreen display 8, 10
Bean container Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Ground coffee 19 Display messages 44 Disposal 46 Double product 17 Drip tray 8 E Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Espresso macchiato 17 Fspresso macchiato 17 Fspresso macchiato 17 Filler funnel Filler	D			
Bean container with aroma preservation cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Ground coffee 19 Disposal 46 Double product 17 Drip tray 8 E Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Fspresso macchiato 17 Espresso macchiato 17 F Factory settings Restore factory settings 30 Filler funnel Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19	D	Poan container		
cover 8 Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Cleaning 42 Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Green tea 20 Grinder adjustment switch 9 Ground coffee 19		_		Double product 17
Filling 11 Bus bar Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 F Factory settings Restore factory settings 30 Filler funnel Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G G Green tea 20 Grinder adjustment switch 9 Ground coffee 19				Drip tray 8
Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Ground coffee 19 Emptying the system 46 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G G Green tea 20 Grinder adjustment switch 9 Ground coffee 19		<u> </u>	F	
Technical data 47 Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Energy-saving mode 28 Errors Troubleshooting 45 Espresso 17 Factory settings Restore factory settings 30 Filler funnel Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G G Green tea 20 Grinder adjustment switch 9 Ground coffee 19			_	Emptying the system 46
Button On/Off button 9 C Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 First-time use 12 Flat white 17 G G G Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Ground coffee 19 Troubleshooting 45 Espresso 17 Two espressi 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Factory settings 30 Filler funnel for ground coffee 9				
Caffè latte 17 Cappuccino 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Espresso 17 Two espressi 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Two espressi 17 Espresso macchiato 17 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Onjoir buttori 9		
Caffè latte 17 Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Espresso macchiato 17 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9 Factory settings Restore factory settings 30 Filler funnel for ground coffee 9	C			•
Cappuccino 17 Cappuccino frother cleaning Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel Factory settings 30 Filler funnel Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Caffè latte 17		
Cleaning the milk system 35 Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19		Cappuccino 17	Е	'
Cleaning Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Restore factory settings 30 Filler funnel Filler funnel for ground coffee 9			Г	Factor coettings
Bean container 42 Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel Fille				
Machine 39 CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9		3		
CLEARYL Smart filter cartridge Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filling Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Change 38 Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Bean container 11 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Insert 37 Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Water tank 22 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				3
Coffee 17 Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Filter Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Two coffees 17 Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Change 38 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Coffee grounds container 8 Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Insert 37 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Coffee spout Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Fine foam frother Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Height-adjustable coffee spout 8 Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Professional fine foam frother 8 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Consistency of grind Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 First-time use 12 Flat white 17 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Adjusting the grinder 20 Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Flat white 17 G Green tea 20 Grinder adjustment switch 9 Ground coffee 19				
Grinder adjustment switch 9 Contact details 52 Cover Filler funnel for ground coffee 9 Green tea 20 Grinder adjustment switch 9 Ground coffee 19				Flat white 17
Contact details 52 Green tea 20 Cover Grinder adjustment switch 9 Filler funnel for ground coffee 9 Ground coffee 19			c	
Cover Grinder adjustment switch 9 Filler funnel for ground coffee 9 Ground coffee 19			u	
Filler funnel for ground coffee 9 Ground coffee 19				
		_		Measuring spoon for ground coffee 9
Cup platform 8				measaring spoon for ground conce s
Customer support 52				

Н		Р	
Height-adjus	table coffee spout 8	Per	manent settings in programming mode
Homepage 1			25
Hotline 52			wer cord 8
Hot water 20		Pre	paration 15, 17
Hot-water no	ozzle 9		At the touch of a button 16
I			Caffè latte 17
Important sa	afeguards		Cappuccino 17
Safety 4			Coffee 17
Instant coffee	e		Espresso 17
Ground c	offee 19		Espresso macchiato 17
Internet 10			Flat white 17
1			Green tea 20
J URA			Ground coffee 19
•	details 52		Hot water 20
Internet			Latte macchiato 17
	10		Milk 18
L			Milk foam 18
Language 32			Ristretto 17
Latte macchi	ato 17		Two coffees 17
M			Two espressi 17
Machine			Two ristretti 17
Cleaning	39		Two specialty coffees 17
	intenance 22		Using the product selector 16
Descalino			paration options 16
	naintenance 23	Pro	blems 45
Rinsing 3		D	Troubleshooting 45
Setting u	p 10		oduct selector view 16
Switching		PIC	oduct settings 26
Switching	on 22	Dro	Adjusting 27 ofessional fine foam frother 8
Maintenance	34	FIC	Dismantling and rinsing 36
Daily mai	intenance 22	Pro	ogramming mode 25
Regular n	naintenance 23	110	Automatic switch-off 28
	ooon for ground coffee 9		Display brightness 31
Messages, di	splay 44		Energy-saving mode 28
Milk			Language 32
	ng milk 14		Operating instructions 29
Milk foam 18	3		Product settings 26
Milk system	25		Querying information 33
Cleaning	nal fine foam frother 8		Restore factory settings 30
			Setting the water hardness 31
Milk system i Milk, warm 1			Unit for amount of water 30
		0	
0		Q	and the staff annual transport
Operating in:	structions 29	Qu	erying information 33

Setting the water hardness 31

Water tank 8
Descaling 43
Filling 22
Website 10

11 JURA contact details / Legal information

11 JURA contact details / Legal information

JURA Elektroapparate AG Kaffeeweltstrasse 10 CH-4626 Niederbuchsiten Switzerland

	USA: JURA Inc.	Canada: FAEMA
Customer Service		
Phone	1-800-220-5701	1-(855)-544-8600
E-Mail	info@us.jura.com	info@juracanada.ca
Opening Hours (EST)	Mon – Thu 9 am – 9 pm,	
	Fri 9 am – 8 pm,	
	Sat 9 am – 5 pm	
Distributor Address	20 Craig Road	115 Matheson Boulevard East
	Montvale, NJ 07645	Mississauga, Ontario, L4Z 1X8
Phone	001 (201) 767-3999	1-(905)-501-8600
Fax	001 (201) 767-9684	
Internet	www.us.jura.com	www.ca.jura.com

@ You will find additional contact details for your country at www.jura.com.

Technical changes

We reserve the right to make technical changes. The diagrams used in these instructions for use are for illustration purposes only and do not represent the original colors of the machine. Some details of your S8 may vary.

Feedback

Your opinion is important to us! Use the contact details at www.jura.com.

Copyright

The instructions for use contain information which is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of JURA Elektroapparate AG.