




La Coupole Round Dining Table –Marble Top  
Assembly Instructions

- Please note that top is sold separately.

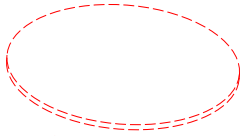

(1) top – A

HARDWARE:



(4) Bolt (05/16" x 3/4") - a



(4) Spring Washer (05/16") – b



(4) Flat Washer (05/16" x 19mm) - c




(1) Allen Wrench - d

Assembly Instructions:

1. Attach the assembled base to the Top (A) using Bolt (a), Spring Washer (b) and Flat Washer (c) with Allen Wrench (d). **See Fig.1**

Fig.1

a x 4pcs  
b x 4pcs  
c x 4pcs

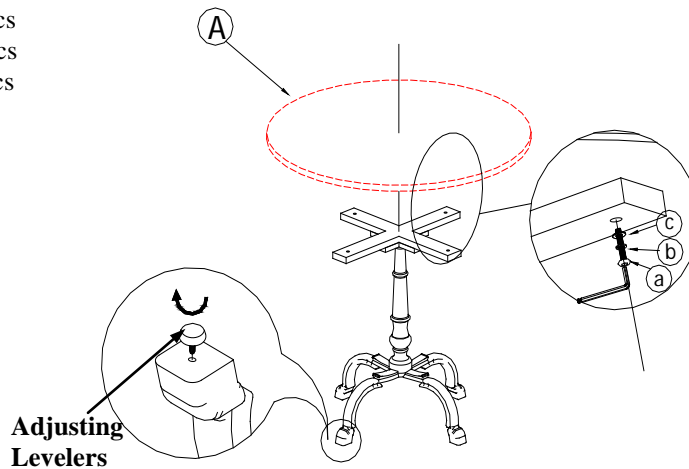

**Adjusting Levelers:**

If there is an uneven floor, the furniture may not sit level causing it to wobble. If the piece wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

1. Carefully lift the item slightly to provide access to the levelers attached to the bottom. **See Fig.1**
2. Turn the levelers until adequate contact will be made with the floor. Gently set down the piece and check stability.
3. Repeat steps until furniture sits firmly on the ground.

Care Instructions:

This item is intended for indoor use only. To clean, use a damp cloth; wipe spills immediately.

Avoid the use of cleaners or abrasives as they may damage finish.

The use of trivets and coasters on tabletop is recommended to protect the table top.

Thank you for your purchase  
Williams-Sonoma Home  
Customer Service 1.888.922.4105  
www.WSHome.com