

REVISED MERCER TABLE

Date: 22-Apr-15

Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

 
Parts Included:

 
Parts Included (Box 1 of 3):	Parts Included (Box 2 of 3):	Parts Included (Box 3 of 3):	
(A)	(B)	(C)	
Leg	Stretcher	Glass top	
2x	1x 1x		

Hardware Included:

(D)	(E)	(F)	(H)	(1)
Bolt	Flat Washer	Rubber Pad	Spring Washer	Nut
M10 x 50mm				
2 x	2 x	4 x	2 x	2x

Tools Required:






Date: 22-Apr-15 www.williams-sonoma.com Page 2 of 4


Rev:

Assembly Instruction Steps:

1. Screw the bolt (D) into leg (A) as shown, tighten by hand first and then tighten up with Allen Wrench (J). Repeat the step for another leg.

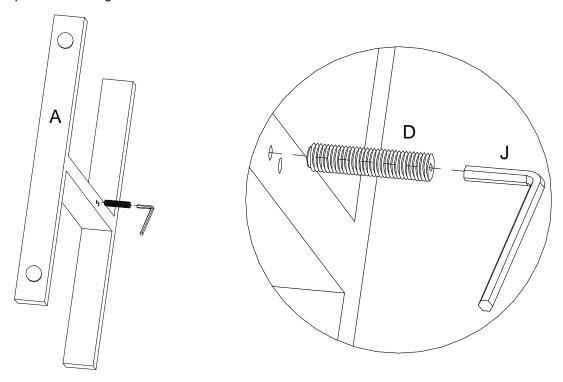

2. With one person's help to hold Stretcher (B), attach Stretcher (B) to the Leg (A) as shown, gently insert Spring Washer (H), Flat Washer (E) and Nut (I), and tighten with Open Wrench (G). Repeat the step for another leg. Carefully turn the table uptight.

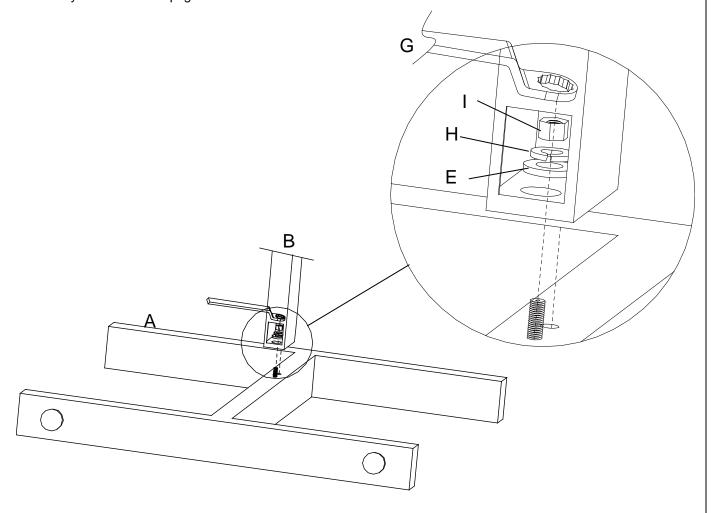


Date: 22-Apr-15 www.williams-sonoma.com Page 3 of 4

Rev:


3. Adjusting the levelers:

Due to an uneven floor, the furniture may not sit level due causing it to wobble. If the furniture wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

- 1) Carefully elevate the item slightly to provide access to the levelers attached to the bottom.
- 2) Turn the levelers until adequate contact will be made with the floor. Gently set down the piece and check stability.
- 3) Repeat steps until furniture sits firmly on the ground.

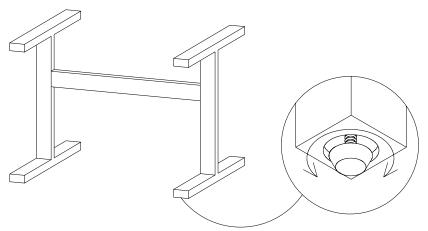

4. Put the Rubber Pad (F) on the top of table leg. Gently lay the Glass Top (C) on the top of the table base. Assembly is complete!

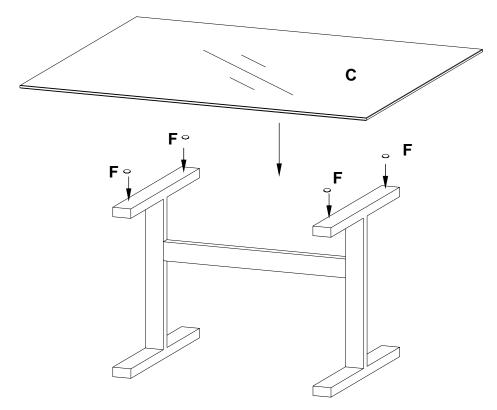

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- For glass tops and shelves, glass cleaner may be used, but avoid spraying it onto the metal or ceramic frame.
- Hardware may loosen over time. Periodically check to make sure all connections are tight.
 Re-tighten if necessary.

Thank you for your purchase Stores | catalog

Date: 22-Apr-15 www.williams-sonoma.com Page 4 of 4

Rev: