

Navarro Dining Table With 2 Extension Leaves

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

 


- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

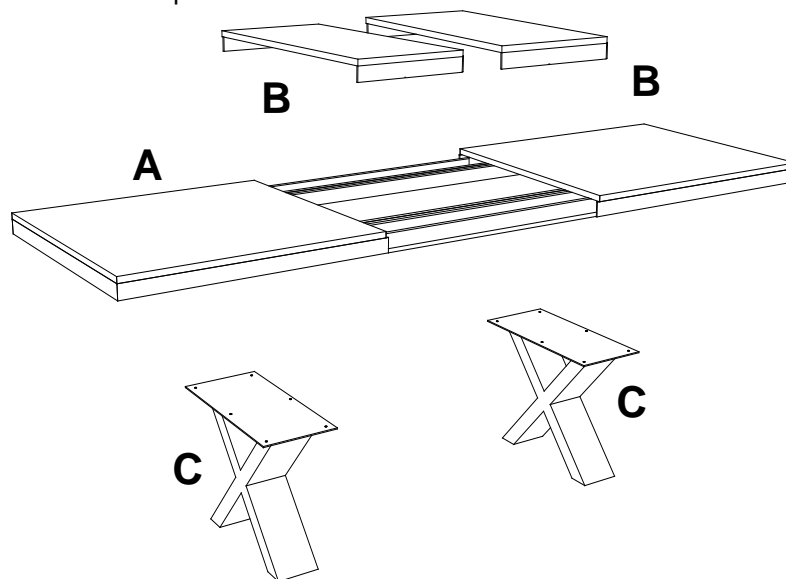(A)	Table Top	1pc
(B)	Leaves	2pcs
(C)	Legs	2pcs



Hardware Included:

(D)	(E)	(F)
Bolts	Spring Washers	Flat Washers
		
M8xL19mm	Ø8xØ12x1.5mm	Ø8xØ19x1.5mm
12x	12x	12x

Tool Required (included):

(G)




Allen Wrench


Assembly Instruction Steps:

1. Carefully turn the Table Top (A) upside down on a carpet or scratch-free surface.
2. Un-assemble Legs (C) from Particle Board by taking out the 8 Bolts using Allen Wrench. (See **Fig. 1**).

Fig.1

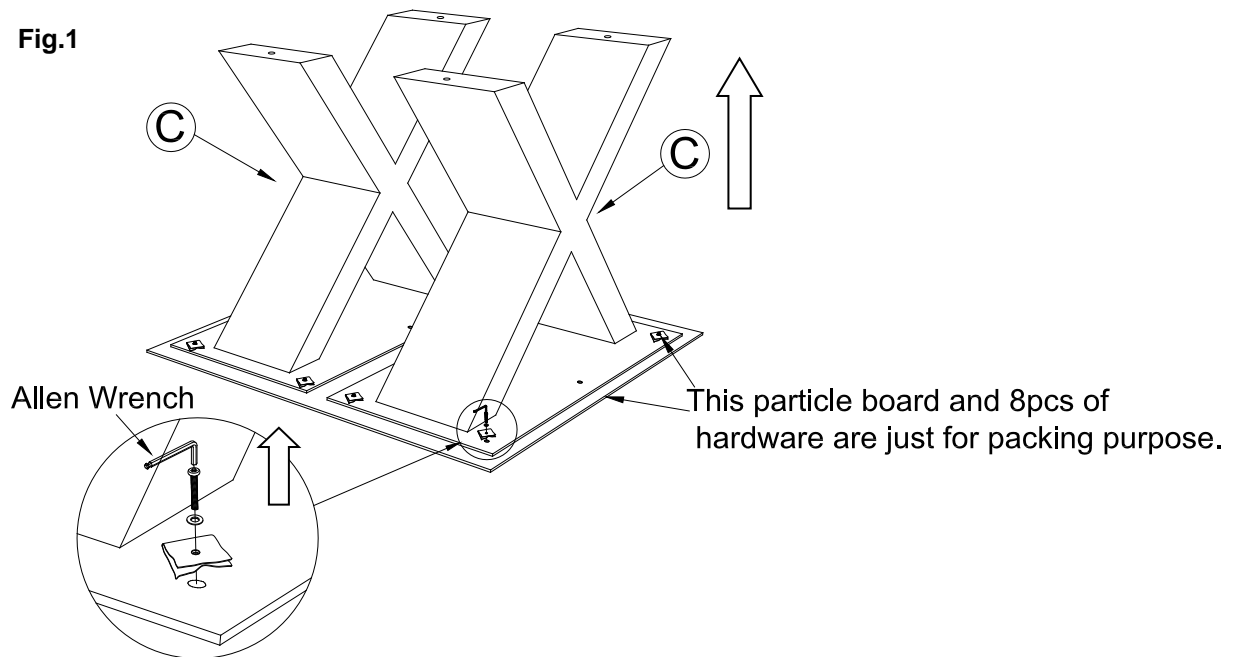

3. Attach one Leg (C) to Table Top (A) using Bolts (D), Spring Washers (E) and Flat Washers (F). Tighten with Allen Wrench (See **Fig. 2**). Repeat this operation for the remaining Leg (C).

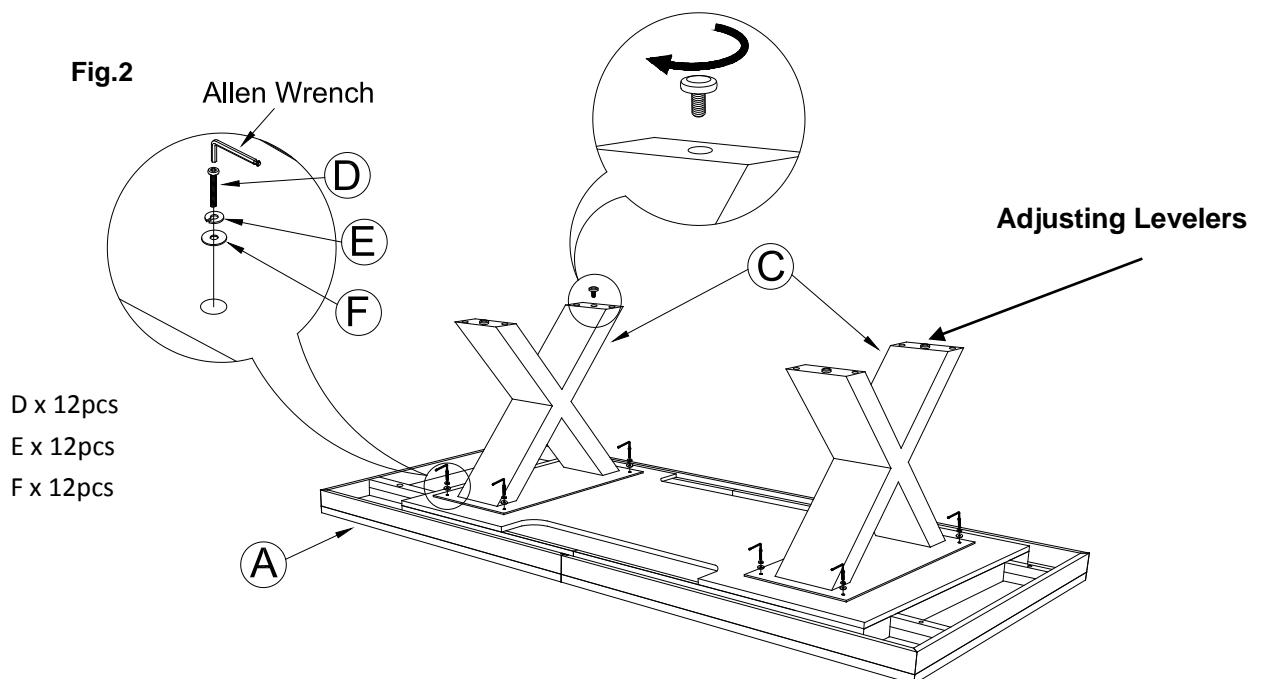


4. Tighten all Bolts securely with Allen Wrench, but do not over tighten the Bolts.
5. Turn the assembled Table to its upright position. Assembly is complete.

To insert or remove the 2 Extension Leaves:

1. Unlock the swivels located on the underside of the Table Top.
2. Grip Table at each end, pull apart (A) to open and take out the Leaves (B) one by one from storage by pulling them by their handle (See **Fig.3**).

Fig.3

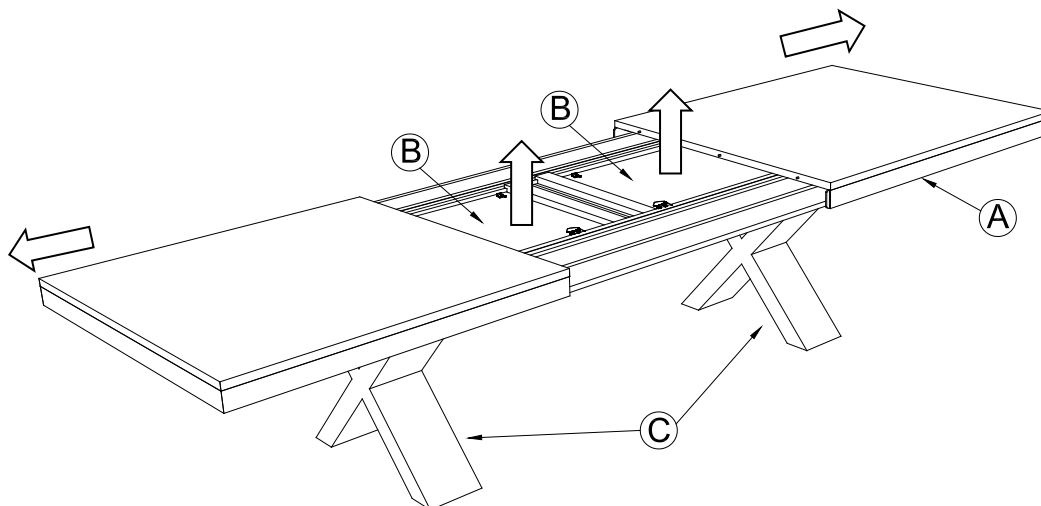

3. Open Leaves apron as below. (See **Fig. 4**)
4. Insert or remove 2 Leaves (B) (See **Fig.5**). Make sure Leaves pegs matches with the corresponding holes.
5. Slide back Table's ends simultaneously until Leaves are securely in place.
6. Turn the swivels to lock. (See **Fig. 5**)

Fig.4




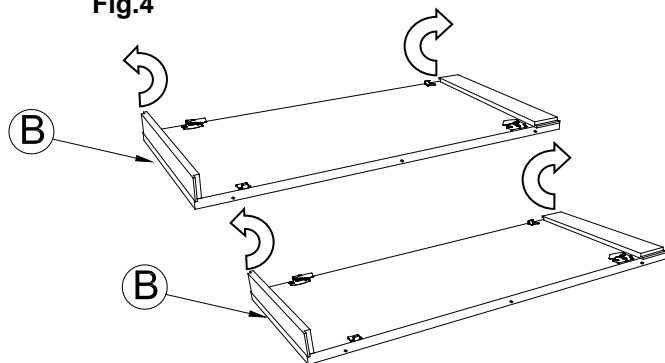


Fig.5

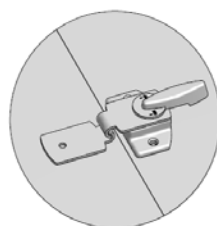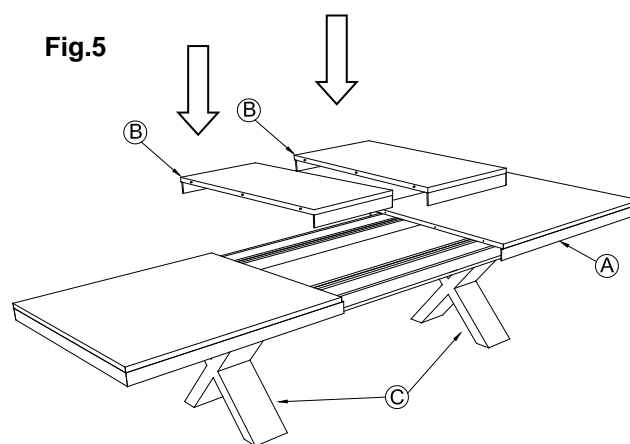

Locked

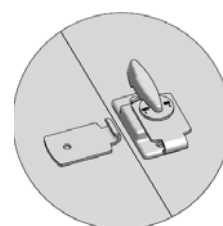

Unlocked

Adjusting Levelers:

Due to an uneven floor the furniture may not sit level due causing it to wobbles. If the piece wobbles, determine which corner does not touch the ground correctly. With two people follow these steps:

1. Carefully lift the item slightly to provide access to the levelers attached to the bottom. (See **Fig. 2**).
2. Turn the levelers until adequate contact will be made with the floor. Gently set down the piece and check stability.
3. Repeat steps until furniture sits firmly on the ground.
4. Leveler can be removed if not necessary.

Care Instructions:

- Dust with a clean, soft damp cloth and wipe dry immediately.
- Avoid the use of chemicals and harsh cleaning agents.
- **TAKE NOTE: THE BOLTS MAY SLIGHTLY LOOSEN OVER TIME. IF YOUR FURNITURE FEELS "WOBBLY" OR LOOSE, PLEASE RE-TIGHTEN BOLTS.**

Thank you for your purchase.

stores | catalog