



Panasonic®

Owner's Manual
Microwave Oven
Household Use Only
Model No. NN-SN68KS



Scan this code for special instructions and features.

**PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT,
AND SAVE THIS MANUAL FOR FUTURE USE.**

To register your product and for all other assistance, please contact us via the web at:
<http://shop.panasonic.com/support> (U.S.A Only)

For microwave oven safety reference, please visit the FDA's web page at:
<http://www.fda.gov/radiation-emittingproducts/resourcesforyourradiationemittingproducts/ucm252762.htm>

Para obtener instrucciones en español, por favor visite la página web en:
<http://shop.panasonic.com/support>

F0003CA00AP
PA0119-0
Printed in China

© Panasonic Appliances Microwave Oven (Shanghai) Co., Ltd. 2019

CONTENTS

Safety Information

IMPORTANT SAFETY INSTRUCTIONS	3-5
Installation and Grounding Instructions	5-6
Food Preparation	6-7
Location of Controls	9
Control Panel	10

Operation

Using the Microwave for the First Time	11
Setting the Clock	11
Setting the Child Safety Lock	11
Cooking	12
Setting a Standing Time	12
Setting the Kitchen Timer	13
Setting a Delayed Start	13
Quick 30	13
Add Time	14
Keep Warm	14
Coffee/Milk	15
Popcorn	15
Turbo Defrost	16
Defrosting Tips & Techniques	16
Sensor Reheat	17
Sensor Cook	17
Sensor Cook Chart	18-19
Microwave shortcuts	20-21
Food Characteristics	22-23

Maintenance

Care and Cleaning of Your Microwave Oven	24
Shop Accessories	24
Before Requesting Service	25
Limited Warranty (Only for U.S.A.)	26

General Information

Cookware Guide	8
Specifications	27
Trim Kit Information	27
User's Record	27



IMPORTANT SAFETY INSTRUCTIONS

Your safety and the safety of others are very important.



We have provided important safety messages in this manual and on your appliance. Always read and obey all safety messages.

This is the safety alert symbol. It is used to alert you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER", "WARNING" or "CAUTION". These words mean:

DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

WARNING

You can be killed or seriously injured if you don't follow instructions.

CAUTION

You can be exposed to a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.



PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a) **DO NOT** attempt to operate this oven with the door open, since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) **DO NOT** place any object between the oven front face and the door, or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) **DO NOT** operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the:
 - (1) door (bent),
 - (2) hinges and latches (broken or loosened),
 - (3) door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

Thank you for purchasing a Panasonic Microwave Oven

Your microwave oven is a cooking appliance and you should use as much care as you use with a stove or any other cooking appliance. When using this electric appliance, basic safety precautions should be followed, including the following:

WARNING

To reduce the risk of burns, electric shock, fire, injury to persons, or exposure to excessive microwave energy:

1. Read all instructions before using this appliance.
2. Read and follow the specific "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**," above.
3. This appliance must be grounded. Connect only to a properly grounded outlet. See "**GROUNDING INSTRUCTIONS**" found on page 5.
4. As with any cooking appliance, **DO NOT** leave oven unattended while in use.
5. Install or locate this appliance only in accordance with the installation instructions found on page 5.
6. **DO NOT** cover or block any openings on this appliance.
7. **DO NOT** store this appliance outdoors. **DO NOT** use this product near water (for example, near a kitchen sink, in a wet basement, or near a swimming pool or similar locations).
8. Use this appliance only for its intended use as described in this manual. **DO NOT** use corrosive chemicals, vapors or non-food products in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use. The use of corrosive chemicals in heating or cleaning will damage the appliance and may result in radiation leaks.
9. When cleaning surfaces of the door and oven that come together on closing the door, use only mild, non-abrasive soaps or detergents applied with a sponge or soft cloth.



IMPORTANT SAFETY INSTRUCTIONS (continued)


10. **DO NOT** allow children to use this appliance, unless closely supervised by an adult. **DO NOT** assume that because a child has mastered one cooking skill he/she can cook everything.
11. **DO NOT** operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or dropped.
12. **DO NOT** immerse cord or plug in water.
13. Keep cord away from heated surfaces.
14. **DO NOT** let cord hang over edge of a table or counter.
15. This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service center for examination, repair or adjustment.
16. Some products such as whole eggs, with or without shell, narrow neck bottles and sealed containers (for example, closed glass jars) may explode and should not be heated in this oven.
17. To reduce the risk of fire in the oven cavity:
 - (a) **DO NOT** overcook food. Carefully attend appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 - (b) Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 - (c) **If material inside the oven ignites, keep oven door closed, turn oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.**
 - (d) **DO NOT** use the cavity for storage purposes. **DO NOT** leave **paper products, cooking utensils or food in the cavity when not in use.**
18. **Superheated Liquids:** Liquids, such as water, coffee or tea are able to be overheated beyond the boiling point without showing evidence (or signs) of boiling. Visible bubbling is not always present when the container is removed from the microwave oven. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.** To reduce the risk of injury to persons:
 - (a) **STIR THE LIQUID BOTH BEFORE AND HALFWAY THROUGH HEATING.**
 - (b) **DO NOT heat water and oil, or fats together. The film of oil will trap steam, and may cause a violent eruption.**
 - (c) **DO NOT** use straight-sided containers with narrow necks.
 - (d) After heating, allow the container to stand in the microwave oven for a short time before removing the container.
19. **DO NOT** cook directly on the Glass Tray. It can crack, and cause injury or damage to the oven.
20. For the oven designed for installation into a wall cabinet:
 - (a) **DO NOT** operate any heating or cooking appliance beneath this appliance.
 - (b) **DO NOT** mount unit over or near any portion of a heating or cooking appliance.
 - (c) **DO NOT** mount over a sink.
 - (d) **DO NOT** store anything directly on the top of the appliance surface when the appliance is in operation.

SAVE THESE INSTRUCTIONS

WARNING

TO AVOID THE RISK OF SHOCK:

DO NOT remove outer panel from oven. Repairs must be done only by a qualified service person.

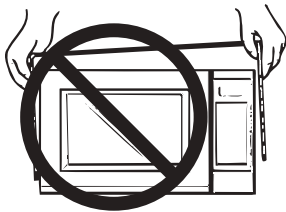


TO REDUCE THE RISK OF EXPOSURE TO MICROWAVE ENERGY:

DO NOT tamper with, or make any adjustments or repairs to Door, Control Panel Frame, Safety Interlock Switches, or any other part of the oven. Microwave leakage may result.

Safety Precautions

TO AVOID THE RISK OF FIRE:

1. **DO NOT** operate the microwave oven empty or use metal containers. When using the microwave oven without water or food, microwave energy cannot be absorbed and will continuously reflect throughout the cavity. This will cause arcing and damage the oven cavity, door or other components, which can lead to a fire hazard.
2. **DO NOT** store flammable materials next to, on top of, or in the oven.

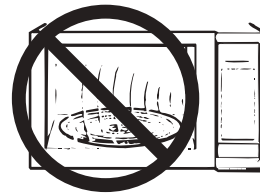



IMPORTANT SAFETY INSTRUCTIONS (continued)

- DO NOT** dry clothes, newspapers or other materials in the oven, or use newspaper or paper bags for cooking.
- DO NOT** hit or strike Control Panel. Damage to controls may occur.
- DO NOT** use recycled paper products unless the paper product is labeled as safe for microwave oven use. Recycled paper products may contain impurities, which may cause sparking.



TO AVOID THE RISK OF SCALDING:

POT HOLDERS should always be used when removing items from the oven. Heat is transferred from the HOT food to the cooking container and from the container to the Glass Tray. The Glass Tray can also be very HOT after removing the cooking container from the oven.



Glass Tray

- DO NOT** operate the oven without the Roller Ring and the Glass Tray in place.

For proper use of your oven, read remaining safety cautions and operating instructions.

- DO NOT** operate the oven without the Glass Tray fully engaged on the drive hub. Improper cooking or damage to the oven could result. Verify that the Glass Tray is properly engaged and rotating by observing its rotation when you press **Start**.
Note: The Glass Tray can turn in either direction.
- Use only the Glass Tray specifically designed for this oven.
DO NOT substitute any other Glass Tray.
- If the Glass Tray is hot, allow to cool before cleaning or placing in water.
- DO NOT** cook directly on the Glass Tray. Always place food in a microwave safe dish, or on a rack set in a microwave safe dish.
- If food or utensil on the Glass Tray touches oven walls, causing the tray to stop moving, the tray will automatically rotate in the opposite direction.

Roller Ring

- The Roller Ring and oven floor should be cleaned frequently to prevent excessive noise.
- Always replace the Roller Ring and the Glass Tray in their proper positions.
- The Roller Ring must always be used for cooking along with the Glass Tray.




Installation and Grounding Instructions

Examine Your Oven

Unpack oven, remove all packing material and examine the oven for any damage such as dents, broken door latches or cracks in the door. Notify dealer immediately if oven is damaged. **DO NOT** install if oven is damaged.

Placement of Oven

- The oven must be placed on a flat, stable surface. Place the front surface of the door 3 inches (7.6 cm) or more from the counter top edge to avoid accidental tipping of the microwave oven during normal use. For proper operation, the oven must have sufficient airflow. Allow 3 inches (7.6 cm) of space on both sides of the oven and 1 inch (2.5 cm) of space on top of the oven.
 - DO NOT** block air vents. If they are blocked during operation, the oven may overheat and be damaged.
 - DO NOT** place oven near a hot, damp surface such as a gas or electric range, sink, or dishwasher.
 - DO NOT** operate oven when room humidity is excessive.
- This oven is manufactured for household use only. It is not approved or tested for mobile vehicle, marine, or commercial use.

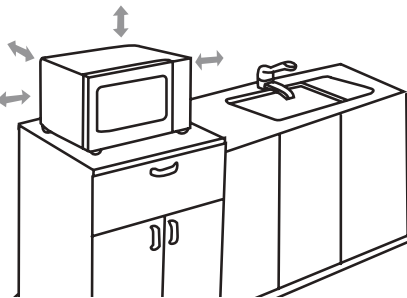

Installation

- DO NOT** block air vents. If they are blocked during operation, the oven may overheat. If the oven overheats, a thermal safety device will turn the oven off. The oven will remain inoperable until it has cooled.
- The oven is designed for installation into a wall cabinet by using the proper trim kit available from a local Panasonic dealer, follow all instructions packed with the kit.


WARNING: IMPROPER USE OF THE GROUNDING PLUG CAN RESULT IN A RISK OF ELECTRIC SHOCK.

Consult a qualified electrician or service person if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a three-wire extension cord that has a three-prong polarized grounding plug, and a three-slot receptacle that will accept the plug of the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance.

Grounding Instructions

THIS APPLIANCE MUST BE GROUNDED.

In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug.

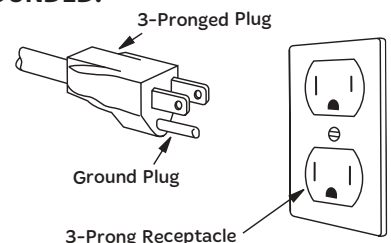



Installation and Grounding Instructions (continued)

The plug must be plugged into an outlet that is properly installed and grounded.

- **Plug into properly installed and grounded three-prong outlet.**
- **DO NOT** remove ground prong.
- **DO NOT** use an adapter.

Power Supply

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. Longer cord sets or extension cords are available and may be used if care is exercised in their use. **DO NOT** let cord hang over edge of a table or counter.
3. If a long cord or extension cord is used,
 - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance,
 - (2) the extension cord must be a grounding-type three-wire cord, and
 - (3) the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

Wiring Requirements

The oven must be operated on a SEPARATE CIRCUIT. No other appliance should share the circuit with the microwave oven. If it does, the branch circuit fuse may blow or the circuit breaker

may trip. The oven must be plugged into at least a 20 A, 120 V, 60 Hz GROUNDED OUTLET. Where a standard two-prong outlet is encountered, it is the personal responsibility and obligation of the consumer to have it replaced with a properly grounded three-prong outlet. The VOLTAGE used must be the same as specified on this microwave oven (120 V, 60 Hz). Using a higher voltage is dangerous and may result in a fire or oven damage. Using a lower voltage will cause slow cooking. Panasonic is NOT responsible for any damages resulting from the use of the oven with any voltage other than specified.

TV / RADIO / WIRELESS EQUIPMENT INTERFERENCE

This product has been tested and found to comply with the limits for Microwave Oven, pursuant to Part 18 of the FCC Rules. This product can radiate radio frequency energy, which could cause interference to such products as radio, TV, baby monitor, cordless phone, Bluetooth, wireless router, etc., which can be confirmed by turning this product off and on. If present, the user is encouraged to try to correct by taking one or more of the following countermeasures:

- (1) Increase the spacing distance between the microwave oven and other product receiving the interference.
- (2) If possible, use a properly installed receiver antenna and/or reorient the receiving antenna of the other product receiving the interference.
- (3) Plug the microwave oven into a different outlet from the other product receiving the interference.
- (4) Clean door and sealing surfaces of the oven. (See Care and Cleaning of Your Microwave Oven)

Food Preparation

Follow these Safety Precautions when cooking in your oven.

IMPORTANT

Proper cooking depends upon the power, the time setting and quantity of food. If you use a smaller portion than recommended but cook at the time for the recommended portion, fire could result.

1) HOME CANNING / STERILIZING / DRYING FOODS / SMALL QUANTITIES OF FOODS

- **DO NOT** use your oven for home canning. Your oven cannot maintain the food at the proper canning temperature. The food may be contaminated and then spoil.
- **DO NOT** use the microwave oven to sterilize objects (baby bottles, etc.). It is difficult to keep the oven at the high temperature needed for sterilization.
- **DO NOT** dry meats, herbs, fruits or vegetables in your oven. Small quantities of food or foods with low moisture content can dry out, scorch or catch on fire if overheated.

2) POPCORN

Popcorn may be popped in a microwave oven corn popper.

Microwave popcorn that pops in its own package is also available.

Follow popcorn manufacturers' directions and use a brand suitable for the cooking power of your microwave oven.

CAUTION: When using pre-packaged microwave popcorn, you can follow recommended package instructions or use the Popcorn Button (refer to page 15). Otherwise, the popcorn may not pop adequately or may ignite and cause a fire. Never leave the oven unattended when popping popcorn. Allow the popcorn bag to cool before opening, and always open the bag facing away from your face and body to prevent steam burns.



Food Preparation (continued)

3) DEEP FAT FRYING

- **DO NOT** deep fat fry in your microwave oven. Cooking oils may burst into flames and may cause damage to the oven and may result in burns. Microwave utensils may not withstand the temperature of the hot oil, and can shatter or melt.

4) FOODS WITH NONPOROUS SKINS

- **DO NOT COOK / REHEAT WHOLE EGGS, WITH OR WITHOUT THE SHELL.**

Steam buildup in whole eggs may cause them to explode, and possibly damage the oven or cause injury. Reheating SLICED hard-boiled eggs and cooking SCRAMBLED eggs is safe.



- **Potatoes, apples, whole squash and sausages** are examples of

foods with nonporous skins. These types of foods must be pierced before microwave cooking to prevent them from exploding.

CAUTION: *Cooking dry or old potatoes can cause fire.*



5) GLASS TRAY / COOKING CONTAINERS / FOIL

- Cooking containers get hot during microwaving. Heat is transferred from the HOT food to the container and the Glass Tray. Use pot holders when removing containers from the oven or when removing lids or plastic wrap covers from cooking containers, to avoid burns.
- The Glass Tray will get hot during cooking. It should be allowed to cool before handling or before paper products, such as paper plates or microwave popcorn bags, are placed in the oven for microwave cooking.
- When using foil in the oven, allow at least 1-inch (2.5 cm) of space between foil and interior oven walls or door.
- Dishes with metallic trim should not be used, as arcing may occur.

6) PAPER TOWELS / CLOTHS

- **DO NOT** use paper towels or cloths that contain a synthetic fiber woven into them. The synthetic fiber may cause the towel to ignite. Use paper toweling under supervision.

7) BROWNING DISHES / OVEN COOKING BAGS

- Browning dishes or grills are designed for microwave cooking only. Always follow instructions provided by the manufacturer. **DO NOT** preheat browning dish more than six minutes.
- If an oven cooking bag is used for microwave cooking, prepare according to package directions. **DO NOT** use a wire twist-tie to close bag. Instead use plastic ties, cotton string or a strip cut from the open end of the bag.



8) THERMOMETERS

- **DO NOT** use a conventional meat thermometer in your oven. Arcing may occur. Microwave safe thermometers are available for both meat and candy.



9) BABY FORMULA / BABY FOOD

- **DO NOT** heat baby formula or baby food in the microwave oven. The glass jar or surface of the food may appear warm while the interior can be so hot as to burn the infant's mouth and esophagus.



10) REHEATING PASTRY PRODUCTS

- When reheating pastry products, check temperatures of any fillings before eating. Some foods have fillings, which heat faster and can be extremely hot, while the surface remains warm to the touch (for example, jelly donuts).

11) GENERAL OVEN USAGE GUIDELINES

- **DO NOT** use the oven for any purpose other than the preparation of food.

Cookware Guide

This section answers the question, "Can I use in the Microwave?"

Aluminum Foil

It is not recommended to use. Arcing can occur if foil is too close to oven wall or door and cause damage to your oven.



Browning Dish

Yes. Only use browning dishes that are designed for microwave cooking. Check browning dish information for instructions/heating chart. Do not preheat for more than six minutes.


Brown Paper Bags

No. They may cause a fire in the oven.



Microwave Safe

Yes. If labeled Microwave Safe, check manufacturers' directions for use in microwave heating. Some dinnerware may state on the back of the dish, "Oven-Microwave Safe".

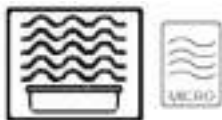

Dinnerware

If unlabeled, use **CONTAINER TEST** below.

Disposable Polyester Paperboard Dishes

Yes. Some frozen foods are packaged in these dishes. Also can be purchased in some grocery stores.



Fast Food Cartons with Metal Handle

No. Metal handle may cause arcing.



Frozen Dinner Trays

If made for the microwave, then yes. If it contains metal, then no.



Glass Jars

No. Most glass jars are not heat resistant.



Heat Resistant Oven Glassware/Ceramic

Yes, but only ones for microwave cooking and browning. (See **CONTAINER TEST** below.)



Metal Bakeware

No. Metal can cause arcing and damage to your oven.



Metal Twist-Ties

No. May cause arcing which could cause a fire in the oven.



Oven Cooking Bag

Yes. Follow manufacturers' directions. Close bag with the nylon tie provided, a strip cut from the end of the bag, or a piece of cotton string. Do not close with metal twist-tie. Make six 1/2-inch slits near the closure.

Paper Plates/Cups

Yes. Use to warm cooked foods, and to cook foods that require short cooking time, such as hot dogs. **Do not microwave paper cups; they may overheat and ignite.**



Towels & Napkins

Yes, only paper napkins/towels. Use to warm rolls and sandwiches, only if labeled safe for microwave use. Do NOT use recycled paper towels.



Parchment Paper

Yes. Use as a cover to prevent splattering.

Plastic Cookware

Yes, with caution. Should be labeled, "Suitable for Microwave Heating."



Check Microwave Safe manufacturers' directions for recommended uses. Some microwave safe plastic containers are not suitable for cooking foods with high fat or sugar content. The heat from hot food may cause warping.

Plastic, Melamine

No. This material absorbs microwave energy. Dishes get HOT!

Plastic Foam Cups

Yes, with caution. Plastic foam will melt if foods reach a high temperature. Use short term only to reheat foods to a low serving temperature. **Do not microwave paper cups; they may overheat and ignite.**



Plastic Wrap

Yes. Use to cover food during cooking to retain moisture and prevent splattering. Should be labeled "Suitable for Microwave Heating". Check package directions.



Straw, Wicker, Wood

Yes, short term only. Use only for short term reheating and to bring food to a low serving temperature. Wood may dry out, split or crack.



Thermometers

Only microwave safe thermometers can be used, NOT conventional thermometers.



Wax Paper

Yes. Use as a cover to prevent splattering and to retain moisture.




CONTAINER TEST

TO TEST A CONTAINER FOR SAFE MICROWAVE OVEN USE: Fill a microwave safe cup with cool water and place it in the microwave oven along side the empty container to be tested; **heat one (1) minute at P10 (HIGH)**. If the container is microwave oven safe (transparent to microwave energy), the empty container should remain comfortably cool and the water should be hot. If the container is hot, it has absorbed some microwave energy and should NOT be used. This test cannot be used for plastic containers.



Location of Controls

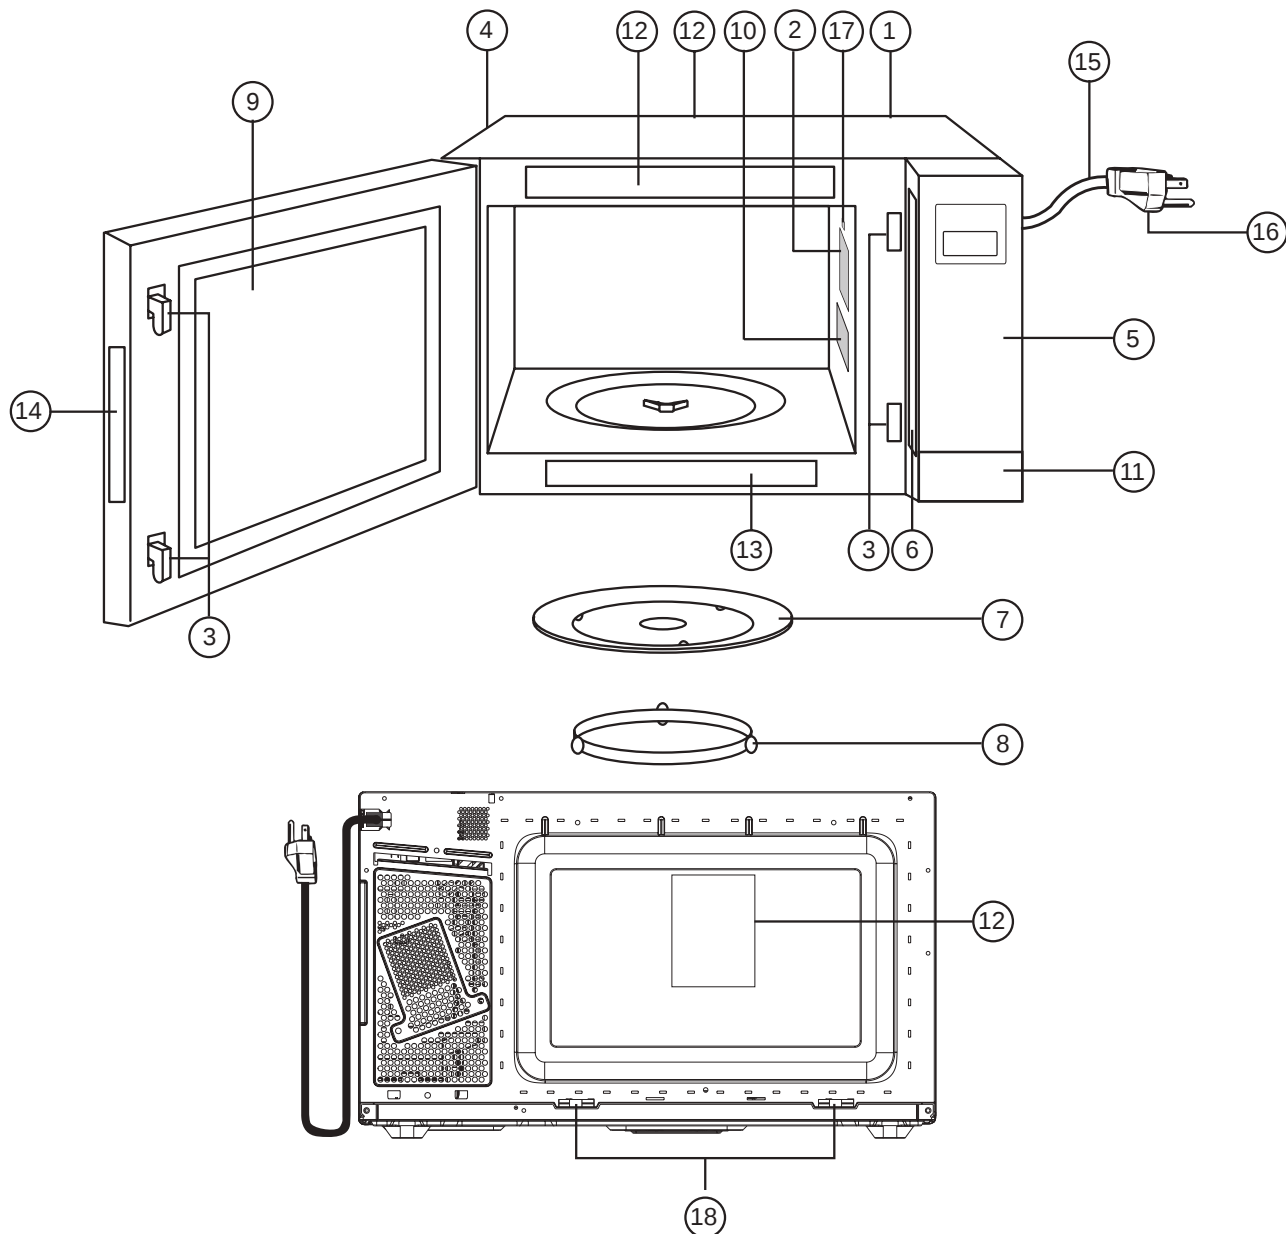


- ① **External Air Vent**
- ② **Internal Air Vent**
- ③ **Door Safety Lock System**
- ④ **Exhaust Air Vent**
- ⑤ **Control Panel**
- ⑥ **Identification Plate**
- ⑦ **Glass Tray**
- ⑧ **Roller Ring**
- ⑨ **Heat/Vapor Barrier Film**
(do not remove)
- ⑩ **Waveguide Cover**
(do not remove)
- ⑪ **Door Release Button**

- ⑫ **Warning Label**
- ⑬ **Menu Label**
(do not remove)
- ⑭ **DHHS Label**
- ⑮ **Power Supply Cord**
- ⑯ **Power Supply Plug**
- ⑰ **Oven Light**
Oven light will turn on during cooking and also when door is opened.
- ⑱ **Stopper (irremovable)**
The stopper ensures sufficient space at the back of the oven to provide adequate ventilation.

NOTE:
The illustration is for reference only.

Control Panel

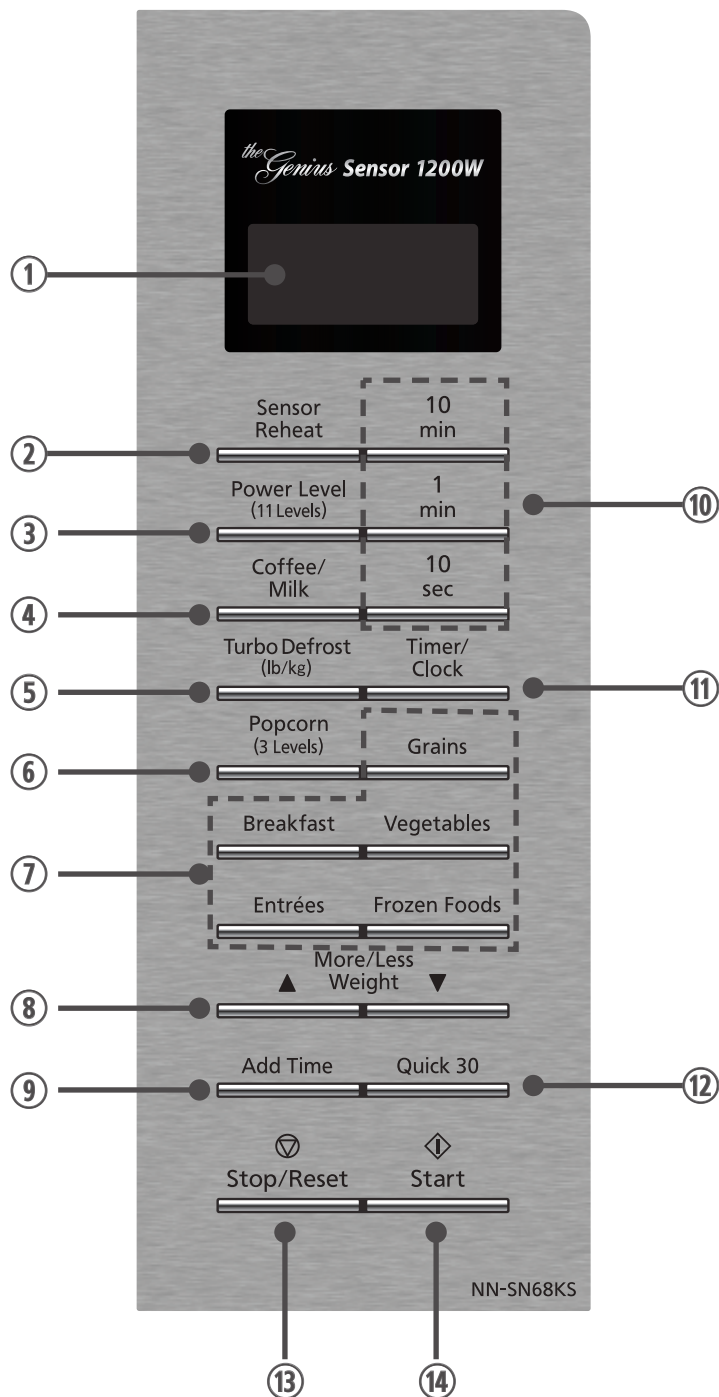

- ① **Display Window**
- ② **Sensor Reheat Button** (See page 17)
- ③ **Power Level Button** (See page 12)
- ④ **Coffee/Milk Button** (See page 15)
- ⑤ **Turbo Defrost Button** (See page 16)
- ⑥ **Popcorn Button** (See page 15)
- ⑦ **Sensor Cook Buttons** (See page 17)
- ⑧ **More/Less/Weight Buttons**
- ⑨ **Add Time Button** (See page 14)
- ⑩ **Time Buttons**
- ⑪ **Timer/Clock Button** (See page 11-13)
- ⑫ **Quick 30 Button** (See page 13)
- ⑬ **Stop/Reset Button**

Before cooking: One press clears all your instructions.

During cooking: One press temporarily stops the cooking process. Another tap cancels all your instructions, and time of day or colon appears in the display window.

- ⑭ **Start Button**
After cooking program setting, one press allows oven to begin functioning. If door is opened or **Stop/Reset** Button is pressed once during oven operation, **Start** Button must be pressed again to restart oven.

Beep Sound:

When a Button is pressed correctly, a beep will be heard. If a Button is pressed and no beep is heard, the unit did not or cannot accept the instruction. When operating, the oven will beep twice between programmed stages. At the end of any complete program, the oven will beep 5 times.


NOTE:

If no operation after cooking program setting, 6 minutes later, the oven will automatically cancel the cooking program. The display will return to clock or colon display.



NOTE:

The illustration is for reference only.



Using the Microwave for the First Time

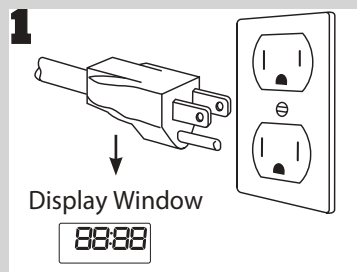


Plug into a properly grounded electrical outlet. The oven automatically defaults to the imperial measure system (oz/lb).

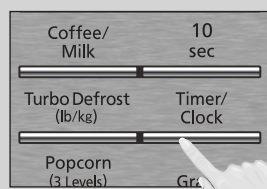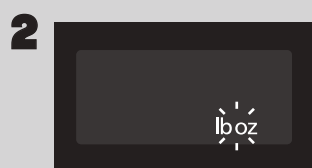

Press **Start** once, then Press **Timer/Clock** to cycle between the weight system, Metric (g/kg) or Imperial (oz/lb).

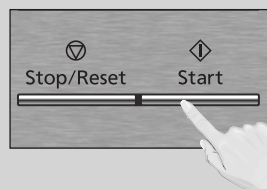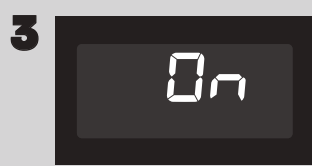

Press **Start** once, then Press **Timer/Clock** to cycle between the Beep on or Beep off.

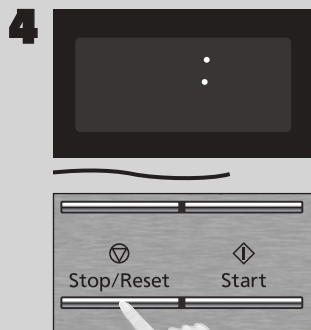


Press **Stop/Reset** to confirm; a colon (:) will appear in the display window.


NOTES:

These choices can be selected only when you plug-in the oven.

Setting the Clock

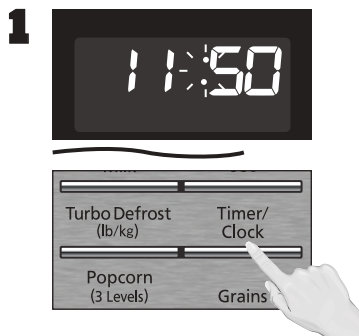

With the oven NOT cooking, press **Timer/Clock** twice; the colon will blink. Enter time of day using the **Time Buttons**.

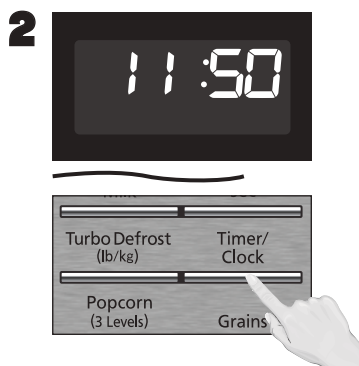


Press **Timer/Clock** to finish setting and the colon (:) will stop blinking.

NOTES:

1. To reset the clock, repeat steps.
2. The clock will retain the time of day as long as the oven is plugged in and electricity is supplied.
3. The clock is a 12-hour display.
4. Oven will not operate while colon (:) is flashing.

Setting the Child Safety Lock

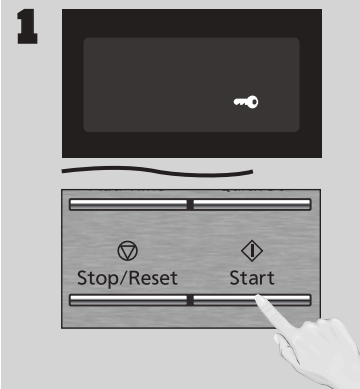

When the time of day appears in the display, press **Start** three times; "🔑" will appear in the display.




Press **Stop/Reset** three times; the display will return to the time of the day and Child Safety Lock will be cancelled.

NOTES:


1. This feature prevents the electronic operation of the oven until cancelled. It does not lock the door.
2. To set or cancel Child Safety Lock, **Start** or **Stop/Reset** Button must be pressed 3 times within 10 seconds.
3. You can set Child Safety Lock feature when the display shows a colon or time of day.

Cooking

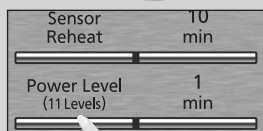

If cooking at high power (10), skip to step 2. Press **Power Level** until the desired power level appears in the display. P10 is the highest and P1 is the lowest. P0 is the keep warm feature.

Press	Power Level
once	P10 (HIGH)
twice	P9
3 times	P8
4 times	P7 (MED-HIGH)
5 times	P6 (MEDIUM)
6 times	P5
7 times	P4
8 times	P3 (MED-LOW)/DEFROST
9 times	P2
10 times	P1 (LOW)
11 times	P0 (KEEP WARM)

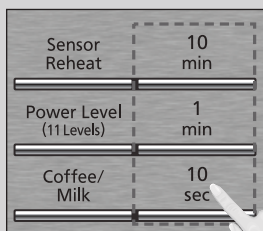

Set cooking time using the **Time Buttons**. P10 (HIGH) has max. cooking time of 30 minutes. For other power levels, the max. time is 99 minutes 50 seconds.



Press **Start**; the cooking will start and the time will count down in the display. At the end of cooking, five beeps will sound.

NOTES:

- For reheating, use P10 (HIGH) for liquids, P7 (MED-HIGH) for most foods, and P6 (MEDIUM) for dense foods.
- For defrosting, use P3 (MED-LOW).
- After pressing **Start**, the selected pressing power level can be recalled. Hold **Power Level** for 2 seconds, then the display window will indicate the power level and keep for 2 seconds.

DO NOT OVERCOOK:

This oven requires less time to cook than older units. Overcooking will cause food to dry out and may cause a fire. A microwave oven's cooking power tells you the amount of microwave power available for cooking.


Multistage Cooking:

For more than one stage of cooking, repeat steps 1 and 2 for each stage of cooking before pressing **Start**. The maximum number of stages for cooking is three. When operating, two beeps will sound between each stage. Five beeps will sound at the end of the entire sequence. Automatic function (such as Sensor Reheat, Coffee/Milk, Turbo Defrost, Popcorn and Sensor Cook) can not be used with 3 stage cooking.


Setting a Standing Time




Some recipes call for a standing time after cooking. Press **Power Level** until the desired power level appears in the display.

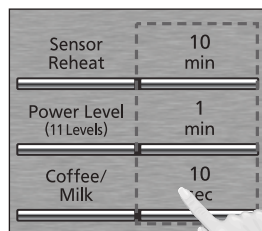


Set cooking time using the **Time Buttons**.

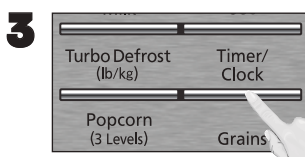

Press **Timer/Clock** once.

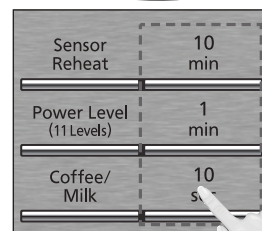


Set desired standing time using **Time Buttons** (up to 99 minutes 50 seconds).

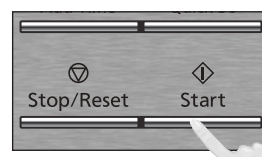


Press **Start**. The timer will start and then beep twice at the end of cooking time (the beginning of standing time). Five beeps will sound when standing time is done.



Setting the Kitchen Timer

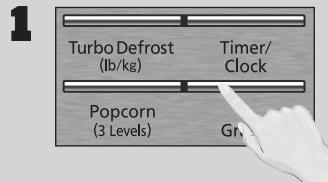

This feature allows you to program the oven as a kitchen timer. Press **Timer/Clock** once.

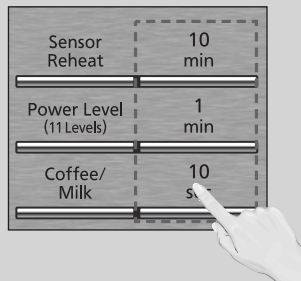


Set desired amount of time using **Time Buttons** (up to 99 minutes 50 seconds).

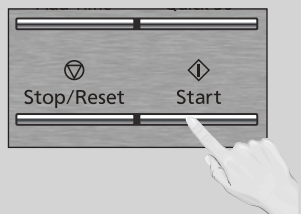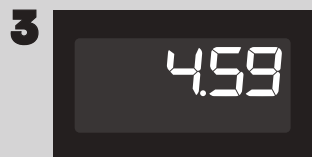


Press **Start**. The timer will count down without cooking and beep five times when done.

Caution: If oven lamp is lit while using the timer feature with door closed, the oven is **NOT** set properly; **STOP OVEN IMMEDIATELY** and re-read instructions.


Setting a Delayed Start

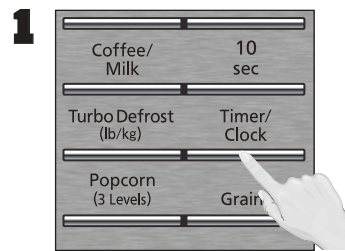


This feature can be used to delay the start of your cooking. To do this, first press **Timer/Clock**.

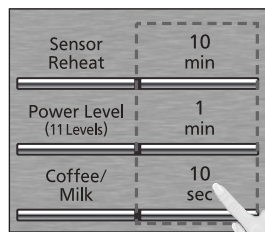


Enter the desired delay time (up to 99 minutes 50 seconds) using the **Time Buttons**.

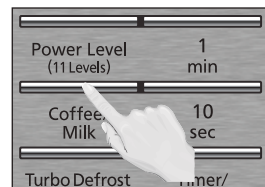

Press **Power Level** until the desired power level appears in the display. P10 is the highest and P1 is the lowest.

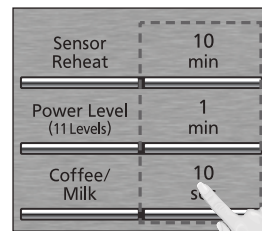

Set Cooking Time using the **Time Buttons** (see previous page for maximum times).

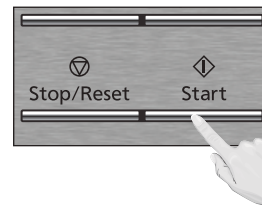


Press **Start**; the delay time will count down, then cooking will begin. At the end of cooking, five beeps will sound.

NOTES:


1. When each stage finishes, the oven will beep twice. At the end of the program, the oven will beep five times.
2. If the oven door is opened during Standing Time, Kitchen Timer or Delayed Start, the time on the display will continue to count down.
3. Standing Time and Delayed Start cannot be programmed before any automatic function (such as Sensor Reheat, Coffee/Milk, Turbo Defrost, Popcorn and Sensor Cook). This is to prevent the starting temperature of food from rising.
4. When using Standing Time or Delayed Start, it's up to 2 power stages.

Quick 30

(Set or add cooking time in 30 seconds increments)

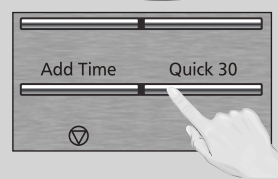

Press **Quick 30** until the desired cooking time (up to 5 minutes) appears in the display. Power Level is pre-set at P10.

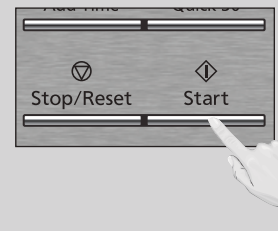



Press **Start**; the cooking will start and the time will count down in the display. At the end of cooking, five beeps will sound.

NOTES:


1. This function is only available for Microwave, Keep Warm and Timer. If desired, you can use other power levels. Select desired power level before pressing **Quick 30**.
2. After setting the time by **Quick 30** Button, you cannot use the **Time Buttons**.
3. **Quick 30** Button can also be used to add more time (up to 5 minutes) during manual cooking.

Add Time

 (This feature allows you to add cooking time at the end of previous cooking.)

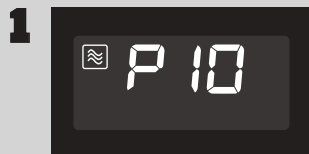

After cooking, press **Add Time** Button.

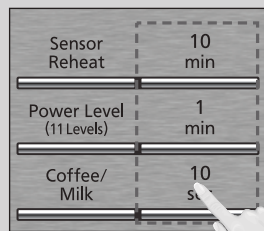

Add cooking time by pressing the **Time** Buttons. Maximum cooking time: Microwave: P10 up to 30 minutes; other powers up to 99 minutes and 50 seconds.



Press **Start**. Time will be added. The time in the display window will count down.

NOTES:



1. This function is only available for Microwave, Keep Warm and Timer.
2. The Add Time function will be cancelled if you do not perform any operation for 1 minute after cooking.
3. The Add Time function can be used after the 3-stage cooking.
4. The power level is the same as the last stage.

Keep Warm


(Will keep food warm for up to 30 minutes after cooking)



Press **Power Level** 11 times to select the P0 (KEEP WARM).

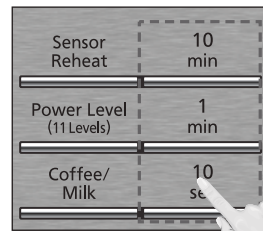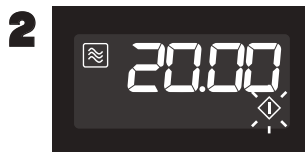

Set warming time using **Time** Buttons, up to 30 minutes. Set 20 minutes cooking for an example.

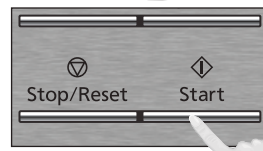


Press **Start**; the cooking will start and the time will count down in the display. At the end of cooking, five beeps will sound.

NOTES:

1. After pressing **Start**, the selected power level can be recalled. Hold **Power Level** for 2 seconds, then the display window will indicate the power level and keep for 2 seconds.
2. **P0 (KEEP WARM)** can be set as the final stage after cook time has been manually entered. It cannot be used with Automatic function (such as Sensor Reheat, Coffee/Milk, Turbo Defrost, Popcorn and Sensor Cook).


Coffee/Milk

(Example: To reheat 2 cups coffee.)

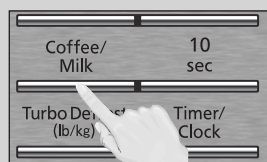

Press **Coffee/Milk** until the desired menu appears in the display window.

Press	Menu
once	1 cup coffee (1-1)
twice	2 cups coffee (1-2)
3 times	1 cup milk (2-1)
4 times	2 cups milk (2-2)

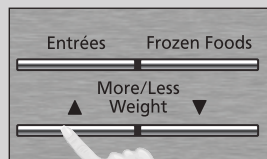

If desired, press ▲ (More) to add 10% more time than suggested. Press ▼ (Less) to subtract 10% cooking time.




Press **Start**. Reheat will start. The time in the display window will count down.

NOTES:


1. Use a microwave safe cup.
2. Heated coffee/milk can erupt if not mixed with air. Do not heat coffee/milk in your microwave oven without stirring before and halfway through heating.
3. Care must be exercised not to overheat coffee/milk when using the Coffee/Milk feature. It is programmed to give proper result when heating 1 cup or 2 cups of coffee/milk, starting from room temperature for coffee and refrigerator temperature for milk. Overheating will cause an increased risk of scalding, or water eruption. Refer to page 4, item 18.
4. 1 cup of milk is $\frac{3}{4}$ cup (200 ml) to 1 cup (250 ml) and 1 cup of coffee is $\frac{7}{16}$ cup (150 ml) to $\frac{3}{4}$ cup (200 ml).

Popcorn

(Example: To pop 3.2 oz. (91 g) of popcorn)

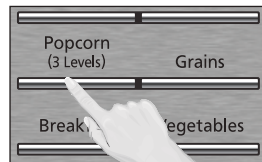

Press **Popcorn** until the desired size appears in the display. Once for 3.2 oz. (91 g), twice for 2.75 oz. (78 g), or three times for 1.5 oz. (42 g).

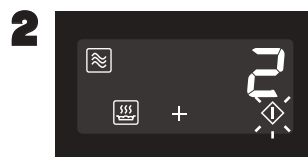

If desired, press ▲ / ▼ (More/ Less) to add or subtracts cooking time.



Press **Start**; After several seconds, cooking time appears in the display window and begins to count down.

NOTES:

1. Pop one bag at a time.
2. Place bag in oven according to manufacturers' directions.
3. Start with popcorn at room temperature.
4. Allow popped corn to sit unopened for a few minutes.
5. Open bag carefully to prevent burns, because steam will escape.
6. Do not reheat unpopped kernels or reuse bag.
7. If popcorn is of a different weight than listed, follow instructions on popcorn package.
8. **Never leave the oven unattended.**
9. **If popping slows to 2 to 3 seconds between pops, stop oven. Overcooking can burn popcorn or cause fire.**
10. When popping multiple bags one right after the other, the cooking time may vary slightly. This does not affect the popcorn results.

More/Less (For Popcorn)

By using the ▲ / ▼ (More/ Less), the programs can be adjusted to cook popcorn for a longer or shorter time if desired.

Press ▲ (More):


- 1 tap = Adds Approx. 10 secs.
- 2 taps = Adds Approx. 20 secs.

Press ▼ (Less):

- 1 tap = Subtracts Approx. 10 secs.
- 2 taps = Subtracts Approx. 20 secs.

Press ▲ / ▼ (More/Less) before pressing **Start**.


Turbo Defrost

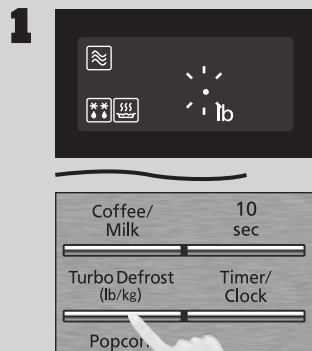

This feature allows you to defrost foods such as meat, poultry and seafood, simply by entering the weight. Press **Turbo Defrost**.



Select the weight of food by pressing **▲/▼** Buttons.

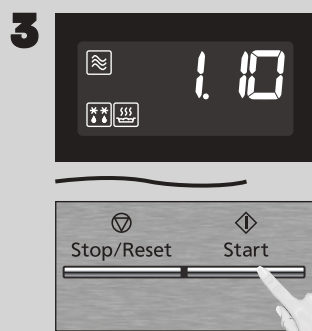

Press **Start**. Defrosting will start. Larger weight foods will cause a signal midway through defrosting. If two beeps sound, turn over and/or rearrange foods.

NOTE:

The maximum weight for Turbo Defrost is 6 lbs. (3 kg).

Conversion

Follow the chart to convert ounces or hundredths of a pound into tenths of a pound. To use Turbo Defrost, enter the weight of the food in pounds (1.0) and tenths of a pound (0.1). If a piece of meat weighs 1.95 lbs or 1 lb 14 oz., enter 1.9 lbs.

Ounces	Hundredths of a Pound	Tenths of a Pound
0	.01 – .05	0.0
1 – 2	.06 – .15	0.1
3 – 4	.16 – .25	0.2
5	.26 – .35	0.3
6 – 7	.36 – .45	0.4
8	.46 – .55	0.5
9 – 10	.56 – .65	0.6
11 – 12	.66 – .75	0.7
13	.76 – .85	0.8
14 – 15	.86 – .95	0.9

Defrosting Tips & Techniques

Preparation For Freezing:

1. Freeze meats, poultry, and fish in packages with only one or two layers of food. Place wax paper between layers.
2. Package in heavy-duty plastic wraps, bags (labeled "For Freezer"), or freezer paper.
3. Remove as much air as possible.
4. Seal securely, date, and label.

To Defrost:

1. Remove wrapper. This helps moisture to evaporate. Juices from food can get hot and cook the food.
2. Set food in microwave safe dish.
3. Place roasts fat-side down. Place whole poultry breast-side down.
4. Select power and minimum time so that items will be under-defrosted.



5. Drain liquids during defrosting.
6. Turn over (invert) items during defrosting.

After Defrosting:



1. Large items may be icy in the center. Defrosting will complete during Standing Time.
2. Let stand, covered, following standing time directions on page 12.
3. Rinse foods indicated in the chart.
4. Items which have been layered should be rinsed separately or have a longer standing time.

FOOD	DEFROST TIME at P3 mins (per lb)	DURING DEFROSTING	AFTER DEFROSTING	
			Standing Time	Rinse (cold water)
Fish and Seafood [up to 3 lbs. (1.4 kg)]	6	Break apart/Rearrange	5 min.	YES
Crabmeat				
Fish Steaks	5 to 6	Turn over		
Fish Fillets	5 to 6	Turn over/Rearrange/Shield ends		
Sea Scallops	5 to 6	Break apart/Remove defrosted pieces		
Whole fish	5 to 6	Turn over		
Meat				
Ground Meat	4 to 5	Turn over/Remove defrosted portion/Shield edges	10 min.	NO
Roasts [2½-4 lbs. (1.1-1.8 kg)]	4 to 8	Turn over/Shield ends and defrosted surface	30 min. in refrig.	
Chops/Steak	6 to 8	Turn over/Rearrange/Shield ends and defrosted surface	5 min.	
Ribs/T-bone	6 to 8	Turn over/Rearrange/Shield ends and defrosted surface		
Stew Meat	4 to 8	Break apart/Rearrange/ Remove defrosted pieces		
Liver (thinly sliced)	4 to 6	Drain liquid/Turn over/ Separate pieces		
Bacon (sliced)	4	Turn over	----	
Poultry				
Chicken, Whole [up to 3 lbs. (1.4 kg)]	4 to 6	Turn over	20 min. in refrig.	YES
Cutlets	4 to 6	Break apart/Turn over/ Remove defrosted Pieces	5 min.	
Pieces	4 to 6	Break apart/Turn over/Shield	10 min.	
Cornish hens	6 to 8	Turn over/Shield		
Turkey Breast [5-6 lbs. (2.3-2.7 kg)]	6	Turn over/Shield	20 min. in refrig.	


Sensor Reheat

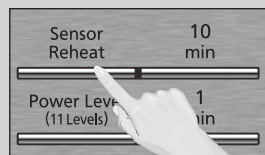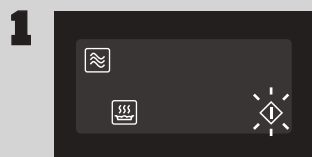

Press **Sensor Reheat**.

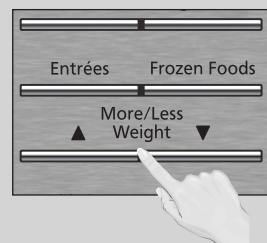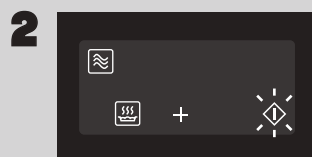

If desired, press **▲ (More)** to add 20% more time than suggested. Press **▼ (Less)** to subtract 20% cooking time.

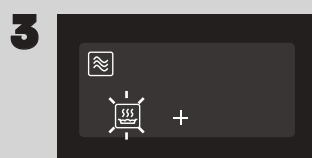

Press **Start**. Reheating is complete when five beeps sound.

NOTES:

1. All foods, such as casseroles, plated dinners, soups, stews, pasta dishes (except lasagne) and canned foods, must be pre-cooked. Foods should be reheated from refrigerator or room temperature, do not reheat frozen foods on this setting. Do not reheat in foil or plastic containers as unsuccessful reheating times will result. All foods should be covered with vented plastic wrap or a fitting lid. Where possible after heating, stir foods and stand covered for 3 to 5 minutes before serving.

2. After having used the Sensor Reheat feature a few times, you may decide you would prefer your food cooked to a different doneness – that is why you would utilize the **▲ / ▼ (More/Less)** Buttons.

3. When steam is detected by the Genius Sensor and two beeps sound, the remaining cooking time will appear in the display.

Casseroles: Add three to four tablespoons of liquid, cover with lid or vented plastic wrap. Stir when time appears in the display window.

Canned foods: Empty contents into casserole dish or serving bowl, cover dish with lid or vented plastic wrap. After reheating, let stand for a few minutes.


Plate of food: Arrange food on plate; top with butter, gravy, etc. Cover with lid or vented plastic wrap. After reheating, let stand for a few minutes.

DO NOT USE SENSOR REHEAT:



1. To reheat bread and pastry products. Use manual power and time for these foods.
2. For raw or uncooked foods.
3. If oven cavity is warm.
4. For beverages.
5. For frozen foods.

Sensor Cook


(Breakfast/Entrées/Grains/Vegetables/Frozen Foods)

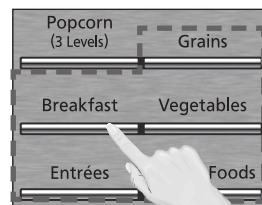

For example: Press **Breakfast** until the number corresponding to the desired menu appears in the display (see chart on the next page).

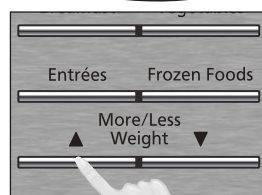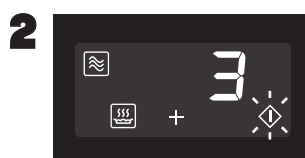

If desired, press **▲ (More)** to add 20% more time than suggested. Press **▼ (Less)** to subtract 20% cooking time.

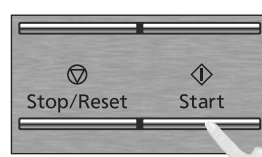

Press **Start**. Cooking is complete when five beeps sound.

NOTES:

1. After having used the Sensor Cook feature a few times, you may decide you would prefer your food cooked to a different doneness – that is

why you would utilize the **▲ / ▼ (More/Less)** Buttons.

2. When steam is detected by the Genius Sensor and two beeps sound, the remaining cooking time will appear in the display.
3. Automatic features are provided for your convenience. If results are not suitable to your individual preference, or if serving size is other than what is listed on page 18-19, please refer to manual cooking on page 12.

For the best results with the GENIUS SENSOR, follow these recommendations:

BEFORE Reheating/Cooking:

1. The room temperature surrounding the oven should be below 95°F (35°C).
2. Food weight should exceed 4 oz. (110 g).
3. Be sure the glass tray, the outside of the cooking containers and the inside of the microwave oven are dry before placing food in the oven. Residual beads of moisture turning into steam can mislead the sensor.
4. Cover food with lid, or with vented plastic wrap. Never use tightly sealed plastic containers—they can prevent steam from escaping and cause food to overcook.

DURING Reheating/Cooking:

DO NOT open the oven door until two beeps sound and cooking time appears in the display. Doing so will cause inaccurate cooking since the steam from food is no longer contained within the oven cavity. Once the cooking time begins to count down, the oven door may be opened to stir, turn or rearrange foods.

AFTER Reheating/Cooking: All foods should have a standing time.

Operation (continued)

Sensor Cook Chart

	Menu	Serving/Weight	Hints
Grains	1. White Rice	½ – 1 ½ cups (110 – 335 g)	Place rice with hot tap water in a microwave safe casserole dish. Cover with lid or vented plastic wrap. After 2 beeps, stir. Let stand 5 to 10 minutes before serving. Add 2 parts water to 1 part rice.
	2. Quinoa	¼ – 1 cup (45 – 180 g)	Place quinoa in a 3 qt microwave safe casserole dish. Add 2 parts water to 1 part quinoa. For ¼ cup, triple water may need as necessary. Cover with lid or vented plastic wrap. After 2 beeps, stir. Let stand 14 minutes before serving.
Breakfast	3. Oatmeal	½ – 1 cup (40 – 80 g)	Place oatmeal in a microwave safe serving bowl with no cover. Follow manufacturers' directions for preparation.
	4. Breakfast Sausage	2 – 8 links	Follow manufacturers' directions for preparation of pre-cooked breakfast sausage. Place in a radial pattern.
	5. Omelet	2 – 4 eggs	Follow basic Omelet recipe on next page.
Vegetables	6. Fresh Vegetables	4 – 16 oz. (110 – 450 g)	All pieces should be the same size. Wash thoroughly, add 1 tbsp (15 ml) of water per ½ cup (125 ml) of vegetables, and cover with lid or vented plastic wrap. Do not salt/butter until after cooking.
Entrées	7. Stew	4 Serv.	In a 3 qt casserole dish, crumble 1 lb (450 g) lean ground beef and stir in 2 medium onions (chopped), teaspoon (1 ml) dried garlic pieces. Add 1 lb (450 g) pinto or red kidney beans (soak overnight), 15 oz. (425 g) stewed tomatoes (chopped), 15 oz. (425 g) tomato sauce, 1 teaspoon (5 ml) salt and 2 to 3 tablespoons (10 to 15 ml) chili powder. Cover with lid, using Stew selection. After 2 beeps, stir. Recover and press Start. Stir after cooking. Cover again and let stand 7 minutes before serving.
	8. Ground Meat	16 – 32 oz. (450 – 900 g)	Break apart in glass bowl or colander. Cover with lid or vented plastic wrap. After 2 beeps, stir. Recover and press Start. Juices should be clear. Drain.
	9. Fish Fillets	4 – 16 oz. (110 – 450 g)	Arrange in a single layer. Cover with lid or vented plastic wrap.
	10. Soup	1 – 2 cups (250 – 500 ml)	Pour soup into a microwave safe serving bowl. Cover with lid or vented plastic wrap. Stir after cooking.
	11. Pasta	2 – 8 oz. (55 – 220 g)	Place 2 oz. (55 g) pasta with 3 cups (750 ml) hot tap water in a 2 qt microwave safe casserole, salt and oil, if desired, covered with lid or vented plastic wrap. After 2 beeps, stir. For 4 oz. (110 g) pasta use 4 cups (1000 ml) water, for 6 oz. (165 ml) pasta use 6 cups (1500 ml) hot water in 3 qt casserole, for 8 oz. (220 g) pasta use 7 cups (1750 ml) hot tap water.
	12. Potatoes	1 – 4 potatoes (6 – 8 oz. each) (170 -220 g)	Pierce each potato with a fork 6 times spacing around surface. Place potato or potatoes around the edge of paper-towel-lined Glass Tray (Turntable), at least 1 inch (2.5 cm) apart. Do not cover. Turn over after 2 beeps. Let stand 5 minutes to complete cooking.

Operation (continued)

	Menu	Serving/Weight	Hints
Frozen Foods	13. Frozen Entrées	8 – 28 oz. (220 – 800 g)	Follow manufacturers' directions for preparation. After 2 beeps, stir or rearrange. Be careful when removing the film cover after cooking. Remove facing away from you to avoid steam burns. If additional time is needed, continue to cook manually.
	14. Frozen Pizza (single)	8 oz. (220 g)	Follow manufacturers' directions for preparation. Add more time of cooking if needed.
	15. Frozen Vegetables	6 – 16 oz. (170 – 450 g)	Wash thoroughly, add 1 tbsp (15 ml) of water per ½ cup (125 ml) of vegetables, and cover with lid or vented plastic wrap. Do not salt/butter until after cooking. (Not suitable for vegetables in butter or sauce.)
	16. Frozen Dinners	11 – 16 oz. (300 – 450 g)	Follow manufacturers' directions for covering or removing covers. Do not use frozen foods packaged in foil trays. After 2 beeps, stir or rearrange.

Recipe

OMELET

Basic Omelet Recipe

1 Tablespoon (15 ml) butter or margarine

2 Eggs

2 Tablespoons (30 ml) milk

Salt and ground black pepper, if desired.

Heat butter in a microwave safe 9-inch (23 cm) pie plate, 20 seconds at P10, or until melted.

Turn the plate to coat the bottom with butter. Meanwhile, combine the remaining ingredients in a separate bowl, beat together and pour into the pie plate. Cook, covered with vented plastic wrap, using OMELET selection. Let stand 2 minutes. With a spatula, loosen the edges of the omelet from the plate, fold into thirds to serve. **Always beat the eggs before making the omelet.**

Yield: 1 Serving

Approx. cooking time: 4 minutes.

NOTE: Double ingredients for a 4-egg Omelet.

Microwave shortcuts

Food	Power	Time (in mins.)	Directions
To separate refrigerated Bacon , 1 pound (450 g)	P10 (HIGH)	30 sec.	Remove wrapper and place in microwave safe dish. After heating, use a plastic spatula to separate slices.
To soften refrigerated Butter , 1 stick, ¼ pound (110 g) To melt refrigerated Butter , 1 stick, ¼ pound (110 g)	P3 (MED-LOW) P6 (MEDIUM)	1 1½ – 2	Remove wrapper and place butter in a microwave safe dish covered with lid or vented plastic wrap. Remove wrapper and place butter in a microwave safe dish.
To melt Chocolate , 1 square, 1 oz. (28 g) To melt Chocolate , ½ cup (125 ml) chips	P6 (MEDIUM) P6 (MEDIUM)	1 – 1½ 1 – 1½	Remove wrapper and place chocolate in a microwave safe dish. After heating, stir until completely melted. <i>NOTE: Chocolate holds its shape even when softened.</i>
To toast Coconut , ½ cup (125 ml)	P10 (HIGH)	1	Place in a microwave safe dish. Stir every 30 seconds.
To soften Cream Cheese , 8 oz. (220 g)	P3 (MED-LOW)	1 – 1½	Remove wrapper and place in a microwave safe bowl.
To brown Ground Beef , 1 pound (450 g)	P10 (HIGH)	4 – 5	Crumble into a microwave safe colander set into another dish. Cover with plastic wrap. Stir twice. Drain grease.
To cook Vegetables , Fresh (½ lb.) (225 g) Frozen (10 oz.) (280 g) Canned	P8 P8 P8	4 – 5 6 – 7 3½ – 4	All pieces should be the same size. Wash thoroughly, add 1 tbsp of water per ½ cup of vegetables, and cover with lid or vented plastic wrap. Do not salt/butter until after cooking. Wash thoroughly, add 1 tbsp of water per ½ cup of vegetables, and cover with lid or vented plastic wrap. Do not salt/butter until after cooking. (Not suitable for vegetables in butter or sauce.) Empty contents into microwave safe serving bowl. Do not cover.
To cook baked Potato , (6 – 8 oz. each) (170 – 220 g) 1 piece 2 pieces	P8 P8	4 – 5 6 – 7	Pierce each potato with a fork 6 times spacing around surface. Place potato or potatoes around the edge of paper-towel-lined glass tray (Turntable), at least 1 inch (2.5 cm) apart. Do not cover. Let stand 5 minutes to complete cooking.
To steam Hand Towel	P10 (HIGH)	20 – 30 sec.	Soak in water, then wring out excess. Place on a microwave safe dish. heat. Present immediately.

Microwave shortcuts (continued)

Food	Power	Time (in mins.)	Directions
To soften Ice Cream , ½ gallon (2 L)	P3	1 – 1½	Check often to prevent melting.
Cup of liquid To boil water, broth , etc. 1 cup, 8 oz. (250 ml) 2 cups, 16 oz. (500 ml)	P10 (HIGH) P10 (HIGH)	1½ – 2 2½ – 3	Heated liquids can erupt if not stirred. Do not heat liquids in microwave oven without stirring before heating.
Cup of liquid To warm Beverage , 1 cup, 8 oz. (250 ml) 2 cups, 16 oz. (500 ml)	P7 (MED-HIGH) P7 (MED-HIGH)	1½ – 2 2½ – 3	
To roast Nuts , 1½ cups (375 ml)	P10 (HIGH)	3 – 4	Spread nuts into a 9-inch (23 cm) microwave safe pie plate. Stir occasionally.
To toast Sesame Seeds , ¼ cup (60 ml)	P10 (HIGH)	2 – 2½	Place in a small microwave safe bowl. Stir twice.
To skin Tomatoes , (one at a time)	P10 (HIGH)	30 sec.	Place tomato into a microwave safe bowl containing boiling water. Rinse and peel. Repeat for each tomato.
To remove Cooking Odors	P10 (HIGH)	5	Combine 1 to 1½ cups (250 – 375 ml) water with the juice and peel of one lemon in a 2 quart microwave safe bowl. After water finishes boiling, wipe interior of oven with a cloth. You can also use a combination of several whole cloves and ¼ cup of vinegar with 1 cup of water.

Food Characteristics

Food Characteristics

Bone and Fat

Both bone and fat affect cooking. Bones may cause irregular cooking. Meat next to the tips of bones may overcook while meat positioned under a large bone, such as a ham bone, may be undercooked. Large amounts of fat absorb microwave energy and the meat next to these areas may overcook.



Density

Porous, airy foods such as breads, cakes or rolls take less time to cook than heavy, dense foods such as potatoes and roasts. When reheating donuts or other foods with different centers be very careful. Certain foods have centers made with sugar, water, or fat and these centers attract microwaves (for example, jelly donuts). When a jelly donut is heated, the jelly can become extremely hot while the exterior remains warm to the touch. This could result in a burn if the food is not allowed to cool properly in the center.



Quantity

Two potatoes take longer to cook than one potato. As the quantity of the food decreases so does the cooking time. Overcooking will cause the moisture content in the food to decrease and a fire could result. Never leave microwave unattended while in use.



Shape

Uniform sizes heat more evenly. The thin end of a drumstick will cook more quickly than the meaty end. To compensate for irregular shapes, place thin parts toward the center of the dish and thick pieces toward the edge.



Size

Thin pieces cook more quickly than thick pieces.



Starting Temperature

Foods that are at room temperature take less time to cook than if they are chilled, refrigerated or frozen.



Cooking Techniques

Piercing

Foods with skins or membranes must be pierced, scored or have a strip of skin peeled before cooking to allow steam to escape. Pierce clams, oysters, chicken livers, whole potatoes and whole vegetables. Whole apples or new potatoes should have a 1-inch (2.5 cm) strip of skin peeled before cooking. Score sausages and frankfurters. Do not Cook/Reheat whole eggs, with or without the shell. Steam buildup in whole eggs may cause them to explode, and possibly damage the oven or cause injury. Reheating SLICED hard-boiled eggs and cooking SCRAMBLED eggs is safe.

Browning

Foods will not have the same brown appearance as conventionally cooked foods or those foods which are cooked utilizing a browning feature. Meats and poultry may be coated with browning sauce, Worcestershire sauce, barbecue sauce or shake-on browning sauce. To use, combine browning sauce with melted butter or margarine and brush on before cooking. For quick breads or muffins, brown sugar can be used in the recipe in place of granulated sugar, or the surface can be sprinkled with dark spices before baking.

Spacing

Individual foods, such as baked potatoes, cupcakes and appetizers, will cook more evenly if placed in the oven equal distances apart. When possible, arrange foods in a circular pattern.

Covering

As with conventional cooking, moisture evaporates during microwave cooking. Casserole lids or plastic wrap are used for a tighter seal. When using plastic wrap, vent the plastic wrap by folding back part of the plastic wrap from the edge of the dish to allow steam to escape. Loosen or remove plastic wrap as recipe directs for standing time. When removing plastic wrap covers, as well as any glass lids, be careful to remove them away from you to avoid steam burns. Various degrees of moisture retention are also obtained by using wax paper or paper towels.

Shielding

Thin areas of meat and poultry cook more quickly than meaty portions. To prevent overcooking, these thin areas can be shielded with strips of aluminum foil. Wooden toothpicks may be used to hold the foil in place. **⚠ CAUTION** is to be exercised when using foil. Arcing can occur if foil is too close to oven wall or door and damage to your oven will result.

Cooking Time

Cooking times will vary because of food shape variations, starting temperature, and regional preferences. Always cook food for the minimum cooking time given in a recipe and check for doneness. If the food is undercooked, continue cooking. It is easier to add time to an undercooked product. Once the food is overcooked, nothing can be done.

Food Characteristics (continued)

Stirring

Stirring is usually necessary during microwave cooking. Always bring the cooked outside edges toward the center and the less cooked center portions toward the outside of the dish.

Rearranging

Rearrange small items such as chicken pieces, shrimp, hamburger patties or pork chops. Rearrange pieces from the edge to the center and pieces from the center to the edge of the dish.

Turning

It is not possible to stir some foods to distribute the heat evenly. At times, microwave energy will concentrate in one area of the food. To help ensure even cooking, these foods need to be turned. Turn over large foods, such as roasts or turkeys, halfway through cooking.

Standing Time

Most foods will continue to cook by conduction after the microwave oven is turned off. After cooking meat, the internal temperature will rise 5 °F to 15 °F (3 °C to 8 °C), if allowed to stand, tented with foil, for 10 to 15 minutes. Casseroles and vegetables need a shorter amount of standing time, but this standing time is necessary to allow foods to complete cooking to the center without overcooking on the edges.

Test for Doneness

The same tests for doneness used in conventional cooking may be used for microwave cooking. Meat is done when fork-tender or splits at fibers. Chicken is done when juices are clear yellow and drumstick moves freely. Fish is done when it flakes and is opaque. Cake is done when a toothpick or cake tester is inserted and comes out clean.

Check foods to see that they are cooked to the United States Department of Agriculture's recommended temperatures.

To test for doneness, insert a meat thermometer in a thick or dense area away from fat or bone. NEVER leave the thermometer in the food during cooking, unless it is approved for microwave oven use.

Cook all food to these minimum internal temperatures as measured with a food thermometer before removing food from oven. For reasons of personal preference, you may choose to cook food at higher temperatures.

Product	Minimum Internal Temperature & Rest Time
Beef, Pork, Veal & Lamb Steaks, chops, roasts	145 °F (63 °C) and allow to rest for at least 3 minutes
Ground meats	160 °F (71 °C)
Ham , fresh or smoked (uncooked)	145 °F (63 °C) and allow to rest for at least 3 min.
Fully Cooked Ham (to reheat)	Reheat cooked hams packaged in USDA-inspected plants to 140 °F (60 °C); all others to 165 °F (74 °C).
All Poultry (breasts, whole bird, legs, thighs, and wings, ground poultry, and stuffing)	165 °F (74 °C)
Eggs	160 °F (71 °C)
Fish & Shellfish	145 °F (63 °C)
Leftovers	165 °F (74 °C)
Casseroles	165 °F (74 °C)


Care and Cleaning of Your Microwave Oven

Please see below and the following page for particular cleaning instructions for each section of the oven.

BEFORE CLEANING: Unplug oven at wall outlet. If outlet is inaccessible, leave oven door open while cleaning.

AFTER CLEANING: Be sure to place the Roller Ring and the Glass Tray in the proper position and press **Stop/Reset** Button to clear the Display.

1. **Outside oven surfaces:** Clean with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into ventilation openings.
2. **Label:** Do not remove. Wipe with a damp cloth.
3. **Inside the Oven:** Wipe with a damp cloth after using. Mild detergent may be used if needed. Do not use harsh detergents or abrasives.
4. **Oven Door:** Wipe with a soft dry cloth when steam accumulates inside or around the outside of the oven door. During cooking, especially under high humidity conditions, steam is given off from the food. (Some steam will condense on cooler surfaces, such as the oven door. This is normal.) Inside surface is covered with a heat and vapor barrier film. **Do not remove.**
5. **Oven Cavity Floor:** Clean the bottom surface of the oven with mild detergent, water or window cleaner, and dry.
6. **Wave Guide Cover:** Do not remove Wave Guide Cover. It is important to keep cover clean in the same manner as the inside of the oven.
7. **Control Panel:** The Control Panel is covered with a removable protective film to prevent scratches during shipping. Small bubbles may appear under this film, so if this is the case, remove by applying masking or clear tape to an exposed corner and pull gently. If the Control Panel becomes wet, clean it with a soft dry cloth. Do not use harsh detergents or abrasives.
8. **Glass Tray:** Remove and wash in warm soapy water or in a dishwasher.
9. **Roller Ring:** Roller Ring may be washed in mild soapy water or dishwasher. These areas should be kept clean to avoid excessive noise.

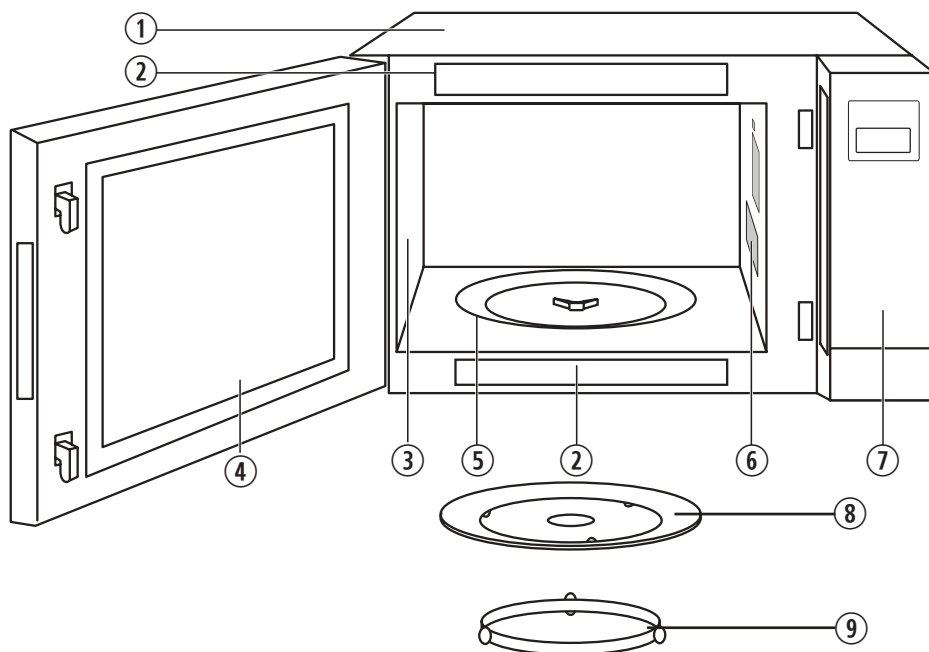

IT IS IMPORTANT TO KEEP THE OVEN CLEAN AND DRY. FOOD RESIDUE AND CONDENSATION MAY CAUSE RUSTING OR ARCING AND DAMAGE TO THE OVEN. AFTER USE, WIPE DRY ALL SURFACES, INCLUDING VENT OPENINGS, OVEN SEAMS, AND UNDER GLASS TRAY.

NOTE:

The illustration is for reference only.

Shop Accessories

Purchase Parts, Accessories and Instruction Books online for all Panasonic Products by visiting our Web Site at:

shop.panasonic.com/support

Parts Available to Order

For NN-SN68KS

Instructions/Operating Manual (this book)	F0003CA00AP
Glass Tray	F06015Q00AP
Roller Ring Assembly	F290D6W50XP

Before Requesting Service

See below before calling for service, as most problems can easily be remedied by following these simple solutions:

Problem	Solution
The oven causes TV interference.	Some radio, TV, Wi-Fi, cordless telephone, baby monitor, blue tooth or other wireless equipment interference might occur when you cook with the microwave oven. This interference is similar to the interference caused by small appliances such as mixers, vacuums, blow dryers, etc. It does not indicate a problem with your oven.
Steam accumulates on oven door and warm air comes from the oven vents.	During cooking, steam and warm air are given off from the food. Most of the steam and warm air are removed from the oven by the air which circulates in the oven cavity. However, some steam will condense on cooler surfaces such as the oven door. This is normal. After use, the oven should be wiped dry (see page 24).
Oven will not turn on.	The oven is not plugged in securely or needs to be reset; remove plug from outlet, wait ten seconds and re-insert. Main circuit breaker or main fuse is tripped; reset main circuit breaker or replace main fuse. There is a problem with the outlet; plug another appliance into the outlet to check if it is working.
Oven will not start cooking.	The door is not completely closed; close the oven door securely. Start was not pressed after programming; press Start . Another program is already entered into the oven; press Stop/Reset to cancel the previous program and enter new program. The program is not correct; program again according to the Owner's Manual. Stop/Reset has been pressed accidentally; program oven again.
The Glass Tray wobbles.	The Glass Tray is not positioned properly on the Roller Ring or there is food under the Roller Ring; take out Glass Tray and Roller Ring. Wipe with a damp cloth and reset Roller Ring and Glass Tray properly.
When the oven is operating, there is noise coming from the Glass Tray.	The Roller Ring and oven bottom are dirty; clean these parts according to Care and Cleaning of Your Microwave Oven (see page 24).
The "🔒" appears in the display.	The CHILD SAFETY LOCK was activated by pressing Start three times; Deactivate CHILD SAFETY LOCK by pressing Stop/Reset three times.
The oven stops cooking and "H00", "H97" or "H98" appears in the display.	The oven's power supply has failed; please contact an authorized Service Center (see next page).

Limited Warranty (Only for U.S.A.)

Panasonic Products Limited Warranty

Limited Warranty Coverage (For USA Only)

If your product does not work properly because of a defect in materials or workmanship, Panasonic Consumer Electronics Corporation (referred to as "the warrantor") will, for the length of the period indicated on the chart below, which starts with the date of original purchase ("warranty period"), at its option either (a) repair your product with new or refurbished parts, (b) replace it with a new or a refurbished equivalent value product, or (c) refund your purchase price. The decision to repair, replace or refund will be made by the warrantor.

Product or Part Name	Labor	Parts
ALL PARTS (EXCEPT MAGNETRON TUBE)	1 yr.	1 yr.
MAGNETRON TUBE	1 yr.	5 yr.

During the "Labor" warranty period there will be no charge for labor. During the "Parts" warranty period, there will be no charge for parts.

This warranty only applies to products purchased and serviced in the United States. This warranty is extended only to the original purchaser of a new product which was not sold "as is".

Carry-In or Mail in Service:

To find a service center please visit: <http://shop.panasonic.com/support>
When shipping the unit, carefully pack and send it in the original (or supplied) carton. Include a letter detailing the complaint along with the bill of sales and provide a daytime phone number where you can be reached. A valid registered receipt is required under the Limited Warranty.
When shipping Lithium Ion batteries please visit our web site at <http://shop.panasonic.com/support> as Panasonic is committed to providing the most up to date information.

IF REPAIR IS NEEDED DURING THE WARRANTY PERIOD, THE PURCHASER WILL BE REQUIRED TO FURNISH A SALES RECEIPT/PROOF OF PURCHASE INDICATING DATE OF PURCHASE, AMOUNT PAID AND PLACE OF PURCHASE. CUSTOMER WILL BE CHARGED FOR THE REPAIR OF ANY UNIT RECEIVED WITHOUT SUCH PROOF OF PURCHASE.

Limited Warranty Limits And Exclusions

This warranty ONLY COVERS failures due to defects in materials or workmanship, and DOES NOT COVER glass, plastic parts, temperature probes (if included) and normal wear and tear or cosmetic damage. The warranty ALSO DOES NOT COVER damages which occurred in shipment, or failures which are caused by products not supplied by the warrantor, or failures which result from accidents, misuse, abuse, neglect, bug infestation, mishandling, misapplication, alteration, faulty installation, set-up adjustments, maladjustment of consumer controls, improper maintenance, power line surge, lightning damage, modification, or commercial use (such as in a hotel, office, restaurant, or other business), rental use of the product, service by anyone other than a Factory Service center or other Authorized Servicer, or damage that is attributable to acts of God.

THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED UNDER "LIMITED WARRANTY COVERAGE".

THE WARRANTOR IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY.

(As examples, this excludes damages for lost time, travel to and from the servicer, loss of or damage to media or images, data or other memory or recorded content. The items listed are not exclusive, but for illustration only.)

ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTY OF MERCHANTABILITY, ARE LIMITED TO THE PERIOD OF THE LIMITED WARRANTY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the exclusions may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state. If a problem with this product develops during or after the warranty period, you may contact your dealer or Service Center. If the problem is not handled to your satisfaction, then write to:

Consumer Affairs Department
Panasonic Corporation of North America
661 Independence Pkwy
Chesapeake, VA23320

PARTS AND SERVICE, WHICH ARE NOT COVERED BY THIS LIMITED WARRANTY, ARE YOUR RESPONSIBILITY.

Shop Accessories!

for all your Panasonic gear

Go to

<http://shop.panasonic.com/support>

Get everything you need to get the most out of
your Panasonic products

Accessories & Parts for your Camera, Phone, A/V
products, TV, Computers & Networking, Personal
Care, Home Appliances, Headphones, Batteries,
Backup Chargers & more...

Customer Services Directory

For Product Information, Operating Assistance,
Parts, Owner's Manuals, Dealer and Service info
go to <http://shop.panasonic.com/support>

For the hearing or speech impaired TTY: 1-877-833-8855

As of June 2015

Specifications

Power Source.....	120 V, 60 Hz
Power Consumption	12.4 A, 1,480 W
Cooking Power*	1,200 W
Outside Dimensions (W x H x D)	20 ¹¹ / ₁₆ " x 12 ¹ / ₄ " x 15 ¹³ / ₁₆ " (525 mm x 310 mm x 401 mm)
Oven Cavity Dimensions (W x H x D).....	13 ¹⁵ / ₁₆ " x 9 ¹⁵ / ₁₆ " x 14 ³ / ₈ " (355 mm x 251 mm x 365 mm)
Operating Frequency.....	2,450 MHz
Net Weight.....	Approx. 25.4 lbs. (11.5 kg)

*IEC Test procedure

Specifications subject to change without notice.

Trim Kit Information

Model Number:.....	NN-TK621S
Outside Dimensions (W x H).....	27" x 16 ¹ / ₂ " (684 mm x 419 mm)
Cabinet Opening (W x H x D)	25 ¹ / ₂ " x 15 ⁵ / ₁₆ " x 21" (648 mm x 389 mm x 533 mm)

User's Record

The serial number of this product may be found on the back side of the oven or on the left side of the control panel. You should note the model number and the serial number of this oven in the space provided and retain this book as a permanent record of your purchase for future reference.

Model No. _____

Serial No. _____

Date of Purchase _____



**Scan this code for special
instructions and features**

Panasonic Consumer Electronics Company,
Division of Panasonic Corporation of North America
Two Riverfront Plaza
Newark, New Jersey 07102

Panasonic Appliances Microwave Oven (Shanghai) Co., Ltd.
Website : **<http://shop.panasonic.com/support>**

Panasonic



Quick Start Cooking Guide with Recipes

Home**CHEF** Magic Pot™

Pan Sear ◦ Simmer ◦ Steam ◦ Grill





Say Hello to the Magic Pot™!

The Panasonic **HomeCHEF Magic Pot™** is your simple, 4-in-1 solution for perfecting your favorite dishes. The Magic Pot helps you prepare food quickly and easily in the microwave oven using 4 cooking methods—sear, simmer, steam, and grill—for the perfect flavor and texture every time.

Safe, easy to use, and easy to clean, the Magic Pot is a trusted companion for preparing your favorite dishes in record time, with exceptional flavor and texture.

What's Included

The **HomeCHEF Magic Pot** is made up of 3 separate pieces. Use them in different combinations to get just the right flavor and texture in your favorite dishes. Check out the recipes in this booklet and find out how!



Stainless Steel **Lid**
with silicone rim

Heat-resistant plastic
Steam Tray

Aluminum **Crispy Pot**
with microwave-
absorbing rubber base

Metal in a Microwave? (Yes, it's okay—and safe!)

We were taught never to place anything metallic in a microwave oven—but the **Magic Pot is microwave safe**. How is that true?




Panasonic designed this pot with silicone, rubber, stainless steel, and aluminum in all the right places to create a safe, optimal cooking experience. When the Magic Pot is placed correctly in the center of the microwave oven, the metal deflects heat and the rubber base absorbs it, conducting the heat only to the bottom and sides of the Crispy



Pot. Please see below (and your User Manual) for correct placement of the pot in the microwave.

How Do I Place the Magic Pot Correctly in the Microwave?

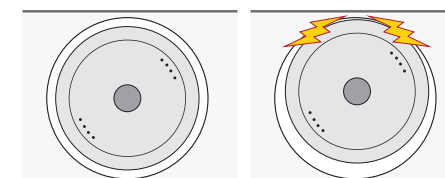

CORRECT – Centered **NO** – Too close to wall

The pot should be placed in the center of the microwave turntable. **NEVER** let the Magic Pot touch the walls of the microwave, as it will cause arcing (sparks). If arcing occurs, immediately stop the microwave cooking and center the Magic Pot.

Is the Magic Pot Going to Get Hot?

In a word, YES. Always use oven mitts to insert and remove your Magic Pot from the microwave. Do not touch the heated Magic Pot with your bare hands.

Which Microwave Ovens Are Compatible with My Magic Pot?

The Magic Pot is designed especially for the Panasonic inverter microwave ovens:

- NN-CD87KS (HomeCHEF 4-in-1)
- NN-GN68KS (HomeCHEF 2-in-1)
- NN-SN68KS (Compact Microwave)

What Microwave Settings Do I Use with My Magic Pot?

For multi-function ovens, the Magic Pot is compatible only with certain oven settings. Using the Broil or other functions with the Stainless Steel Lid will damage your Magic Pot. Please see your User Manual for instructions in more detail.

Four Cooking Methods

We’ve designed the Magic Pot to be incredibly versatile! Use the components in different combinations for four different cooking methods. Each method has its own way of bringing out just the right texture and flavor of different foods.

Here’s an overview. For individual recipes and cooking charts, see pages 6–15.

PAN SEAR



Equipment: Crispy Pot + Stainless Steel Lid

Cook: Fish fillets, chicken pieces, burgers

How it Works: Heat is directed to the Crispy Pot to brown and crisp food from the bottom up, while Stainless Steel Lid contains moisture to keep food juicy


Instructions: Place ingredients directly in Crispy Pot, cover with the Stainless Steel Lid, and place in the middle of the glass turntable. If needed, turn or rearrange food during cooking. When done, carefully remove from oven using oven mitts.

Equipment: Crispy Pot + Stainless Steel Lid

Cook: Risotto, seafood pot, stews, soups

How it Works: Heat is directed to the Crispy Pot to simmer food while Stainless Steel Lid retains liquid

Instructions: No preheating needed. Place ingredients directly in Crispy Pot, cover with Stainless Steel Lid, and place in the middle of the glass turntable. If needed, stir during cooking. When done, carefully remove from oven using oven mitts.

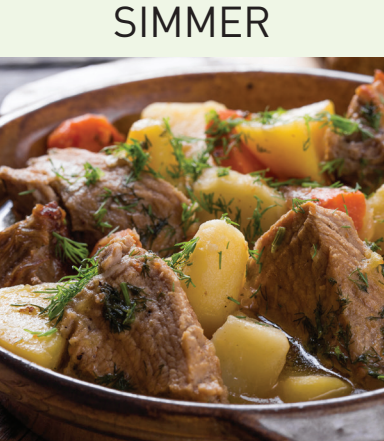

Equipment: Crispy Pot + Steam Tray + Stainless Steel Lid

Cook: Vegetables, potatoes, fish, chicken breast

How it Works: Water boils under Stream Tray, steaming food that rests on the Tray, while Stainless Steel Lid contains moisture

Instructions: Pour the specified amount of water into Crispy Pot and place Steam Tray inside Pot. Place food directly on Steam Tray. Cover Crispy Pot with Stainless Steel Lid and place on the glass turntable. If needed, turn or rearrange food during cooking. When done, carefully remove from oven using oven mitts.




Equipment: Crispy Pot

Cook: Pizza, quiche, pie, breaded foods

How it Works: Microwaves cook food while the FlashXpress broiler browns and crisps the top.

Instructions: Brush empty Crispy Pot with oil, place directly on glass turntable, and preheat per recipe. Place food directly in the preheated Pot and cook with Combo feature. Carefully remove Crispy Pot from oven using oven mitts.

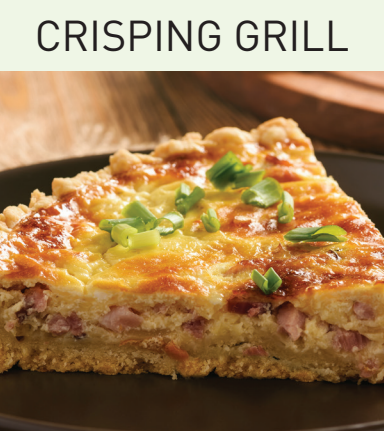

Note: Please refer to the cooking chart on pages 14-15 for more details.
Caution: When removing food from the microwave oven, be sure to use oven mitts. Contents will be very hot.



Honey Sesame Salmon

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

- 1 jar Honey Sesame Stir Fry Sauce
- 1 lb Fresh skin-on Salmon (2" thick)

Coarse sea salt and freshly ground pepper to taste

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Directions

1. Preheat empty Crispy Pot: place in center of microwave oven's glass turntable and set on **Microwave 1000W / P9** for 3 minutes
 2. Using oven mitt, carefully remove hot Crispy Pot from oven
 3. Lightly brush olive oil on salmon skin and season both sides with salt and pepper
 4. Cut Salmon into 2" pieces. Place salmon skin-side down on preheated Crispy Pot
 5. Using brush, spread Stir Fry Sauce over salmon
 6. Cover with Stainless Steel Lid and, using oven mitts, place in center of oven. Cook on **Microwave 1000W / P9** for 8 minutes
- Serve with your favorite sides and enjoy.



Braised Bone-In Pork Loin

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

- 2 cups Favorite braising sauce
 - 1.5 lbs Bone-in pork loin, cut into long pieces
 - 1 Tbsp Garlic-infused olive oil
- Coarse sea salt and freshly ground pepper to taste

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Directions

1. Preheat empty Crispy Pot: place in center of oven's glass turntable and set on **Microwave 1000W / P9** for 3 minutes
 2. Using oven mitt, carefully remove hot Crispy Pot from oven
 3. Coat pork with olive oil, then season with salt and pepper
 4. Place pork in Crispy Pot and cover with Stainless Steel Lid. Cook on **Microwave 1000W / P9** for 7 minutes
 5. Using oven mitt, take Crispy Pot out of oven; flip pork and pour braising sauce over pork
 6. Cover with Stainless Steel Lid, cook on **Microwave 1000W / P9** for 15–18 minutes
- Serve with your favorite sides and enjoy.

Beer Can Chicken Thighs

Serves 2

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

- 1 jar Beer Can Chicken Seasoning or favorite BBQ seasoning
 - 1 lb Fresh, skin-on chicken thighs
- Coarse sea salt and freshly ground pepper to taste

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Directions

1. Preheat empty Crispy Pot: place in center of oven's glass turntable and set on **Microwave 1000W / P9** for 3 minutes
 2. Using oven mitt, carefully remove hot Crispy Pot from oven
 3. Season both sides of chicken with Beer Can Chicken Seasoning or your favorite BBQ seasonings, salt, and pepper
 4. Place chicken in Crispy Pot skin-side down
 5. Cover with Stainless Steel Lid, cook on **Microwave 1000W / P9** for 7 minutes
 6. Turn chicken over and cook on **Microwave 1000W / P9** for another 7 minutes or until internal temperature reaches 165° F
- Serve with your favorite sides and enjoy.



Pan-Seared Burger

Serves 2

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients for burgers

1 lb Lean ground beef (80/20)

Coarse sea salt and freshly ground pepper to taste

for mushroom sauce

1 cup Sliced fresh shitake mushroom
1 cup Sliced cremini mushroom
¼ cup Thinly sliced shallots
¼ cup Bourbon
1 Tbsp Salted butter

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9



Directions for burgers

1. Preheat empty Crispy Pot: place in center of microwave oven's glass turntable and set on **Microwave 1000W / P9** for 3 minutes
2. While preheating, form 2 patties from ground beef and season both sides with salt and pepper
Note: Make sure each patty is 1.5" thick and weighs 8 oz—or else cooking result will vary
3. Using oven mitt, remove hot Crispy Pot from oven
4. Press 2 patties into Crispy Pot, cover with lid, cook on **Microwave 1000W / P9** for 7 minutes
5. Remove Crispy Pot from oven using oven mitts and turn burger over. Cover with Stainless Steel Lid and place back in oven and cook on **Microwave 1000W / P9** for additional 7 minutes
6. Using oven mitts, remove Crispy Pot from oven; place burgers on plate and cover

for mushroom sauce

1. Drain excess grease from Crispy Pot, leaving some drippings from burger
2. Add mushrooms, shallots, bourbon, and salt and pepper to Crispy Pot; cover with lid and cook on **Microwave 1000W / P9** for 5 Minutes
3. When mushroom mixture is done, take Crispy Pot out of oven and stir in butter to thicken sauce
Pour mushroom sauce over burger, serve with your favorite sides, and enjoy.



Chicken Piccata

Serves 2

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

1 can Chicken piccata pan sauce
1 lb Fresh skin-on chicken thighs
2 tbsp All-purpose flour
1/2 Lemon (sliced)
1 Tbsp Capers

Coarse sea salt and freshly ground pepper to taste

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9



Directions

1. Mix flour, salt, and pepper well and dredge both sides of chicken through the mixture
2. Preheat empty Crispy Pot: place in center of microwave oven's glass turntable and set on **Microwave 1000W / P9** for 3 minutes
3. Using oven mitt, carefully remove hot Crispy Pot from oven
4. Lightly spray olive oil on Crispy Pot, place chicken skin-side down, and cover
5. Cook on **Microwave 1000W / P9** for 7 minutes
6. Turn chicken over and pour Picatta sauce on chicken; add capers and sliced lemon
7. Replace Stainless Steel Lid and cook for additional 7 minutes on **Microwave 1000W / P9** or until internal temperature reaches 165°F

Serve over pasta or rice and enjoy.



Paella

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

- 1 cup Oven-baked paella mix
 - 6 Extra-large shrimp, de-veined
 - 2 Boneless, organic skin-on chicken thighs
 - ½ cup Dried chorizo, diced
 - ½ cup Red onion, diced
 - ½ cup Yellow or red pepper, cut into strips
 - 1 cup Water
- Coarse sea salt and freshly ground pepper to taste

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9



Directions

- Place diced chorizo in Crispy Pot; cover with Stainless Steel Lid and cook on **Microwave 1000W / P9** for 5 minutes
- Season chicken thighs with coarse sea salt and freshly ground pepper to taste on both sides
- Using oven mitt, remove hot Crispy Pot from oven and place chicken thighs skin-side down over chorizo. Cover with Stainless Steel Lid and cook on **Microwave 1000W / P9** for 5 minutes
- Using oven mitt, carefully remove hot Crispy Pot from oven and stir in Paella Mix, water, onions, and peppers, let stand for a minute
- Place Stainless Steel Lid on Crispy Pot and Cook on **Microwave 1000W / P9** for 12 minutes
- Using oven mitt, carefully remove hot Crispy Pot from oven and place shrimp over the mixture. Cover with Stainless Steel Lid and cook on **Microwave 1000W / P9** for 5 minutes

Serve with your favorite sides and enjoy.

Mushroom and Shrimp Ajillo

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid

Ingredients

- 2 cups Mushrooms
- 10 oz Shrimp, de-veined
- 1 clove Garlic (2 equal portions)
- 2-3 pcs Dried chili peppers
- 1 stalk Rosemary leaf
- 2 cups Olive oil

French bread, as desired

Directions

- Put mushrooms, shrimp, garlic, chili peppers, rosemary, and olive oil into Crispy Pot
 - Cover with Stainless Steel Lid and cook at **Microwave 1000W / P9** for 10 minutes
- Serve with French bread.

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Potlatch Citrus Beer-Steamed Cod

Serves 4

Equipment: Crispy Pot + Steam Tray + Stainless Steel Lid

Ingredients

- 2 Tbsp Potlatch citrus ginger seasoning
- 1 cup Citrus beer
- ¼ cup Lime juice
- 1 lb Fresh cod loin

Coarse sea salt and freshly ground pepper to taste

Directions

- Coat fresh cod loin with citrus ginger seasoning and place on Steam Tray
 - Pour citrus beer and lime juice into Crispy Pot and cover with Stainless Steel Lid
 - Cook on **Microwave 1000W / P9** for 8 minutes
- Serve with your favorite sides and enjoy.

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9



Steamed Mussels

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid**Ingredients**

- 1 lb Mussels
- 2 oz Shallots, finely diced
- 1 clove Garlic, finely chopped
- 1 Dried chili pepper, sliced
- 1 bunch Parsley, finely chopped
- 1 Tbsp Butter
- ½ cup White wine
- ½ cup Chicken stock

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Directions

1. Wash, scrub and remove beards from Mussels; discard any that are open
 2. Place butter and shallots in Crispy Pot, place in Oven, cook on **Microwave 1000W / P9** for 3 minutes
 3. Add mussels, white wine, chicken stock, garlic, and chili pepper, and stir
 4. Cover with Stainless Steel Lid, place in oven, cook on **Microwave 1000W / P9** for 14 minutes
- Garnish with parsley and enjoy.



Steamed Cake

Serves 4

Equipment: Crispy Pot + Steam Tray + Stainless Steel Lid**Ingredients**

- | | |
|------------------------|-----------------------------|
| 1 Egg | <i>for coating the mold</i> |
| ⅓ cup Sugar | Butter: as desired |
| ¼ cup Milk | Powdered sugar: as desired |
| ¾ cup Cake flour | |
| 1 tsp Baking powder | <i>add-ins</i> |
| 1 Tbsp Butter (melted) | 2 Strawberries, cubed |
| 5 fl.oz. Water | 2 Tbsp Cacao powder |
| | 2 Tbsp Green tea powder |

Model	Setting
NN-CD87KS	Microwave – 1000W
NN-GN68KS	Microwave – P9
NN-SN68KS	Microwave – P9

Directions

1. Thinly coat the inside of ramekins with butter, then uniformly dust with sugar
 2. Place egg, sugar and milk in a bowl and mix well
 3. Add flour, baking powder, and a desired add-in, and mix gently; add butter and mix until the powdery texture disappears
 4. Pour half of the mixture into ramekins
 5. Set the Steam Tray in the pot, pour in 5 fl.oz. of water, place ramekins on steam tray, and cover with Stainless Steel Lid
 6. Cook on **Microwave 1000W / P9** for 15 minutes
- Serve and enjoy.

Potato Galette

Serves 4

Equipment: Crispy Pot + Stainless Steel Lid
Mandoline**Ingredients**

- 1 lb Potato, thinly sliced
- 2 Tbsp Starch
- 1 tsp Cumin seeds
- 1 tsp Salt
- 1 pinch Pepper

For topping

- Chervil: to taste
- Sour cream: to taste
- Cherry tomatoes: as desired

Model	Setting
	2-stage cooking
NN-CD87KS	1st: Microwave 1000W x 15 mins 2nd: Combo 2 x 15 mins

Directions

1. Peel potatoes and slice thinly using mandoline; rinse potato slices, soak in a bowl of cold water
 2. Drain well, and mix starch, cumin seeds, salt, and pepper
 3. Preheat empty Crispy Pot: place in center of microwave oven's glass turntable, pour ½ tbsp of olive oil (separate from recipe amount), and **Microwave 1000W** for 3 minutes
 4. Using oven mitt, remove hot Crispy Pot from oven
 5. Before the Crispy Pot cools, carefully press potato slices into the bottom. Cover with Stainless Steel Lid. Cook on **Microwave 1000W** for 15 minutes
 6. Using oven mitt, carefully remove hot Lid from oven, and cook on **Combo 2** with HomeCHEF 4-in-1 (NN-CD87KS) for another 15 minutes
- Arrange on a serving dish, top with chervil, sour cream, and cherry tomatoes, and enjoy.

Use Crispy Pot + Stainless Steel Lid					
Food	Weight Quantity	Fresh		Frozen	
		CD87	GN68 / SN68	CD87	GN68 / SN68
Salmon ^{1,3}	2 pcs 10oz	1000 W 9-11 mins	P10 8-10 mins	–	–
Sea bass ^{1,3}	2 pcs 6oz	1000 W 7-9 mins	P10 5-7 mins	–	–
Chicken thighs with skin ^{1,2,3}	4 pcs 17oz	1000 W 20-22 mins	P10 12-14 mins	–	–
Chicken breast with skin ^{1,2,3}	2 pcs 11oz	1000 W 19-21 mins	P10 11-13 mins	–	–
Breaded fish ¹	2 pcs 10oz	1000 W 12-14 mins	P10 9-11 mins	–	–
Fish fingers ¹	8 pcs 8oz	–	–	1000 W 13-15 mins	P10 9-11 mins

Use Crispy Pot + Steam Tray + Stainless Steel Lid—pour 5 fl.oz. water in the Crispy Pot			
Food	Weight Quantity	Fresh	
		CD87	GN68 / SN68
Broccoli	10oz	1000 W 10-12 mins	P6 9-11mins
Carrots	9oz	1000 W 12-14 mins	P6 12-14mins
Corn	8 pcs 18oz	1000W 14-16 mins	P6 12-14mins
Potatoes	12pcs 14oz	1000W 14-16 mins	P6 15-17mins
Fish Fillet	1 pc 8oz	1000 W 8-10 mins	P6 9-11mins
Chicken Breasts ²	2 pcs 10oz	1000 W 22-24 mins	P6 19-21 mins
Shrimp	12oz	1000 W 13-15 mins	P6 14-16 mins
Whole mackerel	2 pcs 7oz	1000 W 15-17 mins	P6 15-17 mins
Whole sea bream ²	2 pcs 10oz	1000 W 18-20 mins	P6 18-20 mins

NOTES:
[1] turn or stir at 2/3 time.
[2] standing 2-3 mins
[3] skin side down
[P] place on preheated Crispy Pot (3 min on 1000W/P10), greased if necessary
Always add 5 fl.oz tap water into the crispy pot before using steam menu.

PLEASE REFER TO THE OPERATION MANUAL FOR FULL INSTRUCTIONS AND SAFETY DETAILS.

Use Crispy Pot					
Food	Weight Quantity	Fresh		Frozen	
		CD87	GN68	CD87	GN68
Chicken nuggets ^{P, 1}	8 pcs 3oz	–	–	Combo 2 7-9 mins	Combination 1 6-8 mins
Chilled Quiche ^{P, 2}	1 pc 5oz	Combo 2 9-11 mins	Combination 1 8-10 mins	–	–
Cheese croissant ^P	1 pc 2oz	Combo 2 2-3 mins	Combination 1 2-3 min	Combo 2 3-4 mins	Combination 1 3-4 mins
	2 pcs 5oz	Combo 2 3-4 mins	Combination 1 3-4 mins	Combo 2 5-6 mins	Combination 1 7-8 mins
Breaded fish fillets ^{P, 1}	1 pc 5oz	Combo 2 14-16 mins	Combination 1 10-12 mins	Combo 2 15-17 mins	Combination 1 13-15 mins
	2 pcs 10oz	Combo 2 16-18 mins	Combination 1 16-18 mins	Combo 2 17-19 mins	Combination 1 18-20 mins
Pizza ^P	9 inch	–	–	Combo 2 15-17 mins	Combination 1 16-18 mins"
Galettes / Vegetables ^{P, 1}	4 pcs 5oz	–	–	Combo 2 7-9 mins	Combination 1 6-8 mins
Meat / Sausage roll ^{P, 1}	2 pcs 6oz	Combo 2 7-9 mins	Combination 1 6-8 mins	Combo 2 10-12 mins	Combination 1 10-12 mins
Quiche, onion ^{P, 2}	1 pc 5oz	Combo 2 9-11 mins	Combination 1 8-10 mins	Combo 2 13-15 mins	Combination 1 11-13 mins
Quiche, spinach ^{P, 2}	1 pc 14oz	Combo 2 14-16 mins	Combination 1 12-14 mins	Combo 2 24-26 mins	Combination 1 22-24 mins
Pancakes stuffed, rolls ^{P, 1}	4 pcs 8oz	Combo 2 4-6 mins	Combination 1 3-5 mins	Combo 2 6-8 mins	Combination 1 4-6 mins
Meat pies ^{P, 1}	1 pc 2oz	Combo 2 5-7 mins	Combination 1 4-6 mins	Combo 2 8-10 mins	Combination 1 5-7 mins
	2 pcs 5oz	Combo 2 8-10 mins	Combination 1 6-8 mins	Combo 2 10-12 mins	Combination 1 9-11 mins
Samosas ^{P, 1}	4 pcs 8oz	Combo 2 9-11 mins	Combination 1 8-10 mins	Combo 2 15-17 mins	Combination 1 13-15 mins
Tortilla ^{P, 1}	2 pcs 8oz	Combo 2 8-10 mins	Combination 1 6-8 mins	Combo 2 14-16 mins	Combination 1 11-13 mins
	4 pcs 16oz	Combo 2 11-13 mins	Combination 1 11-13 mins	Combo 2 15-17 mins	Combination 1 16-18 mins
Sausage, raw, thick ^{P, 1}	4 pcs 7oz	Combo 2 10-12 mins	Combination 1 8-10 mins	–	–
Sausage, raw, thin	4 pcs 5oz	Combo 2 7-9 mins	Combination 1 6-8 mins	–	–

MAGIC POT CARE:

- Never cut pizza, quiche, or any other food directly in the Crispy Pot—this will damage the non-stick surface.
- After use, wash the Magic Pot in hot soapy water and rinse in hot water. Do not use any abrasive cleaning substances or scouring pads as this will damage the surface of the Crispy Pot.

PLEASE REFER TO THE OPERATION MANUAL FOR FULL INSTRUCTIONS AND SAFETY DETAILS.

Panasonic drop collaboration

Panasonic's collaboration with Drop, the leading smart kitchen platform, simplifies the lives of home cooks using their appliances. With customized navigation tailored specifically to the Panasonic **Home Chef Magic Pot**, users can access several advanced features designed to complement every cooking style. From helpful functions like resizing recipes or offering substitutions for missing ingredients, to recommending the exact length of heating time for perfect results, the integration with Drop was launched with home cooks in mind.

For more information, visit <https://drop.recipes/panasonic-usa> or scan below.



Panasonic
Two Riverfront Plaza
Newark, NJ 07102

Actual product may vary slightly from photographs.

*By scanning this QR code, you acknowledge that you understand that Personally Identifiable Information ("PII") like Advertising Identifier, IP Address, Country Code and Geolocation Information may be shared with Drop, a Panasonic business partner, and mobile technology software provider Branch. Drop Privacy policies: <https://getdrop.com/privacy-policy> and <https://branch.io/discovery-policies/#privacy>. Please be advised that Panasonic will not collect or have access to any of your PII, including but not limited to the PII that is collected by Drop. By using the Drop Recipe app, you accept and acknowledge that the Drop Recipe app as well as other third party websites and apps are not under Panasonic's control and are not subject to Panasonic's Privacy Policy (<https://na.panasonic.com/us/privacy-policy>). The Drop Recipe app (and any other third party website/app) has its own privacy policy(ies), including those indicated in this book. Panasonic has no responsibility for any such third party apps or websites, including the Drop Recipe app, and provide this book solely for your convenience. You acknowledge your use and access of the Drop app is solely at your own risk. It is your responsibility to check Drop Privacy policies to see how they treat your PII.