 


OWNER'S MANUAL

Spinn Milk Frother

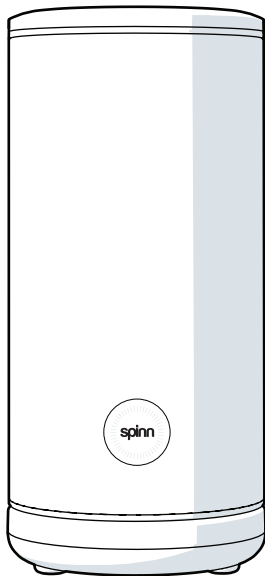

spinn

EN

SPINN MILK FROTHER

Congratulations with your Spinn Milk Frother and joining the Spinn community. The Spinn Milk Frother in combination with a Spinn Coffee Maker creates the full barista experience with on-demand milk recipes.

P/N: ---

B/N:

TABLE OF CONTENTS

SPINN MILK FROTHER	2
--------------------	---

TABLE OF CONTENTS	3
-------------------	---

MAIN PARTS & CONTROLS	4
-----------------------	---

SAFE USE OF THE MACHINE	6
-------------------------	---

PREPARING FOR USE	10
-------------------	----

MILK FROTHING	12
---------------	----

REGULAR MAINTENANCE	16
---------------------	----


SPECIFICATIONS	20
----------------	----

WARRANTY	21
----------	----


LABELS	22
--------	----

NOTES	23
-------	----

 MAIN PARTS & CONTROLS

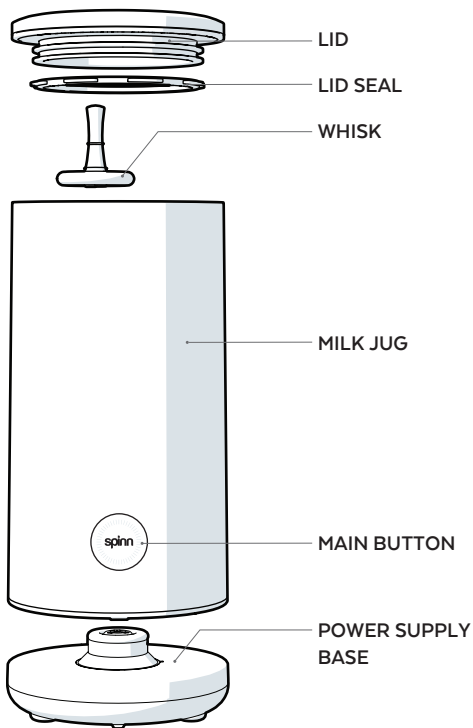

INDICATORS

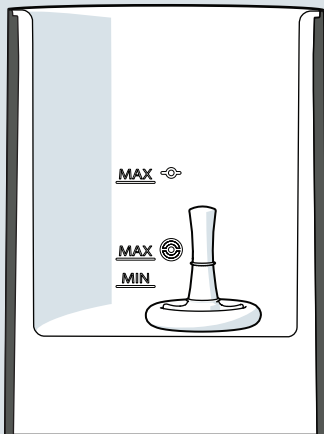 

Maximum capacity for warm milk recipe.
(MAX 8.1 OZ / 240ml) -Without wisk-



Maximum capacity for hot or cold frothing.
(MAX 3.9 OZ / 115ml)



Minimum capacity for all recipes.
(MAX 2.0 OZ / 60ml)

SAFE USE OF THE MILK FROTHER

IMPORTANT SAFEGUARDS

- Carefully read this manual before use.
- Do not immerse the power supply base and the milk jug in water or any other liquid. Do not clean them in the dishwasher either.
- Check if the voltage supplied by the AC power socket corresponds to the voltage indicated on the appliance before you connect it.
- Always unplug the appliance from the socket if you leave it unattended and before you assemble, disassemble or clean it.
- Do not activate the frother without milk.
- Do not use the appliance if the plug, the power cord or other parts are damaged.
- Before installing both your milk frother and other appliances on the same outlet, check your wall outlet and branch circuit to be of a minimum 120V/20A rating.
- If the power cord is damaged, you must have it replaced by Spinn, a service centre authorised by Spinn or similarly qualified persons in order to avoid damage.
- Under supervision, this appliance may be used by children aged 8 years and above and by persons with reduced

physical, sensory or mental capabilities or lack of experience and knowledge. Instructions concerning use of the appliance in a safe way and hazards involved must first be understood.

- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of the reach of children aged less than 8 years.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Only use the appliance in combination with its original power supply base.
- Do not let water or a moist cloth come into contact with the connectors on the power supply base and on the bottom side of the milk jug.
- Never use any accessories or parts from other manufacturers or that Spinn does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.
- Only use the appliance to heat up or froth milk. Do not use it to process any other ingredients.
- Do not exceed the maximum level indicated in the milk frother. If you overfill the milk frother, hot milk may escape from underneath the lid and cause scalding.
- Do not operate the frother outdoors.

-
- Do not move the appliance while it is operating, to prevent hot milk from escaping from underneath the lid.
 - Correct cleaning of the milk frother is very important for reliable performance and good frothing results.
 - Always return the appliance to a service centre authorised by Spinn for examination or repair. Do not attempt to repair the appliance yourself, otherwise your warranty becomes invalid.
 - Always place the power supply base and the milk jug on a dry, flat and stable surface.
 - Do not place the appliance on a hot surface and prevent the power cord from coming into contact with hot surfaces.
 - Never let the appliance operate unattended.
 - Make sure that the appliance has switched off before you remove the milk jug from the power supply base.
 - Do not use the appliance in combination with an inverter, as this could cause hazardous situations.
 - Never use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
 - This appliance is intended for normal household use only. It is not intended for use in environments such as staff kitchens of shops, offices, farms or other work environments. Nor is it intended to be used by clients in hotels, motels, bed and breakfasts and other residential environments.
 - Do not throw away the appliance with the normal household

waste at the end of its life cycle, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

- The frother plug must be unplugged in the following cases: after each use; when the product is not in use; before replacing the accessories or cleaning the frother.
- Only connect the appliance to an earthed wall socket.
- Do not use the frother with anything other than the supplied base.

SAVE THESE INSTRUCTIONS

PREPARING FOR USE



WARNING!

Read and comply with the safety instructions in the **Safety Instructions** chapter to avoid injuries and damage to the product.

 
 
UNBOX THE MACHINE

- 1 Place the box on a stable surface.
- 2 Open the box.
- 3 Take out the milk frother and power supply base and place them on a horizontal surface that is not sensitive to water.
- 4 Check if all parts are present (see **Main Parts & Controls** on page 4).

RINSE AND TEST

- 1 Rinse the **inside of the milk jug**, the **lid** and the **whisk** with clean (warm) water.
- 2 Place the components back in place and plug the power cord in an outlet.
- 3 Check if the main button turns white.

Hand washable parts

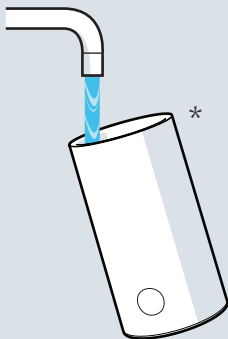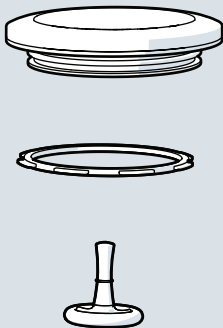


*only the inside of the milk jug should be hand washed!

MILK FROTING

GET FROTHING

 - 1 Place the whisk according to recipe you want.
 - 2 Pour fresh cold milk in the milk jug, make sure the amount doesn't exceed the the maximum amount for the preferred recipe (see **Indicators** on page 5).
 - 3 Start a recipe from the next page by clicking the Spinn button the required amount of times.
- i** Cancel a recipe by pressing the Spinn button.

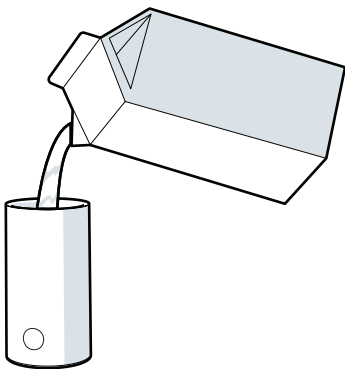

HOT FROTHING



- 1 Press the Spinn button once.
- 2 Wait 80-140 seconds for the milk frother to finish frothing. You will be notified by a sound and the Spinn button flashing.

WARM MILK



- 1 Remove the whisk (spring) from the whisk holder.
- 2 Press the Spinn button twice.
- 3 Wait 120-220 seconds for the milk frother to finish warming up the milk. You will be notified by a sound and the Spinn button flashing.

COLD FROTHING








- 1 Press the Spinn button three times.
- 2 Wait 60 seconds for the milk frother to finish frothing. You will be notified by a sound and the Spinn button flashing.

TIPS WHEN USING YOUR DEVICE

- Always use cold and fresh milk (4-6 °C / 39.2 - 42.8 F).
- Always respect the recommended milk quantity indicated in the recipe. Never exceed the MAX marking inside the jug.
- Before pouring the recipe, swirl the frothed milk in a circular motion.
- Frothed milk that is not used immediately should not be reheated.
- Ensure the jug and whisk are clean before use.
- Suitable liquids: cow milk (fresh or UHT, full cream, low fat, skim) and any plant-based milk (milk froth is not guaranteed with these milks)
- The milk froth volume depends on the kind of milk that is used and its temperature.
- Before preparing cold recipes, make sure the jug is cold or quickly cool it down under cold water or with ice.
- Because the whisk is small in size, please put the whisk in a safe place to avoid children swallowing it.

REGULAR MAINTENANCE

CAUTION

 
 
-  Ensure the milk jug is cold before removing it from the power supply base. Or remove with care and rinse with cold water immediately to cool down the jug and avoid burning risks.
-  In case the power supply base needs to be cleaned, unplug it first and use only a damp cloth. Make sure the connector is dry before operation.
-  Do not immerse the power supply base or the milk jug in water neither put in the dishwasher.
-  If the bottom part of the milk jug is wet, dry it before putting it back in contact with the power supply base.
-  Only use non-abrasive cleaning materials. Do not use abrasives, sharp objects, brushes: risk of scratches and harm to the milk jug surface.

CLEANING

- 1 Unplug the power cord from the power outlet.
- 2 Remove the lid and the whisk from the milk jug and remove the milk jug from the power supply base.
- 3 Remove the silicon seal from the lid. Remove the whisk (spring) from the whisk holder.

HAND WASH


- 4 Wash the inside of the milk jug, the lid seal, lid and both parts of the whisk under a stream of hot/warm water.

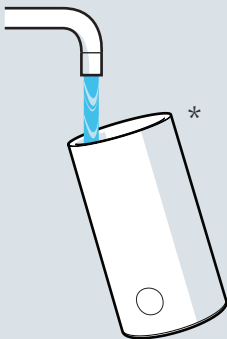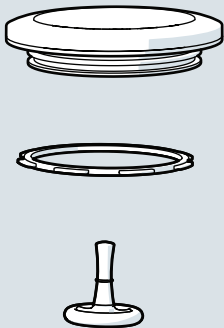

*only the inside of the milk jug should be hand washed!

DAMP TOWEL

 - 5 Clean the outside of the milk jug and the power supply base with a damp towel.

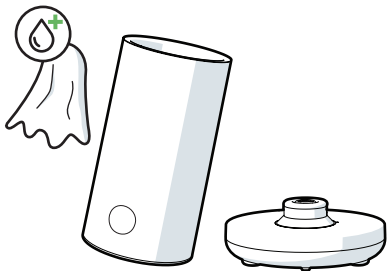


- ⚠ Never put these components in a dishwasher or immerse them in water or any other liquids.



DRY TOWEL

 - 6 Dry all milk frother parts with a fresh and clean towel, cloth or paper and reassemble the milk frother.



SPECIFICATIONS

GENERAL SPECIFICATIONS

Spinn Milk Frother	
Height	8.5" (21.5 cm)
Width	3.8" (9.5 cm)
Length	3.8" (9.5 cm)
Weight	1.8 lbs (0.8 kg)
Power supply	120 VAC - 60 Hz
Power	400 Watt

DISPOSAL

Your appliance contains materials which can be recovered or recycled. Separating the remaining waste products into different types facilitates the recycling of raw materials. You can obtain information on disposal from your local authority.



WARRANTY

A 6 month warranty applies to the Spinn Milk Frother. If your machine is defective (DOA) when you receive it, please contact Spinn and the issue will be resolved as soon as possible.

For US customers: if the machine develops a problem later that's our fault, we'll either (at our option) ship you the parts that need to be replaced along with detailed instructions, or ship it back to us for repair or replacement – in either case, free of charge, including shipping.

For international customers, parts and repairs are free, but shipping is not included.

Unfortunately, it is easy to break your Spinn Milk Frother by modifying your firmware. This is why, if you modify your firmware, the warranty no longer applies your Spinn.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

LABELS

Information about the Spinn Milk Frother can be found on two labels: one on the bottom of the milk jug and one underneath the power supply base.



Do not remove the labels.

[illegible]

[illegible]

[illegible]



Spinn Inc.

1040 Mariposa St.
94107 San Francisco, CA.

support@spinn.com

www.spinn.com