



R2D2™
POPCORN POPPER
MACHINE À MAÏS SOUFFLÉ
MAQUINA PARA HACER
PALOMITAS DE MAIZ

Operating and Safety Instructions

Instrucciones de uso y seguridad


Instructions d'utilisation et de sécurité



READ ALL INSTRUCTIONS
BEFORE USE.

IMPORTANT SAFEGUARDS

1. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - hotels, motels and other residential-type environments.
2. Never operate unattended or let children operate.
3. Only reputable service agents should be used for repair.
4. Never let power cable touch the hot inner popper.
5. Never attempt to put your hand or any object into the inner popper.
6. Place the popper on a level and stable surface when in operation.
7. Never put the popper near combustibles or in an overly damp or hot environment.
8. Only use the recommended methods to clean the machine.
9. Always unplug the machine when not in use.
10. Let the machine cool down before storage.

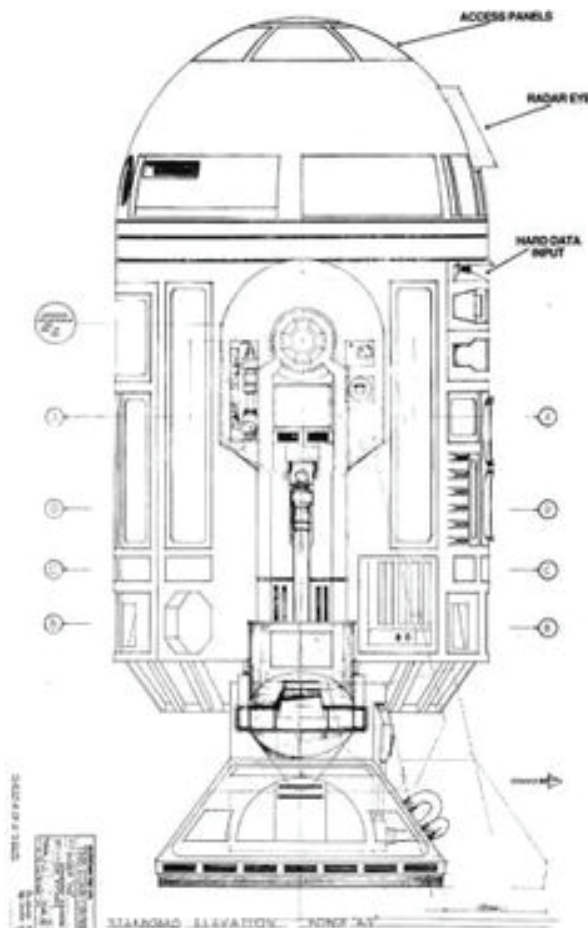

MAINTENANCE AND CLEANING

1. Unplug after use.
2. When the machine is completely cooled down, you can clean it. It takes about 10 minutes to cool fully.
3. Take the measuring ladle, chute and cover off of the machine. Be careful not to let oil or butter drop into the inner popper.
4. Clean the loose parts with warm water and detergent and then rinse with clean water. Use a cloth to wipe dry.
5. Pour out any unpopped kernels and wipe the outside of the popper.
6. Never immerse the machine in water or any other liquid.
7. After all parts are cool and dry, store the popper.



LEA TODAS LAS INSTRUCCIONES
ANTES DE SU USO.

RECOMENDACIONES IMPORTANTES
DE SEGURIDAD

1. Este aparato fue fabricado para utilizarse de manera doméstica así como para otras maneras similares tales como:
 - en áreas de cocina para el personal ya sea en tiendas, oficinas y en otros espacios de trabajo;
 - en hoteles, moteles y en espacios de ambiente residencial;
2. Nunca lo opere sin supervisión ni permita que niños lo operen.
3. Solamente agentes de servicio con reputación pueden ser requeridos para su reparación.
4. Nunca permita que el cable de conexión toque la parte caliente del interior de la máquina para hacer palomitas de maíz.
5. Nunca intente poner su mano u otro objeto dentro del interior de la máquina para hacer palomitas de maíz.
6. Coloque la máquina para hacer palomitas de maíz sobre una superficie plana y estable durante su operación.
7. Nunca coloque la máquina cerca de



PANGEA BRANDS
6 West 20th Street
Third Floor
New York, NY 10011
sales@pangeabrands.com
www.pangeabrands.com

FOR HOUSEHOLD USE ONLY
PARA USO DOMÉSTICO ÚNICAMENTE
POUR UTILISATION À DOMICILE SEULEMENT

Electrical Specifications:
Especificaciones electrónicas:
Spécifications électriques:

North America: 120V, 60Hz, 1100W
UK/Europe: 220240V, 50Hz, 1100W

SKU: POP-SRW-R2D2



11. Do not use the machine outdoors or for commercial purposes.
12. If power cable is damaged or machine malfunctions, do not attempt to use it again and send it to a service center for repair.
13. Always follow operation instructions.

SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE

NOTES BEFORE USE

1. Check the package for complete parts.
2. Remove packing materials but keep the rating plate.
3. Check local power mains for a rated voltage OF AC 120V 60Hz.

OPERATION

1. Remove the measuring ladle and cover from machine and clean with a damp cloth. Allow to dry thoroughly.
2. Put the cover, chute and measuring ladle back on the machine and slowly pour 1 ladleful of corn into the inner popper.
3. DO NOT use more than 1 ladleful of kernels at a time.
4. The measuring ladle can be used to melt butter or warm oil while the machine is in use.
5. Place a bowl in front of the chute.
6. Plug in the machine, turn on the switch and run for about 3 minutes. There may be unpopped kernels left in the inner popper.

NOTE: The popper is designed to run for no longer than 5 minutes at a time. Allow the machine to cool for approximately 10 minutes in between uses.



CAUTION:

1. Never put oil or butter in the inner popper.
2. Never pop more than 100 grams (1 ladleful) of kernels at a time.

WARRANTY FOR PANGEA BRANDS POPCORN MAKER

ONE-YEAR FULL WARRANTY

For one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, Pangea Brands will pay for replacing the unit with a unit of like kind and quality, or will refund the purchase price, at Pangea Brands' sole discretion, to correct defects in materials or workmanship.

To Obtain Warranty Service and Troubleshooting Information:
If you need service, first check your User Manual.
To obtain service, call our Customer Care Center at 1-617-638-0001

Pangea Brands will NOT pay for:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace house fuses or correct house wiring, or to replace light bulbs.
2. Repairs when your appliance is used in other than normal, single-family household use.
3. Pickup and delivery.
4. Damage resulting from accident, alteration, misuse, abuse, fire, flood, improper installation, acts of God, or use of products not approved by Pangea Brands.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Service or warranty support for units located and/or operated outside the United States or Canada.

NO WARRANTIES, WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OR MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OTHER THAN THOSE EXPRESSLY DESCRIBED ABOVE, SHALL APPLY. MANUFACTURER FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE. NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR ENTITY WITH RESPECT TO THE PRODUCT SHALL BE BINDING ON PANGEA BRANDS. REPLACEMENT IS THE EXCLUSIVE REMEDY OF THE CONSUMER. PANGEA BRANDS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THE PRODUCT NOTWITHSTANDING THE FOREGOING, CONSUMER'S RECOVERY AGAINST PANGEA BRANDS SHALL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT SOLD BY PANGEA BRANDS. THIS WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL CONSUMER WHO PURCHASED THE PRODUCT AND IS NOT TRANSFERABLE. Some states or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limits on warranties, so limitation or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Outside the 50 United States and Canada, this warranty does not apply. Contact your authorized Pangea Brands dealer to determine if another warranty applies.

Keep this Warranty and your sales slip together for future reference. You must provide proof of purchase for in-warranty service. Write down the following information about your appliance to better help you obtain assistance or service if you ever need it. You will need to know your complete model number and serial number. You can find this information on the model and serial number label/plate.

CUSTOMER'S RECORD

Date of Purchase: Store/Dealer:
Model No.: Serial No.:

- combustibles o en ambientes extremadamente húmedos o calientes.
8. Solamente utilice los métodos recomendados para limpiar el aparato.
 9. Siempre desconecte el aparato cuando no lo use.
 10. Permita que el aparato se enfríe antes de almacenarlo.
 11. No utilice el aparato en exteriores o con propósitos comerciales.
 12. Si el cable de conexión está dañado o el aparato tiene un mal funcionamiento, no lo use, mándelo a un centro de servicio para su reparación.
 13. Siempre siga las instrucciones para su operación.

CONSERVE ESTAS INSTRUCCIONES
COMO REFERENCIA PARA EL FUTURO

NOTAS ANTES DE SU USO

1. Revise que la caja contenga todas las partes de la máquina.
2. Retire el material de empaque pero conserve la placa de clasificación.
3. Confirme que la energía eléctrica local utilice voltaje QF AC120V 60Hz.

