

WILLIAMS SONOMA

USB Rechargeable Thermometer with Timer

CAUTION

Thermometer may be hot after use, do not touch without protecting hands. DO NOT leave thermometer in the oven or grill during cooking, damage to the plastic pieces will occur.

IMPORTANT: In order to protect the product during transportation, the thermometer is partially charged. Please fully charge before first use. See CHARGING INSTRUCTIONS for more information.

CHARGING INSTRUCTIONS

1. A Type-C (5-volt) USB charging cord is included with the thermometer. You will also need to use your own wall outlet converter to plug the USB cord into a wall outlet to charge the thermometer.
2. Insert the small end of the USB charging cord into the base of the thermometer (there is a USB logo above a spot on the thermometer to help locate the placement). Insert the large end of the USB charging cord into your wall outlet converter, then plug your converter into a wall outlet to start charging.



⏻ | HOLD

6. After the initial charge, subsequent charges will take approximately 2 hours.



NOTE: Damage to the thermometer may occur with charging voltages greater than 5 volts. The internal lithium-ion, rechargeable battery has a maximum capacity of 500mAh. The battery cannot be replaced.

THERMOMETER INSTRUCTIONS (RANGE: -40°F TO 500°F AND -40°C TO 260°C)

1. Extend the probe to a straight position by carefully extending it from the side of the thermometer following the direction of the pivot wheel.
2. Sterilize the metal probe inserting it into an appropriate solution such as boiling water for several minutes before first use and after each subsequent use.



4. The thermometer is factory set to Fahrenheit. To change the units of measurement to Celsius, press the
HOLD



5. To use, remove food from oven and insert the thermometer in the thickest part of the meat, immersing the stem at least 1", but not in contact with the bone, fat, or gristle and wait for the temperature to stabilize.
6. If additional cooking time is needed, remove the thermometer from the food and return the dish to the oven.

HOLD

HOLD



TIMER INSTRUCTIONS (COUNTS UP OR DOWN TO 99 HOURS, 59 MINUTES)

1. The timer can be used with or without the thermometer function active. To only see the timer on the digital display, close the folding probe and the thermometer will turn off.
2. To program the timer, press the “MIN” and “HR” buttons to select the correct time needed. Press the “▶■” button to start timing. The (:) icon will blink and a clock icon will illuminate. To pause the time, press “▶■” again. An audible alert will sound when the countdown is over. Press any button to deactivate the timer alert.
3. To reset the timer to 00:00, press and hold the “MIN” and “HR” buttons together ~~or individually~~.



5. To use as a stop watch and count up, start with the timer at 00:00 and press “▶■”. The (:) icon will blink and a clock icon will illuminate to show active timing.

NOTE: The timer does NOT show seconds on the display at any point in the count down or up process.

CLEANING AND CARE

Handwash only. Wipe thermometer with a damp cloth and dry thoroughly being extra careful not to get water into the charging port. Do not immerse in water or put in a dishwasher.

Made to our exact specifications in China.

5284630 7.21 CS