

5309393 INSTANT READ PEN DIGITAL THERMOMETER WITH BACKLIGHT INSTRUCTION MANUAL

IMPORTANT: This thermometer is meant to track food temperatures periodically throughout the cooking process, it is not oven safe and cannot be left in food during cooking.

NOTE: There is a static cling label over the digital display. Please remove before use.



HOW TO USE:

1. **NOTE:** The thermometer is factory set to Fahrenheit, switch to Celsius by pressing the “F/C” button.
2. Remove food from oven, turn on the digital display by pressing the “power” button and insert thermometer in the thickest part of the meat, immersing the stem at least 1”, but not in contact with bone, fat, or gristle.
3. To freeze the reading, press the “HOLD” button and the digital display will lock in the reading. The thermometer can be removed from the food and the display will show the last temperature. To go back to active monitoring, press the “HOLD” button again.
4. If more cooking time is needed, remove the thermometer from the food and return the dish to the oven.
5. The backlight will turn on for 10 seconds when the thermometer turns on. Manually turn on the backlight for 10 seconds by pressing the “power” button.
6. The digital display can be powered off or will auto shut off after 10 minutes.

Temperature range: -40F – 500F (-40C – 260C)

Display will show HH.H when temperature is over the upper limit. Display will show LL.L when the temperature is lower than the lower limit.

Display will show --.- when there is a sensor error.

 WARNING	
<ul style="list-style-type: none">• INGESTION HAZARD: This product contains a button cell or coin battery.• DEATH or serious injury can occur if ingested.• A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.• KEEP new and used batteries OUT OF REACH OF CHILDREN!• Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.• Immediately dispose of used batteries and keep away from children. Do NOT dispose of batteries in household trash.• Even used batteries may cause severe injury or death.• Call a local poison control center for treatment information.	

BATTERY INFORMATION

- Examine devices and make sure the battery compartments are correctly secured, e.g. the screw or other mechanical fastener is tight. Do not use if the compartment is not secure.
- Tell others about the risk associated with button batteries and how to keep their children safe.
- Battery type, CR2032
- Nominal Voltage 3V
- Always purchase the correct size and grade of battery most suitable for the intended use.
- **NOTE:** please recycle or dispose of batteries per local regulations.
- **WARNING:** Batteries may pose a choking hazard. As with all small items, do not let children handle batteries. If swallowed, seek medical attention immediately.

- PRECAUTION: Do not dispose of batteries in fire. Batteries may explode or leak.
- Remove the batteries if the product will not be used for a long period of time. Remove used batteries promptly.
- Clean the battery contacts and also those of the device prior to battery installation.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns."

BATTERY REPLACEMENT INFORMATION:

1. The thermometer operates on 1 CR2032 battery (installed). If readings become dim or irregular, replace the battery.
2. To replace the battery, rotate battery cover counterclockwise to remove. Please new battery in compartment with "+" showing and replace cover.

USE and CARE: wipe clean with a damp cloth. Do not touch stem with bare hands when hot. Do not leave in oven or grill while cooking.