


WILLIAMS SONOMA

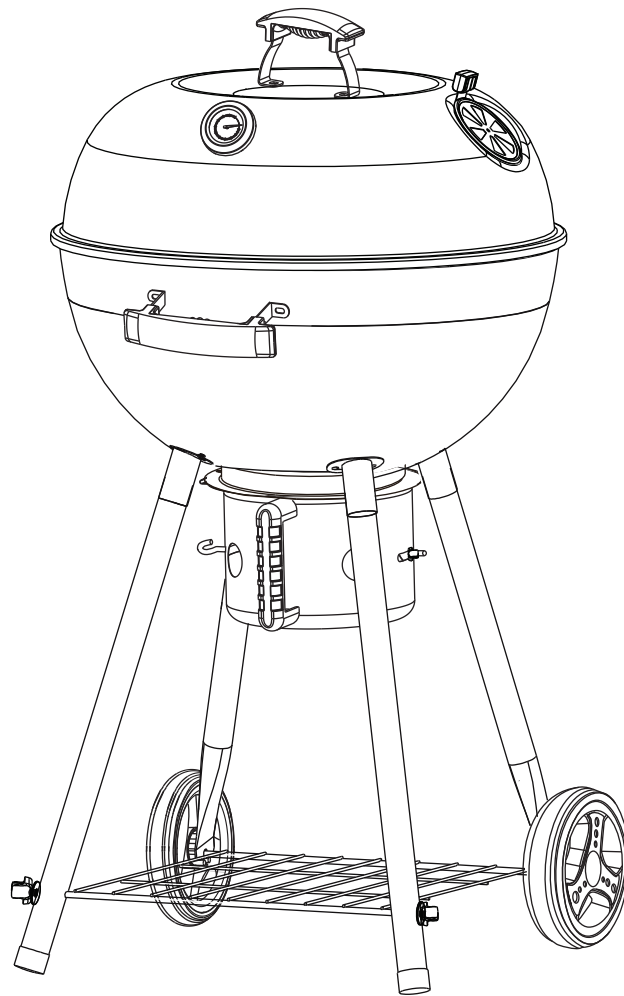

# Outdoor Charcoal Grill

ASSEMBLY AND OPERATING INSTRUCTIONS

## TABLE OF CONTENTS

Warnings	1
Parts List and Diagram	2 - 3
Assembly Instructions	4 - 6
Operating Your Grill	
Select a Proper Location	7
Choosing Your Charcoal	7
Air Vent Operation	7
Lighting Instructions	7
When Finished Grilling	8
Warranty	

### FOR OUTDOOR USE ONLY

This instruction manual contains important information necessary for the proper assembly and safe use of this grill.

Read and follow all warnings and instructions before assembling and using the grill.

Keep this manual for future reference.

Note to installer: leave this Owner's Manual with the consumer after installation.

### CARBON MONOXIDE HAZARD

**DO NOT USE INDOORS.** Burning charcoal releases carbon monoxide gas. If used indoors or in a poorly ventilated area, the gas can accumulate and cause serious injury or death.

### DANGER

**DO NOT USE GASOLINE, ALCOHOL OR OTHER FLAMMABLE LIQUIDS TO LIGHT CHARCOAL.** Use only charcoal lighter fluid following the manufacturer's instructions.

Never operate this grill unattended.

**DO NOT** operate this grill within 10 feet of any flammable material.

**DO NOT** operate this grill within 25 feet of any flammable liquid.

If a fire should occur, keep away from the grill and immediately call your fire department. **DO NOT** attempt to extinguish an oil or grease fire with water.

Failure to follow these instructions could result in fire, explosion, or a burn which could cause property damage, personal injury or death.





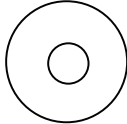
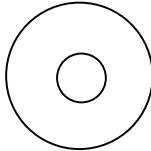
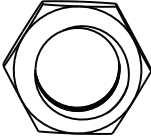


## **WARNINGS AND SAFETY INFORMATION**

Follow instructions: if not followed, there is a possibility of a hazardous fire or explosion which could result in physical injury or property damage. Take responsibility to assemble, operate and maintain your grill properly.


### **READ ALL WARNINGS AND INSTRUCTIONS PRIOR TO ASSEMBLING AND OPERATING GRILL**

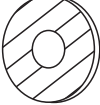- This grill is for outdoor use only. It should NOT be used in a building, garage or any other enclosed area.
- The use of alcohol, prescription or non-prescription drugs may impair an individual's ability to properly assemble or safely operate this grill.
- Do not leave the grill unattended.
- Keep children and pets away from the grill at all times.
- Do not use the grill in high wind.
- Do not use gasoline, kerosene or alcohol for lighting. Only use charcoal lighter fluid. Follow manufacturer's instructions.
- Do not add charcoal lighter fluid or charcoal infused with lighter fluid to hot or warm charcoal.
- Do not remove ashes until all charcoal is completely burned out or extinguished.
- Open the lid while lighting and starting charcoal.
- Always put charcoal on top of the charcoal grate, not directly into the bottom bowl.
- Use grill mitts or hot pads to protect hands while adjusting grill vents.
- Do not use water to extinguish coals. Close vents and lid and wait until grill cools below 115°F.
- Handle and store hot electric starters carefully. Never use charcoal lighter fluid or charcoal infused with lighter fluid with an electric starter. Follow electric starter manufacturer's instructions carefully.
- When using lighter fluid always check ash collector for water accumulation. Remove any fluid prior to lighting to avoid a potential fire in the bottom bowl.
- Do not attempt to move the grill when in use. Allow the grill to cool to 115°F.
- Do not use the grill unless it is **COMPLETELY** assembled and all parts are securely fastened and tightened. If there are any missing or damaged parts, contact customer service for a replacement.
- Do not alter the grill in any manner.
- This grill is not intended to be installed in or on a boat or a recreational vehicle.
- Locate the grill away from any combustible materials or construction by at least 10 feet in all directions. Never grill under an overhang or enclosure.
- This grill is not intended for use as a heater.
- This grill will be hot during and after use. Use insulated oven mitts or gloves for protection from hot surfaces or splatter from cooking liquids.
- This grill is not intended for commercial use.
- Combustion by-products produced when using this product contain chemicals known to the state of California to cause cancer, birth defects, or other reproductive harm.

## PARTS LIST AND DIAGRAM

<b>A.</b>	<b>23 x 23</b>		<b>4 pcs</b>
<b>B.</b>	<b>M 6 x 12</b>		<b>8 pcs</b>
<b>C.</b>	<b>M 5 x 10</b>		<b>4 pcs</b>
<b>D.</b>	<b>M 6</b>		<b>14 pcs</b>
<b>E.</b>	<b>6 x 12</b>		<b>6 pcs</b>
<b>F.</b>	<b>6 x 16</b>		<b>12 pcs</b>
<b>G.</b>	<b>M 10</b>		<b>2 pcs</b>
<b>H.</b>	<b>M 5</b>		<b>4 pcs</b>
<b>I.</b>	<b>M 6 x 16</b>		<b>6 pcs</b>

## PARTS LIST AND DIAGRAM (CONTINUED)

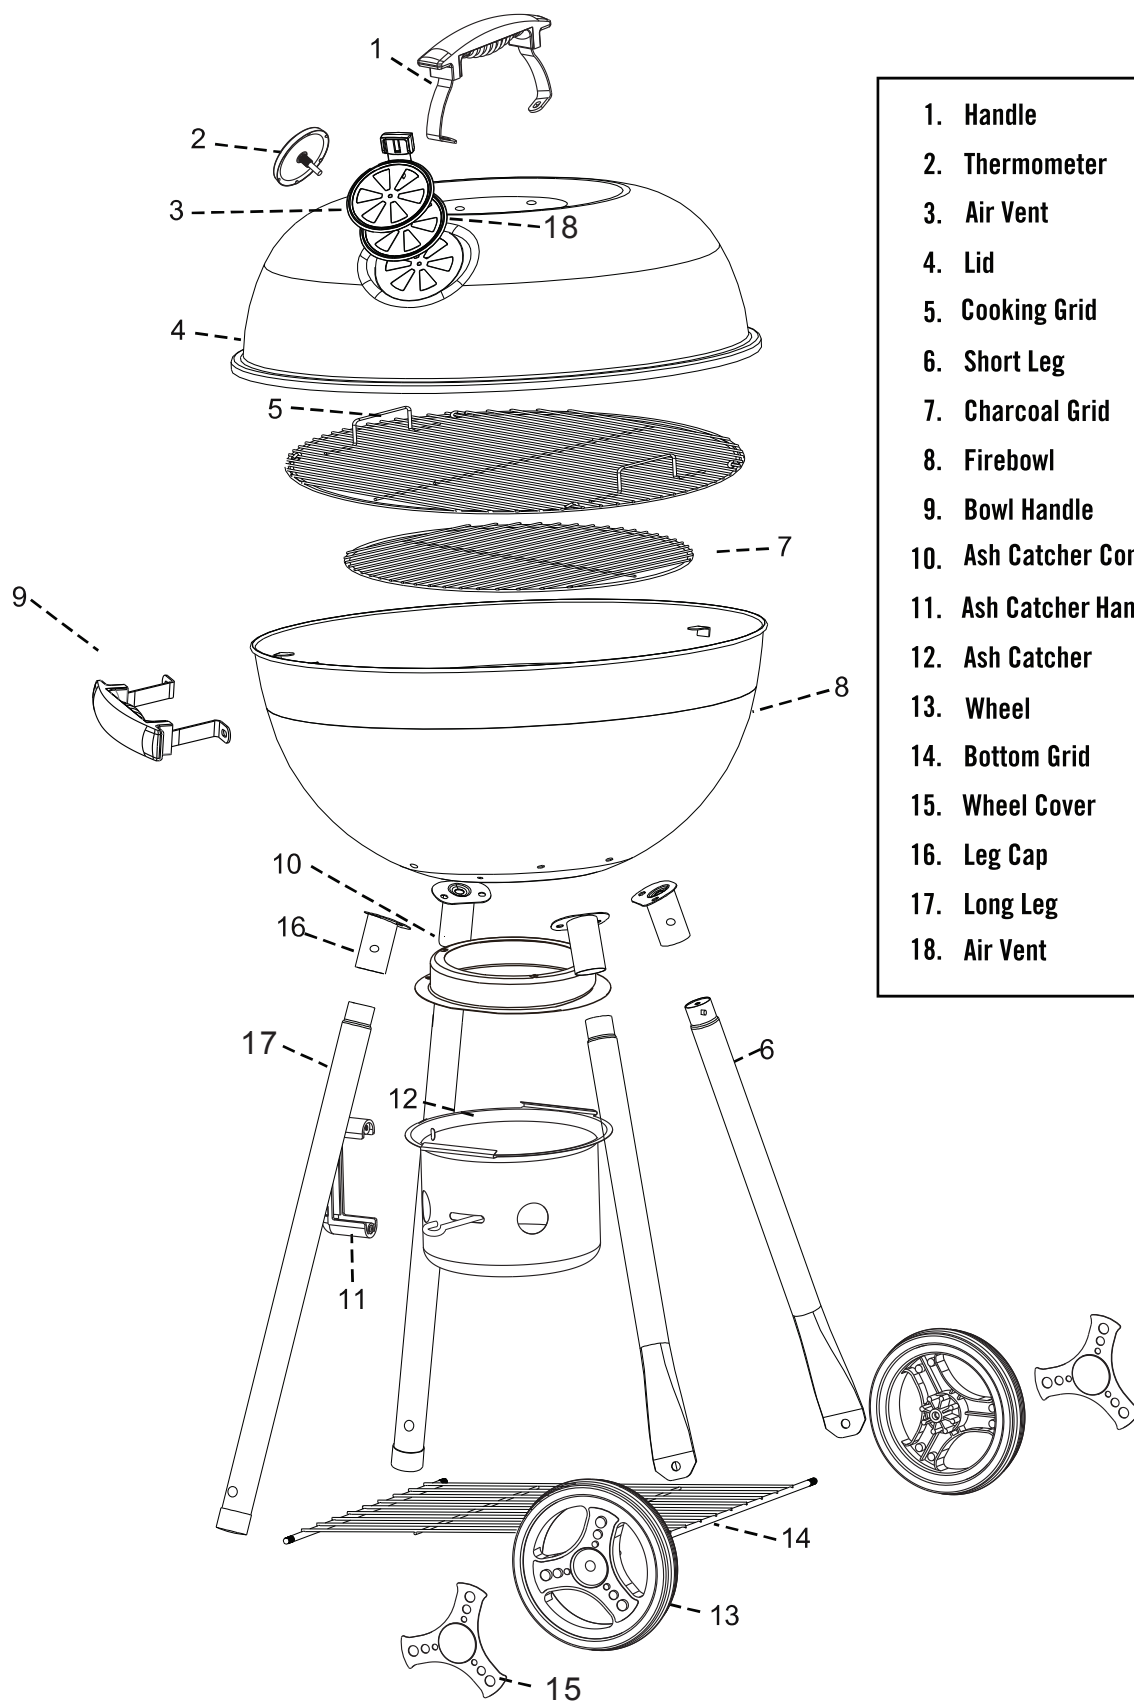


1. Handle	1 pc.
2. Thermometer	1 pc.
3. Air Vent	1 pc.
4. Lid	1 pc.
5. Cooking Grid	1 pc.
6. Short Leg	2 pcs.
7. Charcoal Grid	1 pc.
8. Firebowl	1 pc.
9. Bowl Handle	1 pc.
10. Ash Catcher Connection	1 pc.
11. Ash Catcher Handle	1 pc.
12. Ash Catcher	1 pc.
13. Wheel	2 pcs.
14. Bottom Grid	2 pcs.
15. Wheel Cover	1 pc.
16. Leg Cap	4 pcs.
17. Long Leg	2 pcs.
18. Air Vent	1 pc.


# ASSEMBLY INSTRUCTIONS

Remove contents from packaging and ensure all parts are accounted for before assembling.


## STEP 1

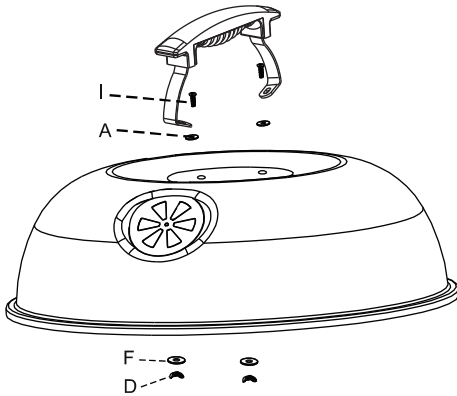


## STEP 2

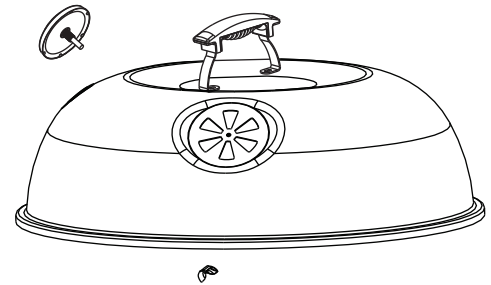


## STEP 3

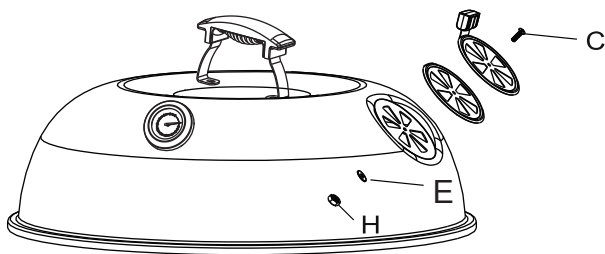


## STEP 4

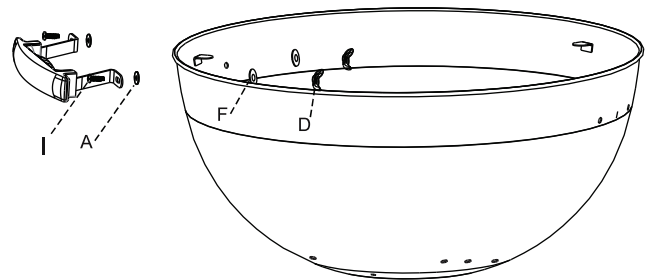

## STEP 5

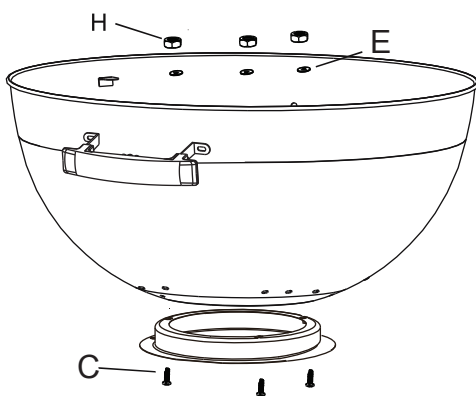


## STEP 6

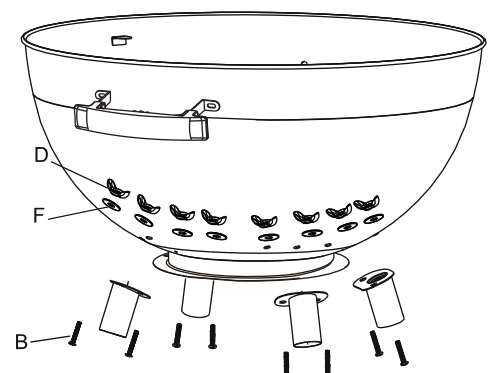


## ASSEMBLY INSTRUCTIONS (CONTINUED)


### STEP 7

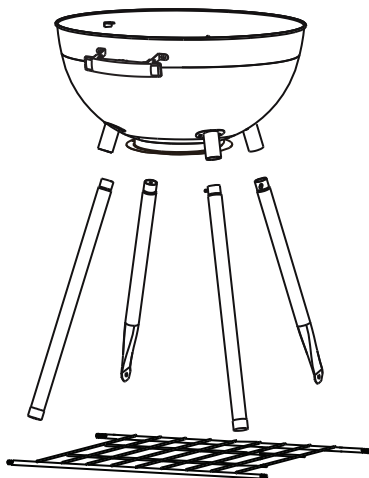


### STEP 8

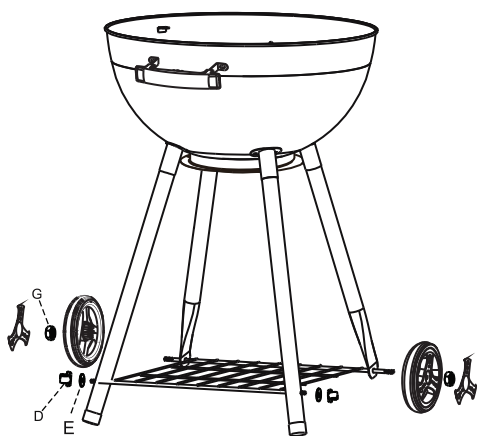


### STEP 9

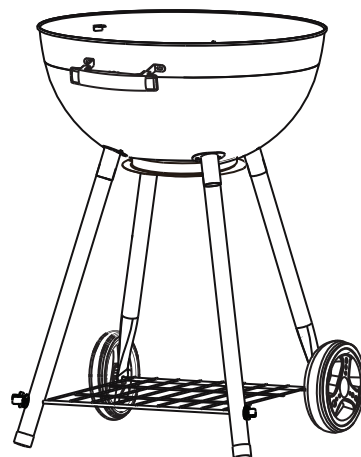

### STEP 10

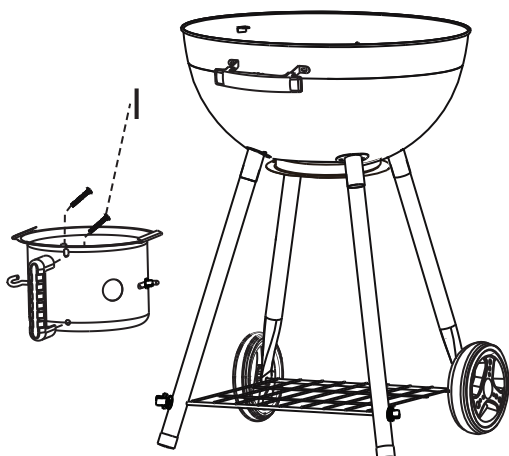


### STEP 11

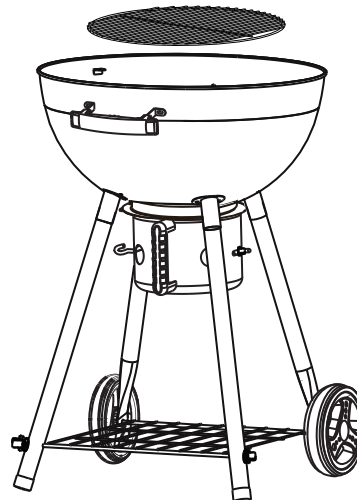


## ASSEMBLY INSTRUCTIONS (CONTINUED)


**STEP 12**

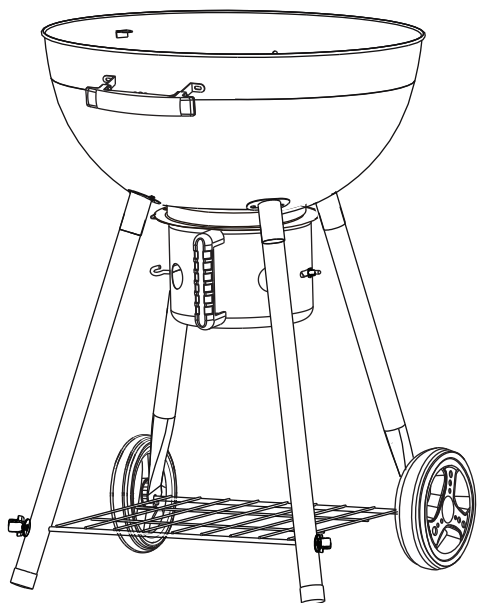

**STEP 13**

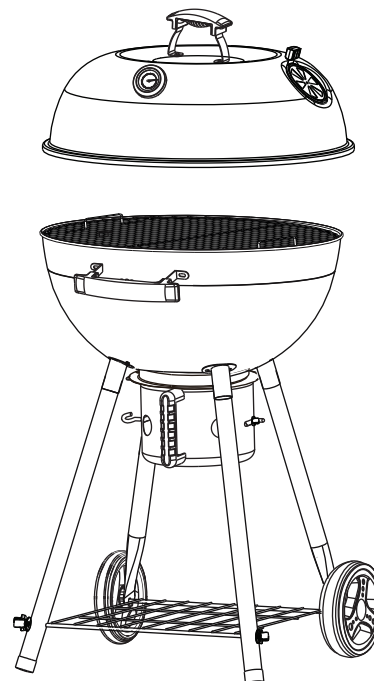

**STEP 14**

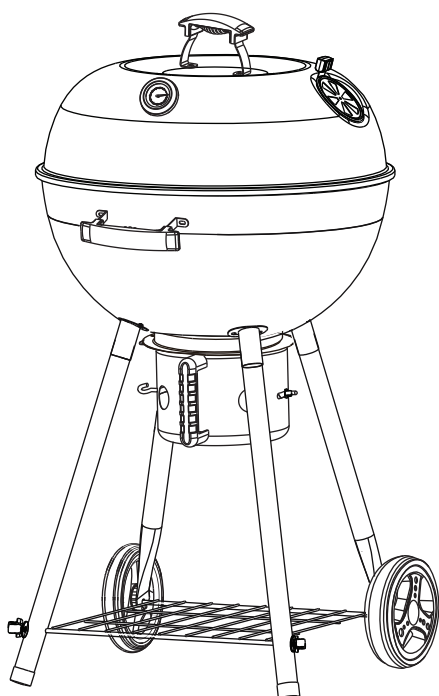



# OPERATING YOUR GRILL

## Select a Proper Location

- Once you have assembled your new grill, find a suitable location for use.
- Never use this grill inside any building, garage, shed or breezeway, under and overhang, or inside any boat, trailer or recreational vehicle. This is to help prevent the possibility of fire, carbon monoxide poisoning or asphyxiation.
- Always place your grill on a hard and level surface far away from combustable materials and structures.
- **DO NOT** use this grill under covered areas, such as awnings, umbrellas, porches or gazebos. Keep all combustable surfaces at least 10 feet away.
- **DO NOT** store or use gasoline or other flammable substances in the vicinity of grills or other heat-generating appliances.
- **DO NOT** obstruct the flow of combustion and ventilation.

## Choosing Charcoal

- We recommend using charcoal briquettes or lump charcoal.
- Adding dry hard wood on top of hot coals can provide additional smoke flavor.

## Air Vent Operation

- The grill has two control vents; a bottom vent on the ash catcher and an air exhaust vent at the top of the lid. By adjusting the amount of vent opening, you can adjust the temperature of your grill.
- Vents, vent controls and metal surfaces will become hot during use. Use grill mitts or hot pads to adjust vents when grill is in use.

## Lighting Instructions

- **DO NOT** use gasoline, kerosene or alcohol for lighting. Only use charcoal lighter fluid. Follow manufacturer's instructions.
- **DO NOT** add charcoal lighter fluid or charcoal infused with lighter fluid to hot or warm charcoal.
- **DO NOT** overfill charcoal grate. Excess charcoal may cause a fire or damage to your grill.
- Use caution when removing hot starter.
- Read all instructions before lighting.
- Carefully follow all instructions accompanying charcoal lighter fluid, electric charcoal starters or charcoal.
- Fully open air vents on lid and bottom vent.
- Ensure the charcoal grate is in the grill, positioned properly.
- Open both vents as described in Air Vent Operation.

## OPERATING YOUR GRILL (CONTINUED)

### Chimney Starter

1. For best results with a chimney starter, remove cooking grate and set aside.
2. Put desired amount of charcoal in chimney starter.
3. Place crumpled newspaper under the starter and light, following the manufacturer's instructions.
4. Carefully pour ignited coals onto charcoal tray, using mitts, gloves, eye protection, and other protective equipment recommended by the starter manufacturer.
5. Replace cooking grate using a grilling mitt or grate lifting tool.

### Self-Starting Charcoal

- **DO NOT** add charcoal lighter fluid or charcoal infused with lighter fluid to hot or warm charcoal.
- Arrange desired amount of charcoal and ignite following manufacturer's instructions.

### Lighter Fluid

- Follow all instructions on lighter fluid container.
- When using lighter fluid always check ash collector before lighting. Remove any fluid from the grill prior to lighting to avoid a potential fire in the bottom bowl.
- **DO NOT** add charcoal lighter fluid or charcoal infused with lighter fluid to hot or warm charcoal.
- Place desired coals onto charcoal grate. Arrange as indicated by lighter fluid manufacturer.
- Following manufacturer instructions, apply lighter fluid to charcoal.
- Be sure to allow all lighter fluid to burn off prior to cooking or noticeable flavors can be added to food.

### When Finished Cooking

- Never use water to extinguish charcoal.
- **DO NOT** remove ashes until all charcoal is completely burned or extinguished.
- Close lid and close both vents so the charcoal will slowly cool.
- Once charcoal is cool, slide out ash collector and dispose into a metal container.
- Clean your grill after each use with warm soapy water.
- **DO NOT** use abrasive or flammable cleaners, as it will damage the parts of this product and may start a fire.

## WARRANTY

This warranty covers defects in parts and workmanship for a period of 3 years from the original purchase date. Any damage claim regarding the enameling must be submitted within 30 days of purchase to be covered by the warranty.



### The following conditions are NOT covered by this warranty:

- Unevenness and color variations in the enamel coating.
- Damage caused by improper assembly or disregard of the manual.
- Use of spare parts not supplied by manufacturer.
- Damage resulting from modifications or inappropriate use.
- Abuse of the grill
- Damage caused by improper maintenance or repairs by an unauthorized person.

### Limitations and exclusions:

- This warranty applies only to the original purchaser and may not be transferred.
- If you cannot verify the purchase date of the grill the warranty period will begin on the date the grill was manufactured.
- Replacement or repair parts are warranted for the remaining period of the original part warranty.

This grill must be assembled, installed, operated and maintained in accordance with all applicable codes and the grill instruction manual. Keep an invoice, cancelled check or payment record to verify the purchase date of the grill.

	<b>WARNING</b>	
<b>CALIFORNIA PROPOSITION 65</b>		
1. Combustion by-products produced when using this product contain chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.		
2. This product contains chemicals, including lead and lead compounds, known to the State of California to cause cancer, birth defects or other reproductive harm.		
<i>Wash your hands after handling this product.</i>		

With any warranty issues,  
please contact:

**Williams Sonoma**  
**1-877-504-8004**

