



## USE & CARE GUIDE

GUIDE D'UTILISATION ET D'ENTRETIEN

GUIA DE USOS Y CUIDADOS

*Le invitamos a leer cuidadosamente este  
instructivo antes de usar su aparato.*

## Welcome

Thank you for your purchase of this Wolf Gourmet product. We look forward to being part of your kitchen for years to come. Wolf is a third-generation family-owned company that has a personal stake in the preparation of your food. With family ownership comes a great attention to detail and an uncompromised dedication to creating exceptional products. Wolf built its business and reputation on helping home cooks achieve the best results possible. With Wolf Gourmet's precise control, wake up to coffee that provides consistently smooth and balanced flavor.



## Contents

- 4 Safety Precautions
- 6 Wolf Gourmet Coffee System  
Parts and Features
- 10 Getting Started
- 16 Care Recommendations
- 19 Troubleshooting
- 21 Wolf Gourmet Warranty

## Customer Care

As a Wolf Gourmet owner, you can count on our support. Our customer care center is available 24 hours a day, seven days a week and is staffed by product experts at our headquarters in Madison, Wisconsin. Should the need arise, simply call 800.222.7820 to speak with one of our product experts. In Mexico, please contact the customer service center at 01.800.400.4372 Monday through Friday from 9:00 a.m. to 7:00 p.m. We are confident this guide will answer your questions about the features, operation, and maintenance of your Wolf Gourmet product. If you have additional questions, please contact us by phone or visit us online at [wolfgourmet.com](http://wolfgourmet.com).

## Register Your Product

We strongly encourage you to register your Wolf Gourmet appliance. It's important to us that you get the most out of your products.

By registering, you will:

- Become a Wolf Gourmet culinary insider.
- Have ongoing support from Wolf Gourmet.
- Activate your warranty and record your purchase.
- Be alerted to any service updates.
- Receive occasional emails to help you maintain and enjoy your appliances.

To register, visit [wolfgourmet.com/registration](http://wolfgourmet.com/registration) or call 800.222.7820. In Mexico, please visit [wolfgourmet.com.mx](http://wolfgourmet.com.mx) or call 01.800.400.4372.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety.
- Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- Do not touch hot surfaces. Use handles or knobs. Care must be taken as burns can occur from touching hot parts or from spilled, hot liquid.
- To protect against electric shock, do not place cord, plug, or Coffee System in water or other liquid.
- Unplug from outlet when either the Coffee System or clock is not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
- Coffee System must be operated on a flat surface away from the edge of counter to prevent accidental tipping.
- Do not operate any appliance with a damaged supply cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner. Supply cord replacement and repairs must be conducted by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard. Call the provided customer service number for information on examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electrical shock, or personal injury.
- Use only the carafe provided with the appliance.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
- The carafe is designed for use with this Coffee System. It must never be used on a range top or in a microwave oven.
- Do not use a carafe with a loose or weakened handle.
- Do not clean carafe with cleansers, steel wool pads, or other abrasive materials.
- Be certain carafe lid is securely in place during brew cycle and when pouring coffee. Do not use force when placing lid on carafe.
- Do not place Coffee System on or near a hot gas or electric burner or in a heated oven.

## SAFETY PRECAUTIONS

# IMPORTANT SAFEGUARDS continued

- To disconnect Coffee System, turn controls to OFF. Remove plug from wall outlet.
- **WARNING!** To reduce the risk of fire or electric shock, do not remove the bottom cover. No user-serviceable parts are inside. Repair should be done by authorized service personnel only.
- Do not use appliance for other than intended use.

## SAVE THESE INSTRUCTIONS

### Other Consumer Safety Information

**This appliance is intended for household use only.**

**⚠ WARNING Electrical Shock Hazard:** This appliance is provided with a grounded (3-prong) plug to reduce the risk of electric shock. The plug fits only one way into a grounded outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or by using an adapter. If the plug does not fit into the outlet, have an electrician replace the outlet.

The length of the cord used on this appliance was selected to reduce the hazards of becoming tangled in or tripping over a longer cord. If a longer cord is necessary, an approved extension cord may be used. The electrical rating of the extension cord must be equal to or greater than the rating of the appliance. The extension cord must be a grounding-type, 3-wire cord. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or accidentally tripped over.

To avoid an electrical circuit overload, do not use another high-wattage appliance on the same circuit with this appliance.

## WOLF GOURMET COFFEE SYSTEM PARTS AND FEATURES

**BEFORE FIRST USE:** Wash all removable parts in hot, soapy water. Rinse and dry. Brew one cycle with water and discard water.

### PARTS AND FEATURES

1	Water Reservoir Lid	7	BREW STRENGTH Knob
2	Water Filter Holder	8	TIME/CUPS Knob
3	Water Filter	9	Thermal Carafe
4	Water Reservoir	10	Coffee Drawer Cleanout
5	Control Panel	11	Coffee Drawer
6	Mode Selector Bezel	12	Filter Basket



To order filter replacements and parts:

US: [wolfgourmet.com](http://wolfgourmet.com)

800.222.7820

MX: [wolfgourmet.com.mx](http://wolfgourmet.com.mx)

800.400.4372

6

















Wolf Gourmet  
Coffee System

### Parts and Features

1. **Water Reservoir Lid:** The lid is used to keep dust and other contaminants from the water in the water reservoir.
2. **Water Filter Holder:** Used to easily lift the water filter out of the water reservoir.
3. **Water Filter:** The water filter is used to reduce chlorine taste from your tap water.
4. **Water Reservoir:** The water reservoir is used to measure and transport the water from the tap to the Coffee System.
5. **Control Panel:** Controls the functions of the Coffee System. See explanation of icons and buttons on the following pages.
6. **Mode Selector Bezel:** Choose mode: CLEAN, MANUAL, or ACCU-BREW.
7. **BREW STRENGTH Knob:** Controls the brew strength in ACCU-BREW mode.
8. **TIME/CUPS Knob:** Sets time in CLOCK or PROGRAM mode. Sets cups in ACCU-BREW mode.
9. **Thermal Carafe:** Holds brewed coffee warm for 1 hour.
10. **Coffee Drawer Cleanout:** Removable part that allows consumer to clean any grounds or water that may have spilled into coffee drawer.
11. **Coffee Drawer:** Contains filter basket and coffee scale for ACCU-BREW mode.
12. **Filter Basket:** Holds paper filter and coffee grounds for brewing.

## WOLF GOURMET COFFEE SYSTEM PARTS AND FEATURES










### CONTROL PANEL DISPLAY ICONS

Icon in the Display	Function	Mode
	Cups to Brew - Adjust from 4 to 10 cups using the TIME/CUPS Knob.	ACCU-BREW
	Brew Strength - Adjust from MILD to BOLD using the Brew Strength Knob.	ACCU-BREW
	Coffee Scale - ADD COFFEE appears next to the scale, indicating more coffee needs to be added for the desired Brew Strength and Cups to Brew selected above. Also appears when brew basket is not in place.	ACCU-BREW
	Coffee Scale - Indicates the correct level of coffee has been reached.	ACCU-BREW
	Coffee Scale - Too much coffee added. Coffee can be brewed with extra coffee, or coffee can be removed to reach the correct level.	ACCU-BREW
	Set Time of Day - Press CLOCK for more than 1/2 second. Use TIME/CUPS knob to adjust.	MANUAL ACCU-BREW
	Time of Day	MANUAL ACCU-BREW
	Start Time - Press PROG for more than 1/2 second to set the time of day when the Coffee System should start automatically brewing.	MANUAL ACCU-BREW
	Brewing - Coffee is brewing.	MANUAL ACCU-BREW
	Ready - Coffee has completed brewing.	MANUAL ACCU-BREW
	Time Since Brew - Displays the time (up to 1 hour) that has elapsed since coffee completed brewing.	MANUAL ACCU-BREW
	OFF - Displayed if START/STOP is pressed during the BREWING cycle.	MANUAL ACCU-BREW
	Add Water - Water reservoir is empty.	ALL
	Clean - Reminds owner to clean unit every 300 cycles. Unit can be used normally if cleaning is not performed as recommended. Icon will also appear when CLEAN cycle is utilized.	ALL
	Wolf Gourmet Logo - Unit is in standby mode.	ALL
	Water Filter - A reminder to change the water filter.	ALL



**WOLF GOURMET COFFEE SYSTEM PARTS AND FEATURES**

**CONTROL PANEL BUTTONS & KNOBS**

Button/Knob	Function	Brew Modes
	Press and hold for more than 1/2 second to activate the Set Start Time function. Press and quickly release to toggle between enabling and disabling the Start Time function.	MANUAL ACCU-BREW
	Press to start or stop brewing.	ALL
	Press and quickly release to toggle the clock display on/off. Press and hold between 1/2 - 2 seconds to activate Set Time function. Press and hold for more than 2 seconds to toggle between 12- and 24-hour clock.	MANUAL ACCU-BREW
	Press and quickly release while coffee drawer is open to reset the coffee scale to zero.	ACCU-BREW
	Press and hold for more than 5 seconds to reset Water Filter icon.	CLEAN
	Mode Selector Bezel - Turn to select operation mode.	ALL
	BREW STRENGTH Knob - Turn clockwise to increase brew strength. Turn counterclockwise to reduce brew strength.	ACCU-BREW
	TIME - Turn knob clockwise to increase time. Turn counterclockwise to decrease time.	CLOCK or PROG Active
	CUPS - Turn knob clockwise to increase number of cups. Turn counterclockwise to decrease cups.	ACCU-BREW

## Getting Started

### **⚠ WARNING** Burn Hazard.

To avoid hot coffee overflowing from the filter basket:

- When using decaffeinated coffee, do not exceed the coffee manufacturer's recommended serving amount.
- If filter basket overflow occurs, unplug Coffee System and allow coffee in filter basket to cool before removing filter basket.

### CHOOSING A BREWING MODE

1. MANUAL mode allows you to use the Coffee System like a traditional drip coffee maker. The ACCU-BREW functions are disabled.
2. ACCU-BREW mode allows you to set the number of cups and strength of the coffee you would like to brew. The Coffee System enables the weight scale in the coffee drawer to allow you to precisely add the correct amount of coffee for the strength and cups you have selected.
3. CLEAN mode is used to clean your Coffee System every 300 cycles.



### SETTING THE TIME OF DAY FOR THE FIRST TIME

1. Press the CLOCK button for more than 1/2 second. TIME 12:00 AM will appear in the display. The clock digits will continue to flash until the time-setting procedure is complete.
2. Turn the TIME/CUPS knob clockwise to increase time. Turn counterclockwise to decrease time.
3. When you have finished setting the time, release the knob. After 5 seconds the clock will stop flashing and become solid.



### TURNING THE CLOCK OFF

1. After the time has been set, the clock can be turned off and on by pressing the CLOCK button.

## GETTING STARTED

### CHANGE CLOCK FROM 12-HOUR TO 24-HOUR FORMAT

1. After the time has been set, the clock can be toggled between 12-hour and 24-hour format by pressing and holding the CLOCK button for more than 2 seconds.

### INSTALLING THE WATER FILTER

1. Remove the filter pod from the packaging.
2. Soak the pod in a cup of fresh water for 15 minutes.
3. Install the filter pod into the water filter housing, and close the housing until it snaps.
4. Place the water filter housing into the water reservoir.
5. After about 30 days of use, the display will show WATER FILTER as a reminder that it is time to replace the water filter.
6. To reset the WATER FILTER reminder, turn the Mode Selector Bezel to CLEAN mode. Then, press and hold the ZERO button for 5 seconds.




## GETTING STARTED

### MANUAL BREW MODE

1. Turn brew Mode Selector Bezel to MANUAL.
2. Lift up to remove water reservoir from Coffee System.
3. Remove water reservoir lid and fill the reservoir with enough cold water to brew the desired number of cups of coffee.
4. Replace water reservoir lid onto water reservoir. Place into Coffee System.
5. Open coffee drawer and insert a #4 paper cone filter into the filter basket.
6. Add desired amount of coffee to filter and close drawer.



5. Open coffee drawer and insert a #4 paper cone filter into the filter basket.
6. Add desired amount of coffee to filter and close drawer.

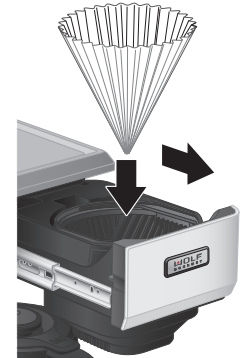

7. Press START/STOP button. The display will show BREWING. When brewing is complete, the display will show READY and the Coffee System will chime.



8. The display will then show TIME SINCE BREW to let you know how long the coffee has been in the carafe. After 60 minutes the Coffee System will return to standby mode. To remove this timer from the display, press the CLOCK button.




**NOTE: Empty carafe before starting next brew cycle to avoid overflow.**

## GETTING STARTED

### ACCU-BREW MODE

1. Turn brew Mode Selector Bezel to ACCU-BREW.
2. Lift up to remove water reservoir from Coffee System.
3. Remove water reservoir lid and fill the reservoir with enough cold water to brew the desired number of cups of coffee.
4. Replace water reservoir lid onto water reservoir. Place into Coffee System.
5. The default setting for ACCU-BREW is 6 cups and MEDIUM brew strength. If the default settings are changed, the Coffee System will remember your last setting, even if power is disconnected.

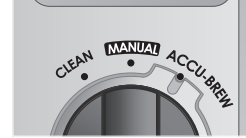

6. Set the number of cups to brew. This should match the amount of water added in step 3. Turn the TIME/CUPS knob clockwise to increase the number of cups. Turn counterclockwise to decrease the number of cups.




7. Set the desired strength. Turn the BREW STRENGTH knob clockwise to increase the coffee strength. Turn counterclockwise to decrease the coffee strength.
8. Open coffee drawer and insert a #4 paper cone filter into filter basket.



## GETTING STARTED

9. Press the ZERO button to reset the coffee scale to zero.  
ADD COFFEE will flash next to the coffee scale.

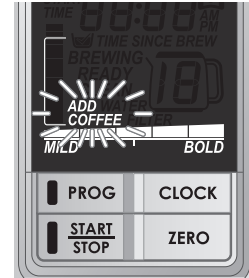

10. Add coffee until the scale icon is displayed.



11. If too much coffee is added to the filter basket, the display will flash bars above the top of the scale. You can remove coffee until the scale icon is displayed, or you can brew with the extra coffee.



12. Close coffee drawer. The scale icon is not displayed when the drawer is closed.
13. Press the START/STOP button to begin brewing.
14. The display will show BREWING.



15. When brewing is complete, the display will show READY and the Coffee System will chime.



16. The display will then show the TIME SINCE BREW icon to let you know how long the coffee has been in the carafe. After 60 minutes the Coffee System will return to standby mode. To remove this timer from the display, press the CLOCK button.



**NOTE: Empty carafe before starting next brew cycle to avoid overflow.**

## GETTING STARTED

### USING THE PROGRAM START TIME FUNCTION

The START TIME function allows you to program the Coffee System to brew at a later time.

1. If you have not set the current time of day, please follow the steps shown in “Setting the Time of Day for the First Time.”

2. Press and hold the PROG button for greater than 1/2 second to activate the Set Start Time function. The PROG light will flash and START TIME will be displayed next to the clock digits.

If the programmed start time has not been set previously, the default start time of “--:--” will flash in the display.

If the programmed start time has been set previously, the previous start time will flash in the display.

3. Turn the TIME/CUPS knob clockwise to increase time. Turn counterclockwise to decrease time

4. When you have finished setting the time, release the knob. After 5 seconds, the clock will change to time of day and the PROG light will remain on.

5. If there is no water in the reservoir, the ADD WATER icon will display and the PROG light will not illuminate.

6. To turn off the PROG function, press the PROG button again for less than 1/2 second.



## Care Recommendations

### **⚠ WARNING** Electrical Shock Hazard:

Do not clean with metal scouring pads. Pieces can break off pad and touch electrical parts, causing a risk of electric shock.

Your Coffee System should be cleaned regularly for best performance and long life. Regular cleaning will also reduce the risk of fire hazard.

### BEFORE CLEANING

Unplug Coffee System and let cool.

### CLEANING

<b>Control Panel Display</b>	Wipe with a slightly damp sponge. Protect display when cleaning any other surfaces.
<b>Stainless Steel Exterior</b>	Use a nonabrasive stainless steel cleaner, such as Signature Polish, and apply with a soft lint-free cloth. To bring out the natural luster, lightly wipe surface with a water-dampened microfiber cloth followed by a dry polishing cloth. Always follow the grain of stainless steel. Signature Polish can be ordered via their website at <a href="http://www.signaturepolishonline.com">www.signaturepolishonline.com</a> .
<b>Non-Stainless Steel Exterior</b>	Wipe outside of Coffee System with a damp cloth or spray with all-purpose cleaner. Wipe clean with a lint-free cloth. Do not use abrasive cleaners or metal scouring pads.
<b>Thermal Carafe</b>	Allow to cool before washing. Hand-wash in warm soapy water with a sponge or dishcloth.  Avoid using steel wool, steel scouring pads, or harsh detergents.
<b>Water Reservoir</b>	Hand-wash in warm soapy water with a sponge, dishcloth, or plastic pad after each use.
<b>Filter Basket</b>	Hand-wash in warm soapy water with a sponge, dishcloth, or plastic pad, or clean in dishwasher after each use.



## CARE RECOMMENDATIONS

### USING THE CLEAN FUNCTION

After 300 cycles, the CLEAN function will appear in the display as a reminder to clean the inside of the Coffee System. The Coffee System will perform 3 stages of cleaning. Cycle 3 performs a 20 minute soaking cycle to help remove mineral deposits. Cycles 2 and 1 rinse the vinegar from the Coffee System.

1. To prevent vinegar from getting into water filter, remove water filter from the reservoir.
2. Turn Mode Selector Bezel to the CLEAN position. Pour 3/4 cup (177 ml) of plain white vinegar into the water reservoir. Fill to the CLEAN line with cold water. Place water reservoir into the Coffee System.
3. Press START/STOP. The display will display 3 and start a timer for 20 minutes. During this time the Coffee System will cycle the heater to help remove mineral deposits from inside the Coffee System.



4. At the end of the cycle the display will show ADD WATER and 2.  
**Be sure to empty the carafe before starting Cycle 2.**



5. Fill to the CLEAN line with water. Place water reservoir into the Coffee System.



## CARE RECOMMENDATIONS

5. Press START/STOP. The display will show 2 and start a timer for 5 minutes. During this time the Coffee System will brew the water through the system to remove the residual vinegar.



6. At the end of the cycle the display will show ADD WATER and 1.

**Be sure to empty the carafe before starting Cycle 1.**



7. Fill to the CLEAN line with water. Place water reservoir into the Coffee System.



8. Press START/STOP. The display will show 1 and start a timer for 5 minutes. During this time the Coffee System will brew the water through the system to remove the residual vinegar.

9. Empty carafe and place the water filter back into the water reservoir.



## Troubleshooting

### LCD displays “ADD WATER”

- Tank is empty.
- Water level in tank is lower than the height of the float. Minimum water level is 2 cups of water.
- Float may be stuck. Remove reservoir and shake it.

### LCD displays “ADD COFFEE”

- Ensure brew basket is in place and drawer is fully closed.
- Remove coffee from basket, leaving the brew basket in the drawer. Zero scale, then add coffee.

### Coffee scale always displays weight in ACCU-BREW mode

- Add brew basket and paper filter to the drawer with no coffee. Zero scale, then add coffee. Scale must always be zeroed with brew basket in place before adding coffee for accurate scale readings.

### LCD displays “WATER FILTER”

- Water filter needs to be replaced. See “Wolf Gourmet Coffee System Parts and Features” page for instructions on how to order a new filter.
- WATER FILTER reminder will not disappear from display until the counter is reset. To reset WATER FILTER reminder, turn Mode Selector Bezel to CLEAN, and hold down the ZERO button until WATER FILTER reminder is removed.

### Coffee is not dispensing

- Ensure carafe is in place.
- Overflow protection may be activated. If a lot of coffee is added and brew basket is about to overflow, the scale will detect this and the heater will turn off to allow the basket to drain. Once the coffee has drained to a certain level, the heater will turn back on and finish the brew. The unit will continue to display BREWING while this feature is activated.

### Coffee tastes bad

- Too much water or too little water was added.
- Too much coffee or too little coffee was added.
- Poor coffee quality or freshness.
- Poor water quality. Use filtered or bottled water for better taste.

## TROUBLESHOOTING

### Coffee overflows from brew basket

- Too much coffee was added. Recommended maximum amount is 82g of coffee.
- Decaffeinated or finely ground coffee is more likely to cause overflow. Use slightly less grounds when brewing these types of coffees.
- Coffee grounds may have fallen between the paper filter and brew basket when coffee was being added.
- Paper filter not open fully or in the proper position. Rinse brew basket before inserting paper filter. This will make it easier for the edges of the paper filter to remain pressed against the side of the basket.
- Poor quality paper filter.

### Longer than normal brew time

- Too much water was added (10 cups max).
- Coffee System needs cleaning.
- Overflow protection may have been activated during brew. If a lot of coffee is added and brew basket is about to overflow, the scale will detect this and the heater will turn off to allow the basket to drain. Once the coffee has drained to a certain level, the heater will turn back on and finish the brew. This may lengthen the brew time.

### Coffee overflows from carafe

- Too much water was added (10 cups max).
- Carafe was not emptied since the last use .

Wolf, Wolf & Design, Wolf Gourmet, W & Design and the color red as applied to knobs are registered trademarks and service marks of Wolf Appliance, Inc. Sub-Zero, Sub-Zero & Design, Dual Refrigeration, The Living Kitchen, Great American Kitchens, The Fine Art of Kitchen Design, and Ingredients are registered trademarks and service marks of Sub-Zero, Inc. (collectively, the "Company Marks.") All other trademarks or registered trademarks are property of their respective owners in the United States and other countries.

## Wolf Gourmet Residential Limited Warranty

### FOR RESIDENTIAL USE

#### LIMITED FIVE YEAR WARRANTY

This Wolf Gourmet product warranty applies only to appliances. Wolf Gourmet warrants appliances to be free from defects in materials or workmanship for a period of five (5) years from the date of original purchase.

#### LIFETIME LIMITED WARRANTY

This Wolf Gourmet product warranty applies only to cookware and cutlery products. Wolf Gourmet warrants cookware and cutlery to be free of defects in materials or workmanship for the lifetime of the product. Minor imperfections and discolorations are normal and are not considered defects.

#### TERMS APPLICABLE TO EACH WARRANTY

This Wolf Gourmet Residential Limited Warranty applies to appliances, cookware and cutlery purchased and used in the U.S. This is the only express warranty for this product and is in lieu of any other warranty.

During the warranty period, your exclusive remedy is repair or replacement of the product or any component found to be defective, at our option. All service provided by Wolf Gourmet under this warranty must be performed by Wolf Gourmet factory-certified service, unless otherwise approved in advance by Wolf Gourmet, and all service will be provided during normal business hours.

This warranty does not cover wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from negligence, accident, alteration, abuse, misuse, or improper service or repair. This warranty is void if the product is used for other than residential use or subjected to any voltage or waveform other than as specified on the rating label (e.g., 120 V ~ 60 Hz). This warranty extends only to the original consumer purchaser or initial gift recipient.

Wolf Gourmet excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. EVERY IMPLIED WARRANTY, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS DISCLAIMED EXCEPT TO THE EXTENT PROHIBITED BY LAW, IN WHICH CASE SUCH WARRANTY IS LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim and receive the name of the Wolf Gourmet factory-certified service personnel nearest to you, please contact Wolf Appliance, Inc., PO Box 44848, Madison, WI 53744; or visit the contact & support section of our website at [wolfgourmet.com/warranty](http://wolfgourmet.com/warranty); or email us at [customerservice@subzero.com](mailto:customerservice@subzero.com); or call 800.222.7820. For faster service, please locate the model, type and series numbers on your product's rating label.



**Modelo:**  
**WGCM100S**

**Tipo:**  
**A107**

**Características Eléctricas:**  
**120 V~ 60 Hz 900 W**

**Los modelos incluidos en el instructivo de Uso y Cuidado pueden ir seguidos o no por un sufijo correspondiente a una o varias letras del alfabeto y sus combinaciones, separadas o no por un espacio, coma, diagonal, o guión. Como ejemplos los sufijos pueden ser: "Y" y/o "MX" y/o "MXY" y/o "Z".**



WOLF APPLIANCE, INC. • P.O. BOX 44848 • MADISON, WI 53744

[wolfgourmet.com](http://wolfgourmet.com) • 800.222.7820

840298500 05/2018