

Proper Care and Clean Up

1. When S'mores making is complete, extinguish the flame as directed in ASSEMBLY AND OPERATING INSTRUCTIONS.
2. Allow the grill and ceramic tray to cool completely before washing.
3. Slight discoloration of grill top after use is normal and will not affect the performance of the grill.
4. Wash the wire grill top by hand using warm water and a non-abrasive cleanser. Do not use a scouring pad. Towel dry.
5. Wipe the burner with a damp cloth or sponge and towel dry. If necessary, wash by hand using warm water and a non-abrasive cleanser. Do not use a scouring pad.
6. Marshmallow roasting forks, ceramic tray and ceramic grill are dishwasher safe, however hand washing is recommended to extend product life.

Storage

ALWAYS STORE THE S'MORES MAKER SEPARATELY FROM REPACKAGED CANNED CHAFING FUEL, LIGHTERS, AND MATCHES.

To Make a Traditional S'more

1. Break graham cracker in half.
2. Add chocolate to one side.
3. Toast marshmallow.
4. Add golden brown marshmallow.
5. Add top half of the cracker.
6. Add friends, fun, and memories for a finger-licking good time!



S'more Variations

Peanut Butter S'mores

Banana S'mores

Strawberry Jam S'mores

Oatmeal Cookie S'mores

Chocolate Chip Cookie S'mores

Cinnamon Graham Cracker S'mores

* PREPACKAGED 2.6 FL OZ CANNED CHAFING FUEL SOLD SEPARATELY.



Chicago Metallic is a licensed brand of
Lifetime Brands, Inc. Garden City, NY 11530.
©2017. All Rights Reserved. Made in China



CERAMIC S'MORES MAKER

indoor and outdoor use



Safety & Operating Instructions



WARNING

Read and follow all warnings and instructions in this manual to avoid personal injury or property damage.

Save This Manual For Future Reference


IMPORTANT SAFETY WARNINGS

WE WANT YOU TO USE YOUR S'MORES MAKER AS SAFELY AS POSSIBLE. THE PURPOSE OF THIS SAFETY ALERT SYMBOL ⚠ IS TO ATTRACT YOUR ATTENTION TO POSSIBLE HAZARDS AS YOU USE YOUR S'MORES MAKER. WHEN YOU SEE THE SAFETY ALERT SYMBOL ⚠, PAY CLOSE ATTENTION TO THE INFORMATION WHICH FOLLOWS.


⚠ WARNING: BURN OR FIRE HAZARD

- ⚠ 1. **ADULTS ONLY** should OPERATE this PRODUCT. Children should not use without close adult supervision. Keep children away from the burner and hot surfaces.
- ⚠ 2. Use this product **ONLY** with prepackaged 2.6 fl oz. canned chafing fuel, which can be bought separately in supermarkets and hardware stores.
 - Do NOT operate with any fuel other than prepackaged 2.6 fl oz. canned chafing fuel.
 - Do NOT operate with any fuel containing methyl hydrate, or methanol, or wood alcohol, which can be extremely flammable and is harmful or fatal if swallowed.
- ⚠ 3. Prepackaged canned chafing fuel is **FLAMMABLE** and can cause burns and fire hazards and must be used with caution.
- ⚠ 4. **NEVER** place or use this product on a stovetop or in an oven, microwave oven, fireplace, or campfire.
- ⚠ 5. **NEVER** leave product unattended when hot or in use.
- ⚠ 6. **NEVER** wear loose clothing or allow long hair to hang freely while lighting prepackaged canned chafing fuel or using the product. Keep hands and face away from grill when product is in use.
- ⚠ 7. **ALWAYS** use this product on a level and stable surface.
- ⚠ 8. **NEVER** use this product on a couch or tablecloth or near curtains, drapes, rugs, or other items that could catch fire or combust.
- ⚠ 9. **NEVER** move this product while the prepackaged canned chafing fuel is ignited.
- ⚠ 10. **ALWAYS** use product as directed – see “Assembly and Operating Instructions” in this booklet.

The S'mores Maker Assembled View

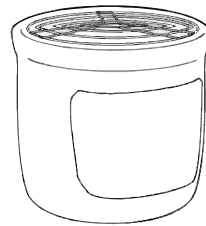


S'mores Grill

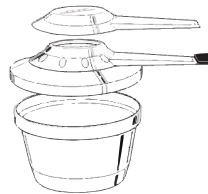


Snuffer

Burner Handle

Burner Holder*

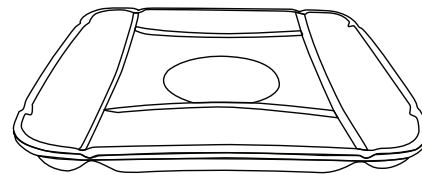

Ceramic Tray

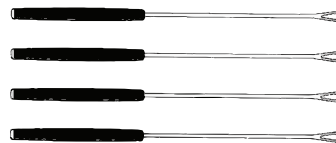

Marshmallow Roasting Forks (4)



*Prepackaged 2.6 fl oz Canned Chafing Fuel Sold Separately.

⚠ Assembly and Operating Instructions - Read “IMPORTANT SAFETY WARNINGS” Before Operating

- ⚠ 1. You must use this product only with prepackaged 2.6 fl oz. canned chafing fuel, which is sold separately. Read all instructions and warnings on the prepackaged 2.6 fl oz. canned chafing fuel label and package before using.
2. Place the ceramic tray on a stable, flat surface where you will be roasting your marshmallows and making your S'mores.
3. Once you have lit the fuel inside the grill, **DO NOT** carry, move, or tip the grill or the ceramic tray.



4. Make sure the grill is securely positioned in the sunk-in portion in the center of the tray base.



5. Holding the burner holder, twist the burner holder lid counter-clockwise to separate the top section (with holes) from the bottom (without holes.)



6. Remove the cover from one prepackaged 2.6 fl oz can of chafing fuel and insert in burner holder.



7. Replace the burner holder lid, making certain that it is securely attached to the burner holder.



8. Place the burner inside the grill so that it sits securely in the center of the grill.



9. Use a long match or long butane lighter to light the prepackaged 2.6 fl oz. canned chafing fuel.



10. ⚠ When canned chafing fuel is ignited and in use, the burner becomes very hot during use.




- **ONLY** touch the handle of the burner, if necessary.
- **NEVER** touch the body of the burner.



11. Place a marshmallow on the roasting fork and hold fork 2" above grill. Toast marshmallows according to your preference. Do not burn marshmallow.



12. ⚠ Place a ceramic bowl filled with water near the S'mores Maker when in use. If during roasting the marshmallow catches on fire, submerge the marshmallow in the water to quickly extinguish the flame.

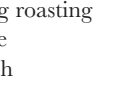

13. When finished roasting marshmallows, you must extinguish the flame in the prepackaged 2.6 fl oz. canned chafing fuel. To extinguish, do NOT blow out flame. Insert snuffer so that central burner opening is completely closed for 5 seconds.



14. Make sure the grill and ceramic tray have cooled before removing or handling after use.

15. Unused prepackaged canned chafing fuel, along with matches or lighters, should be stored in a child-safe place, away from heat sources and from combustibles (e.g., paper napkins, paper plates.) Make sure the burner holder lid has been securely closed when storing.