


# WILLIAMS-SONOMA HOME

## LINKED DETAIL WALL MIRROR BRSS

### MOUNTING INSTRUCTIONS



#### HARDWARE INCLUDED:

- A. (3) Mounting Screw (Ø4\*38mm)
- B. (3) Drywall Anchor (Ø12\*42mm)
- C. (1) Alum wall-side bracket



The hardware included with this item is meant for drywall only. If your walls are made from concrete, brick or plaster, please consult your local hardware store for assistance in selecting the appropriate hardware.


#### TOOLS NEEDED (not included):

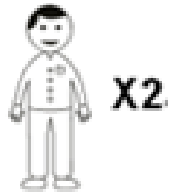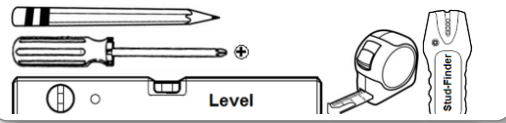


**Note:** This item includes one sets of Alum bracket to allow itself to be mounted to a wall. Each Alum bracket is comprised by a product-side bracket and a wall-side bracket, and the product-side brackets are pre-installed in the slots on the back of the mirror. Only one of the wall-side brackets (the aluminum bars) and three of the provided screws will be used for the mirror's mounting. Please keep the remaining Alum bracket in store as spare parts after the mounting is completed.

#### Mounting Instructions:

- 1) Determine a desired location for the item with the help of another person, hold the item against a wall at a desired mounting location so that the back side of the item faces towards you and you can see the aluminum bracket - where the product-side brackets located in. Use a level to ensure the item is being held level and then use a pencil to mark the wall on each side of the item that adjacent to the middle of the horizontal bracket, so the marks you just made are on the same level with the bracket. Set the item aside.
- 2) Connect the two marks of Step (1) with a slight pencil line and then use a level to re-confirm that the line is level (adjust if necessary).

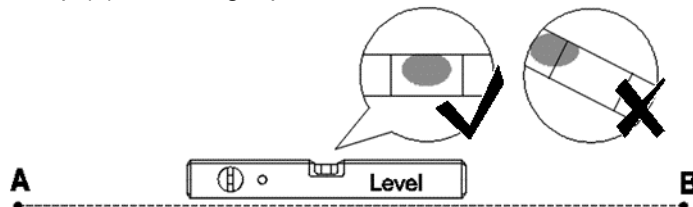

- 3) Now place the wall-side bracket over & centered along this line and keep the sharp end of the bracket facing up as the illustration shown inside the circle. Align the screw holes of the bracket with the pencil line so the insertion points of the screws will follow along this line.

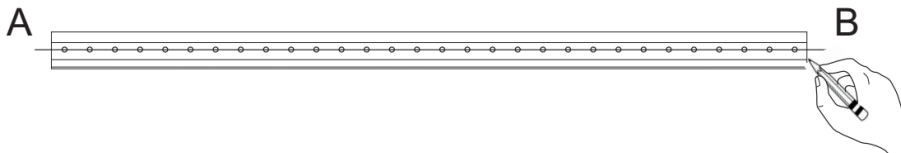


- 4) The anchors that come with this item cannot penetrate wood. Therefore, we have to determine if either mark of Step (3) happens to align with a wood stud (use a stud-finder to determine this). If either does, take note of that mark so that in the next step you will only use a screw at that location, not an anchor.




- 5) For the marks that do not align with a stud, first install an anchor into the wall. To do this, use a Phillips screwdriver to engage an anchor and then position the anchor tip against the wall at one of the marks. Rotate the anchor clockwise as you firmly push it into the wall. The anchor is designed to drive itself into the wall like a large screw. Continue rotating until the anchor's head becomes even with the wall surface. Repeat this step with the other anchor

# WILLIAMS-SONOMA HOME

and other non-stud aligning mark.

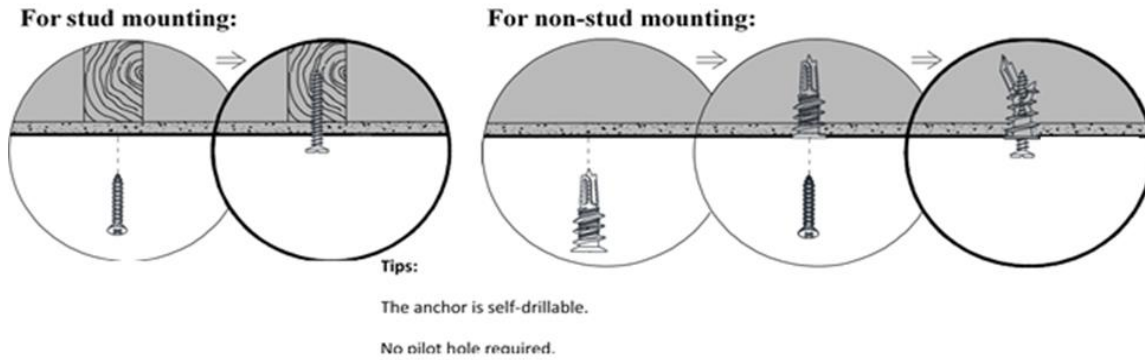

- 6) Re-position the bracket on the wall so that the holes align with either installed anchors or wall marks. Again, make sure that the sharp edge of the bracket faces up and away from the wall. Use a screwdriver to secure a screw through each hole of the bracket and rotate into the installed anchor (or directly into the wall at the stud marks). Repeat to install the screws in every three holes (more or less depending on where the wood studs, as mentioned above) aligned-along the bracket. Rotate each screw clockwise until tight so that the wall-side bracket is firmly secured to the wall.

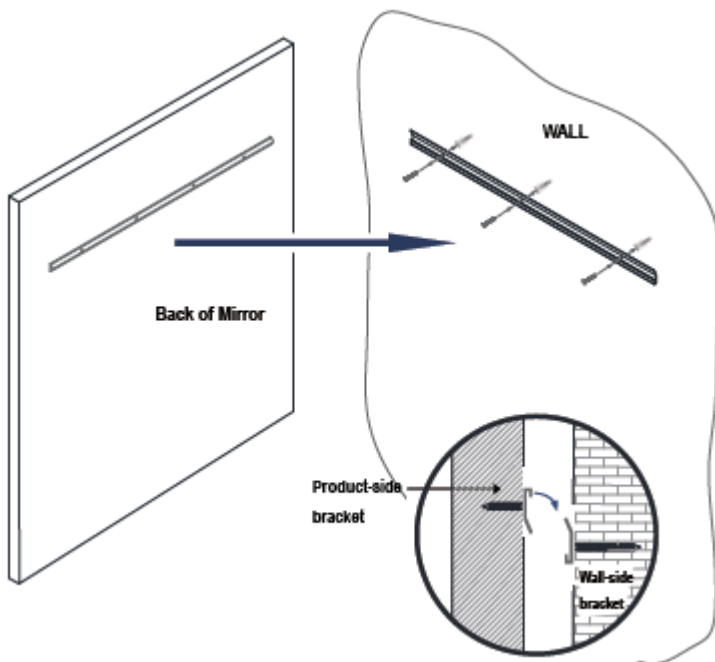

- 7) Mount the item to the wall by engaging either of the product-side brackets (according to the orientation you wanted) with the wall-side bracket, and then gently lowering the item so it rests on the wall.

## Care Instructions:

- Wipe with a soft, dry cloth or slightly damp cloth.
- To protect the finish, do not use abrasive or strong chemical household cleaners.
- A household glass cleaner may be used for the mirror surface – spray the cleaner on a clean cloth first and then use the cloth to clean the glass

**Thank you for your purchase!**