
## **ASSEMBLY INSTRUCTIONS**



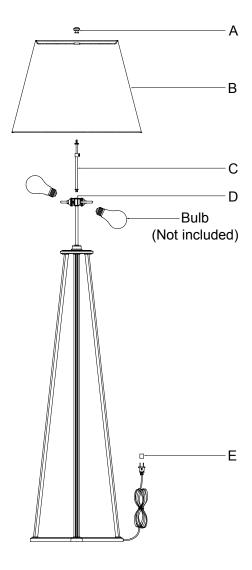

## X BASE FLOOR LAMP

Item # TOB1155

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING\*\*\*SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT. DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

NOTE: CAREFULLY UNPACK EACH PIECE IN TOP LAYER OF PACKING PRIOR TO

## REMOVING. RETAIN ALL PACKING MATERIALLY UNTIL INSPECTION AND

## INSTALLATION ARE FINAL.

- 1. Carefully remove all parts from the box.
- 2. Screw the pipe (C) to the top of wiring box (D).
- 3. Remove the finial (A) from the pipe (C).
- 4. Place lampshade (B) to the pipe (C) and secure with finial (A).
- 5. Insert bulbs (not included) into the sockets.
- 6. Remove the plug cover (E) from the plug.
- 7, Plug into a proper electrical outlet and test the fixture.
- 8. Installation is complete.

<sup>\*\*\*</sup>Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.