

WILLIAMS-SONOMA

Palomar Pendant Assembly Instructions

Important Safety Instructions

- These instructions are provided for your safety. It is important that they are read carefully and completely before assembling fixture.
- This fixture has been rated for up to (3) 40-watt maximum TYPE A standard bulb (not included) or (3) 9-watt compact fluorescent light bulb (Not included). To avoid the risk of fire, do not exceed the recommended wattage.

Warning

- To reduce the risk of fire, electrical shock, or personal injury, always turn off and unplug lamp and allow it to cool prior to replacing light bulb.
- Do not touch bulb when fixture is turned on. Do not look directly at lit bulb.
- Keep flammable materials away from lit bulb.
- All wires are connected at the factory. Please be careful when unpacking the lamp so that wires do not get damaged.
- This lighting fixture contains lead, a chemical known to the State of California to cause cancer, birth defects and other reproductive harm. Wash hands after installing, handling, cleaning or otherwise touching this light fixture.

Pre-assembly


- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.

Parts Included

1. Wire nut(A)
2. Mounting plate(B)
3. Mounting screws(C)
4. Side screws(D)
5. Canopy(E)
6. Socket cluster (F)
7. Glass shade(G)
8. Plate (H)
9. Finial (I)

To Assemble

1. Carefully remove all parts from the box.
2. Remove the mounting plate (B) from canopy (E) by loosening the side screws (D).
3. Affix mounting plate (B) onto the outlet box and secure with mounting screws (C).
4. Insert bulbs (3) 40-watt maximum TYPE A standard bulb (not included) or (3) 9-watt compact fluorescent light bulb (Not included) into the sockets.
5. Remove finial (I) from pipe.
6. Attach the glass shade (G) to the pipe and secure with plate (H) and finial (I).
7. Connect the hot wire (BLACK) from the fixture to the hot wire from the outlet box(usually BLACK). Fasten them together with a plastic wire connector provided and wrap the connection with electrical tape.
8. Repeat this procedure for the neutral wire (WHITE) from the fixture to the wire from the outlet box (usually WHITE).

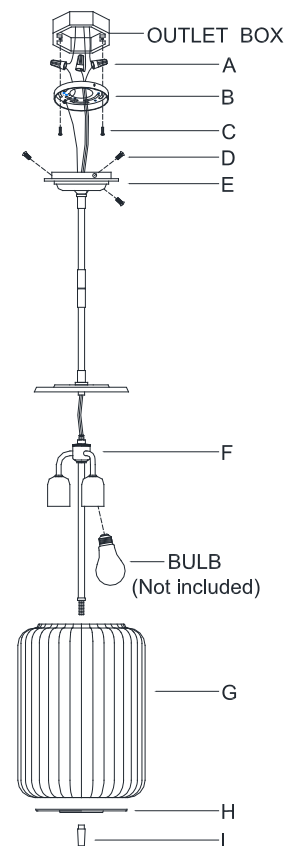

9. Connect ground wire from the fixture (bare copper) to ground wire from the outlet box (usually green or copper in color).
10. Attach canopy (E) to mounting plate (B), and secure with side screws (D).
11. Installation is complete, turn on power at fuse or circuit breaker.

Care Instructions

- Wipe with soft dry cloth only
- Always avoid the use of harsh chemicals or abrasives as they may damage the finish

Thank you for your purchase
Williams Sonoma Home | Customer Service 1.888.922-4105 | www.williams-sonoma.com