
ASSEMBLY INSTRUCTIONS

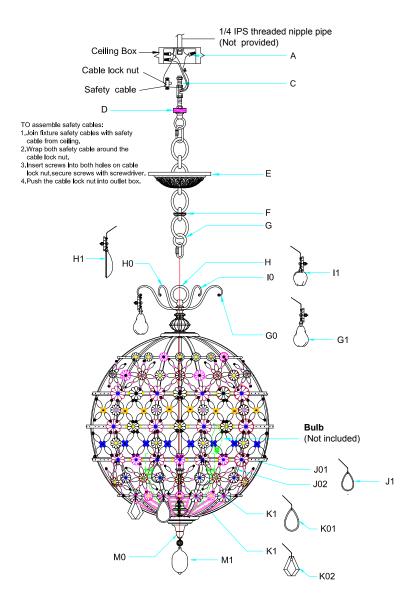







Heather Chandelier

Item # ARN5106

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.


INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

- Install the threaded nipple (C) with hickey and nut into the ceiling box. You
 must provide a 1/4 IPS threaded nipple which will go through the top of ceiling
 box and through a structural member of building.
- 2. Put canopy (E) to ceiling loop(D), and secure with lock collar (F).
- 3. Using the dimensions of the fixture as a guide, shorten the chain (G) as needed using a pair of chain pliers.
- Take into consideration that you will use the chain end link to mount the chandelier once you have removed the excess chain.
- 5. Unscrew the threaded collar on the chain end link. Attach the chain to the ceiling loop (D). Close the threaded collar to secure the chain.
- Unscrew the threaded collar on the other chain end link. Raise the fixture and attach chain end link to the top ring (H). Close the threaded collar to secure the fixture body.
- 7. Unwrap the wiring from the top of the fixture body. Weave the power supply cord and the ground wire through the chain (G).
- When you reach the canopy and ceiling loop, measure the wires and cut. Be certain to leave enough to connect inside of the canopy.
- 9. Strip the insulation back on the two power supply wires about 5/8".
- 10. Twist the power supply and ground wires together and push through the center hole in the ceiling loop.
- 11. Loosen the lock collar (F), let the canopy (E) slip down the chain carefully.



ASSEMBLY INSTRUCTIONS

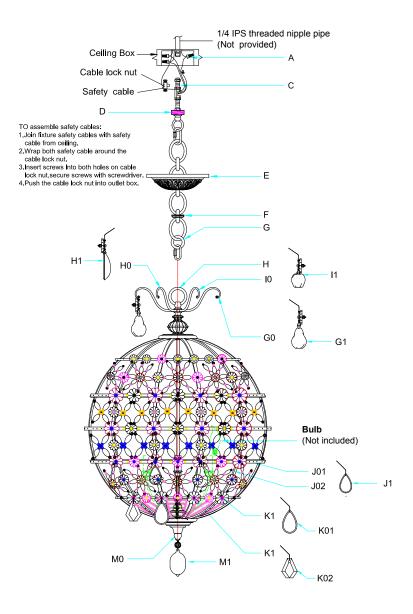



Item # ARN5106

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.


- 12. Connect the Ground (bare) wire with the ground (usually bare) wire from your ceiling box using wire nut (A). If your house does not have ground wire, then attach this wire to the green grounding screw inside of outlet box. IT IS IMPERATIVE THAT THE J-BOX IN YOUR HOME BE PROPERLY
- 13. Connect the Neutral wire with the Neutral (usually white) wire from your ceiling box using wire nut (A).
- 14. Connect the Hot (smooth edge, markings, or black) wire with the Hot (usually black) wire from your outlet box using wire nut (A). DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.
- 15. Tuck these wire connections neatly into outlet box.
- 16. Put canopy (E) to ceiling loop (D), and secure with lock collar (F).
- 17. Install the light bulbs (not included) into sockets.
- 18. Please refer crystal drops assembly sheet.







ASSEMBLY INSTRUCTIONS

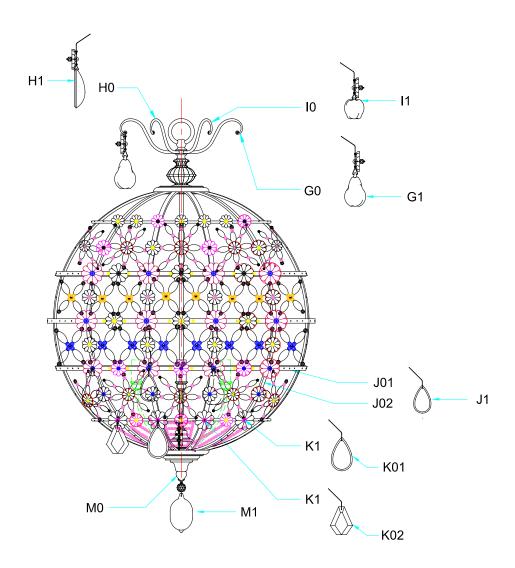

Heather Chandelier

Item # ARN5106

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING *** SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

CRYSTAL TRIM SET FOR ARN5106:

Assemble the entire fixture before you attach any of the crystals. Unpack and lay out all crystals on a clean, soft surface. Please take inventory of any missing crystals. Report any missing and/or damaged crystals to your supplier immediately. Do not install any damaged parts. No claims can be made once installed.

- 1. Attach the crystal drops(H1) on hook(H0).
- 2. Attach the crystal drops(I1) on hook(I0).
- 3. Attach the crystal drops(G1) on hook(G0).
- 4. Attach the crystal drops(J1) on hook(J01).
- 5. Attach the crystal drops(J1) on hook(J02).
- 6. Attach the crystal drops(K01) on hook(K1).
- 7. Attach the crystal drops(K02) on hook(K1).
- 8. Attach the crystal drops(M1) on hook(M0).
- 9. Assembly is complete.

Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



