


ASSEMBLY INSTRUCTIONS

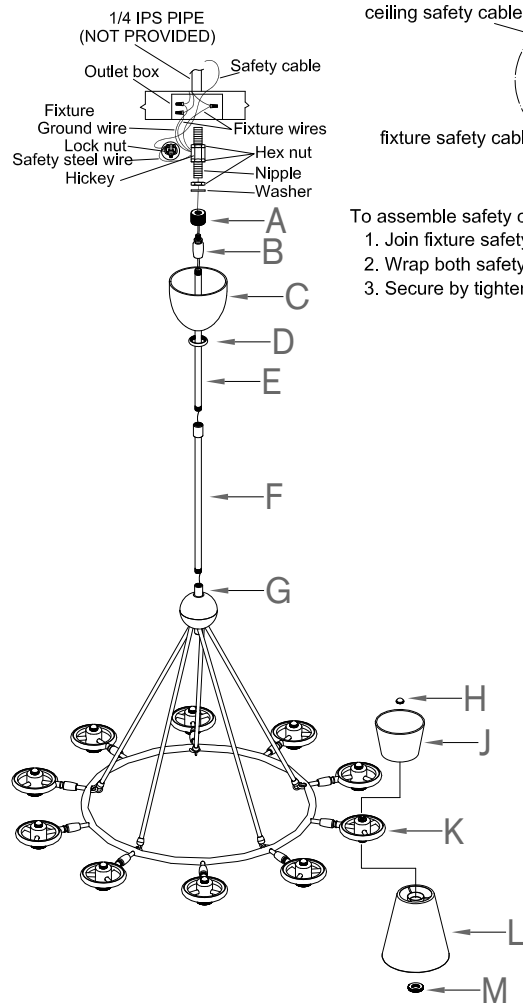

To assemble safety cables:

1. Join fixture safety cables with safety cable from ceiling.
2. Wrap both safety cable around the cable lock nut.
3. Secure by tightening both hex nuts until tight.

Clarkson Chandelier
Item # ARN 5036

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Carefully remove all parts from the carton.
2. Provide a 1/4" IPS pipe with one end securely mounted to beam or a structural. The other end should protrude through the enter of the outlet box as shown.
3. Screw lamp pole (F) onto connective tube (G) on light fixture by turning in clockwise direction.
4. Screw lamp pole (E) into top opening of lamp pole (F) by turning in clockwise direction.
5. Screw connective rod (B) onto top threaded section of pole (E) by turning in clockwise direction.
6. Screw mounting loop (A) on to top nipple of connective rod (B).
7. Unscrewing canopy ring (D) and slide canopy ring (D) and canopy (C) on lamp pole (E).
8. Insert top threaded nipple in mounting 1/4 IPS pipe.
9. Lace the fixture wires, ground wires and safety cable through lamp poles, connective rod (B) and mounting loop (A), exiting through the side of hickey. Run the safety cable through the top of the outlet box and secure to structural member.
10. Attach fixture steel safety cable to structural member in the ceiling.
11. Attach the bare copper ground from the fixture to the ground junction box wire (usually green or copper), fasten together with a plastic wire connector. Tighten the wire connector with electrical tape. Be sure no wire strands are exposed. IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.
12. Connect neutral wire from fixture (ridges molded wire) to the neutral wire from the junction box (usually white). Fasten both wires together with a plastic wire connector and tightly wrap the wire connctor with electrical tape. Be sure no wire strands are exposed.
13. Connect the hot wires from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connctor and wrap the connection with electrical tape. DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.
14. Tuck wire connections neatly into ceiling outlet box.
15. Slip canopy (C) to ceiling and secure with canopy ring (D).
16. Remove cap nuts (H) from top of shade holders (K), attach shades (J) onto top of shade holders (K) and secure by replacing cap nuts (H).
17. Remove socket rings (M) from bottom of shade holders (K), attach shades (L) onto bottom of shade holders (K) and secure by replacing socket rings (M).
18. Insert light bulbs (not included) Type C, maximum 60 watt into sockets.
19. Restore power and test fixture. Installation is complete.

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.



VISUAL COMFORT & Co. Est. 1987