

1


Parts Identification Box 1

TFPBRB 24-48

Remove contents from Box 1 of 3.
Stack matching pieces in piles. Using the parts list,
locate and count the individual pieces and verify that
you have received the correct number of pieces.

If any pieces are missing or replacement parts are
required, contact Gronomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer
between the ground and the pieces during assembly.
This will help prevent damage to the pieces.

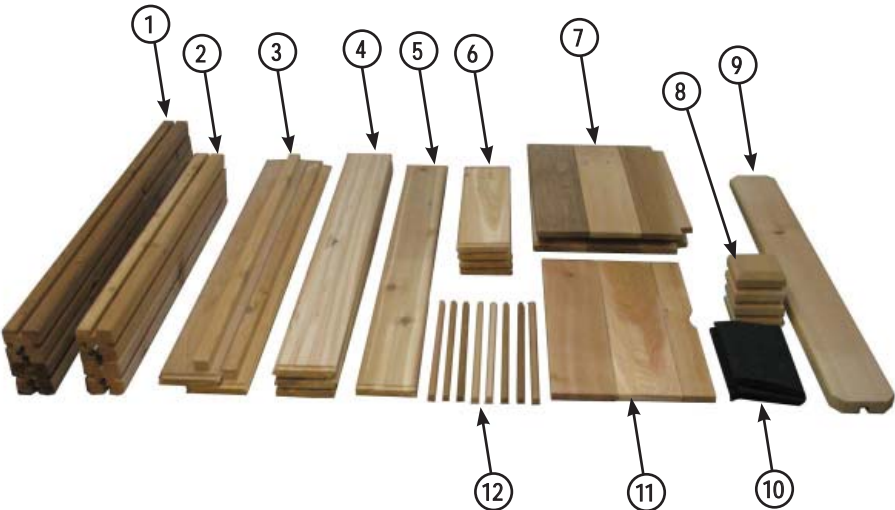

Product Care & Maintenance

Western Red Cedar will turn a weathered grey if left unfinished. Although no finish is required for cedar when used outdoors, a natural oil finish applied regularly will help maintain the beauty and minimize cracking and drying. It is recommended to use Gronomics Garden Bed Oil (Item# GBO-1Q), a non-toxic, food safe finish that is very easy to apply.

Apply oil when air and wind temperatures are between 50-90 degrees. Avoid applying in direct sunlight.

Box 1 of 3			
ITEM	QTY.	PART #	DESCRIPTION
1	2	4650TFPB	Corner Post, 4" x 4" x 46-1/2"
2	2	3600TFPB	Corner Post, 4" x 4" x 36"
3	2	4503TC	Side Rail, w/Top Cleat, Side rail, 45" x 5-1/2" x 7/8"
4	3	4500T, L4500T	Side rail, (one w/Logo), 45" x 5-1/2" x 7/8"
5	1	TR4500T	Side rail, (Top Rail for Shelf Board) 45" x 5-1/2" x 7/8"
6	1	2100T	Side rail, 21" x 5-1/2" x 7/8"
7	2	LID2216	Lid, Corner Notched Board Assembly 22" x 16"
8	4	4545	Post Cap, 4-5/8" x 4-5/8" x 1-1/2"
9	1	PBSB43	Shelf Board, 43-3/4" x 5-1/2" x 1-3/8"
10	1	FL3652	Fabric Liner, 36" x 52"
11	1	LID2213	Lid, Center Notched Board Assembly 22" x 13-1/2"
12	8	TFFS14	Filler Strips, 3/4" x 3/4" x 15"

Packaged & Inspected by:		Date:	
--------------------------	--	-------	--

Continued


2 Parts Identification Box 2

Remove contents from Box 2 of 3.

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gromomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

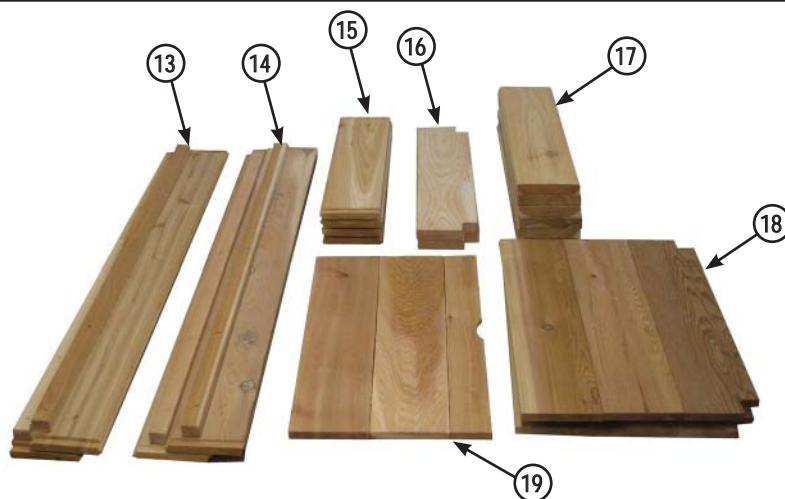

Box 2 of 3

ITEM	QTY.	PART #	DESCRIPTION
13	2	4502TC	Side Rail, w/Bottom Cleat, Side rail, 45" x 5-1/2" x 7/8"
14	2	4503TC	Side Rail, w/Top Cleat, Side rail, 45" x 5-1/2" x 7/8"
15	4	2100T	Side rail, 21" x 5-1/2" x 7/8"
16	2	2178BB	Bottom Board, 21-7/8" x 5-1/2" x 1"
17	6	2178BN	Bottom Notched Board, 21-7/8" x 5-1/2" x 1"
18	2	LID2216	Lid, Corner Notched Board Assembly 22" x 16"
19	1	LID2213	Lid, Center Notched Board Assembly 22" x 13-1/2"


3 Parts Identification Box 3

Remove contents from Box 3 of 3.

Stack matching pieces in piles. Using the parts list, locate and count the individual pieces and verify that you have received the correct number of pieces.

If any pieces are missing or replacement parts are required, contact Gromomics at 1-855-299-6727.

NOTE: It is recommended to place a protective layer between the ground and the pieces during assembly. This will help prevent damage to the pieces.

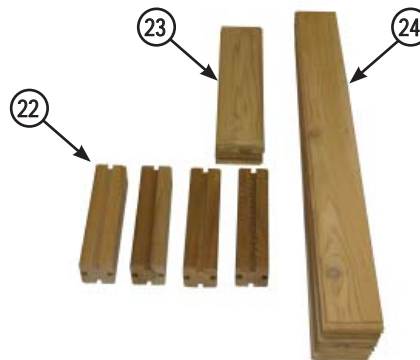

Box 3 of 3

ITEM	QTY.	PART #	DESCRIPTION
20	2	R1300	Corner Post, 4" x 4" x 13"
21	4	2100T	Side rail, 21" x 5-1/2" X 7/8"
22	8	4500T	Side rail, 45" x 5-1/2" X 7/8"

Continued


4 Corner Post / Side Rail Assembly

Stand two 4" x 4" x 46-1/2" corner posts (Item 1) upright. Install a 45" x 5-1/2" x 7/8" side rail (Item 4) between the posts and slide to the ground.

Stand two 4" x 4" x 36" corner posts (Item 2) upright. Install a 45" x 5-1/2" x 7/8" side rail (Item 4) between the posts and slide to the ground.

NOTE: Install side rail boards with groove down and tongue up.

Install one 21" x 5-1/2" x 7/8" side rail (Item 6) at each end of the potting bench and slide down.

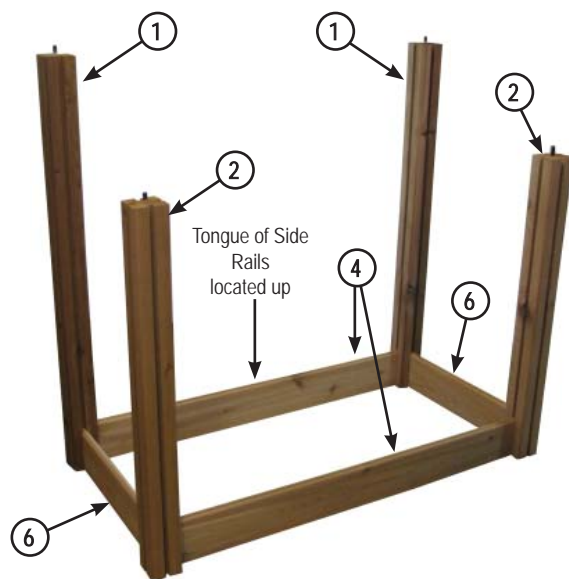


5 Side Rail w/Top Cleat Assembly

Install a 45" x 5-1/2" x 7/8" side rail w/top cleat (Item 3) on each side, with the cleat located at the top and the cleat facing inward. Slide the side rails w/top cleat between the posts and slide down.

Install one 21" x 5-1/2" x 7/8" side rail (Item 6) at each end of the potting bench and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

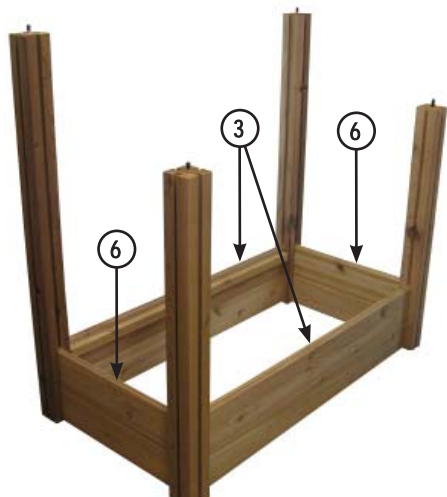


6 Bottom Storage Lid And Filler Strip Assembly

Place one 22" x 16" lid corner notched board assembly (Item 7) on each end of the potting bench.

Place the 22" x 13-1/2" lid center notched board assembly (Item 11) onto potting bench.

Install two 3/4" x 3/4" x 14" filler strips (Item 12) into the grooves on adjacent sides of each post as shown and slide the filler strip down.

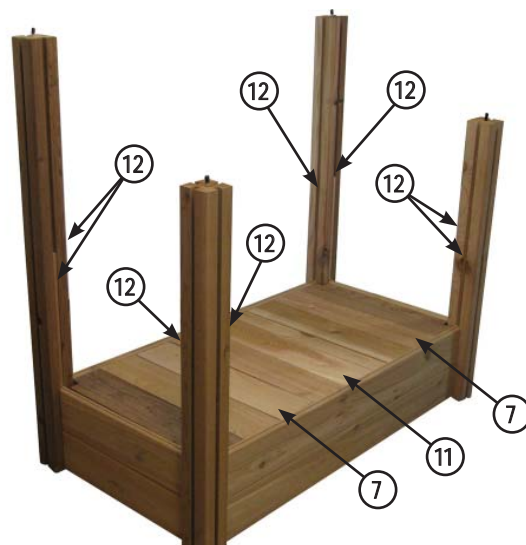


Continued

7 Side Rail w/ Bottom Cleat Assembly

Install a 45" x 5-1/2" x 7/8" side rail w/bottom cleat (Item 13) on each side, with the cleat located at the bottom and the cleat facing inward. Slide the side rails w/bottom cleat between the posts and slide down until the side rails contact the filler strip.

Install a 21" x 5-1/2" x 7/8" side rail (Item 15) between the posts at each end and slide down until the side rails contact the filler strip.

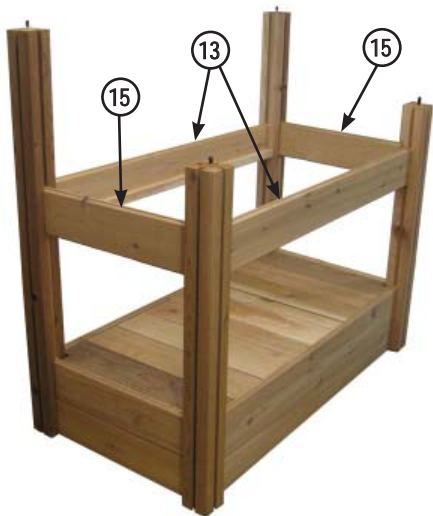


9 Bottom Board Installation

Install the one 21-7/8" x 5-1/2 x 1" bottom notched board (Item 16) at each end of the potting bench.

Place six 21-7/8" x 5-1/2 x 1" bottom boards (Item 17) onto potting bench.

Gap boards evenly to allow for water drainage.

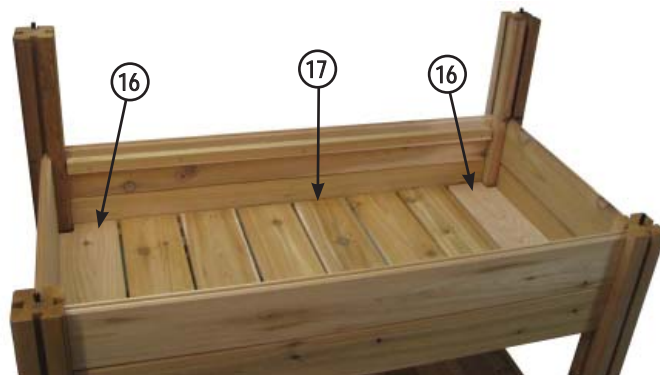


8 Side Rail w/Top Cleat Assembly

Install a 45" x 5-1/2" x 7/8" side rail w/top cleat (Item 14) on each side, with the cleat located at the top and the cleat facing inward. Slide the side rails w/cleat between the posts and slide down.


Install a 21" x 5-1/2" x 7/8" side rail (Item 15) between the posts at each end and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

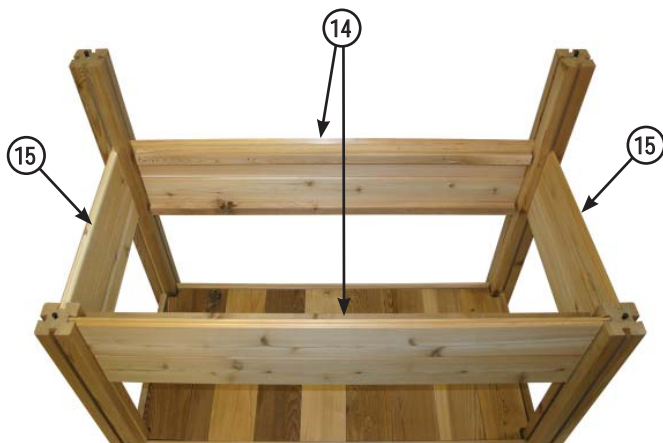

10 Fabric Liner Installation

Place the 36" x 52" fabric liner (Item 10) into the potting bed.

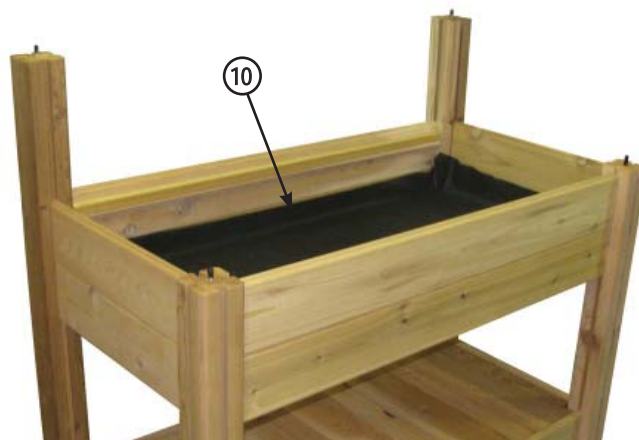

Continued

11 Side Rail Shelf And Top Bench Board Assembly


Install one 45" x 5-1/2" x 7/8" side rail (Item 4) (w/Logo) between the posts and slide down.

Install the 45" x 5-1/2" x 7/8" top rail for shelf board (Item 5) and slide down.

NOTE: Make sure the boards tongue and grooves fully seat together.

Place one 22" x 16" lid corner notched board assembly (Item 18) on each end of the potting bench.

Place the 22" x 13-1/2" lid center notched board assembly (Item 19) onto potting bench.

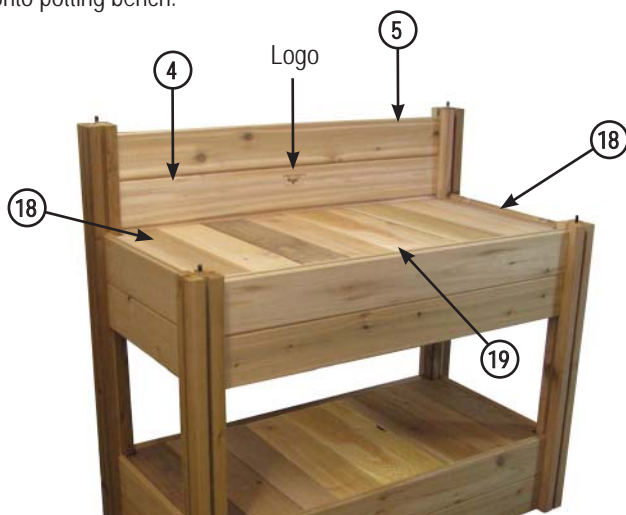


13 Raised Garden Bed Assembly

Install the 4" x 4" x 13" corner posts (Item 20) onto the 45" side rails.

Install two 21" x 5-1/2" x 7/8" side rails (Item 21) between the posts and slide down.


Repeat procedures on the opposite end of the potting bench.

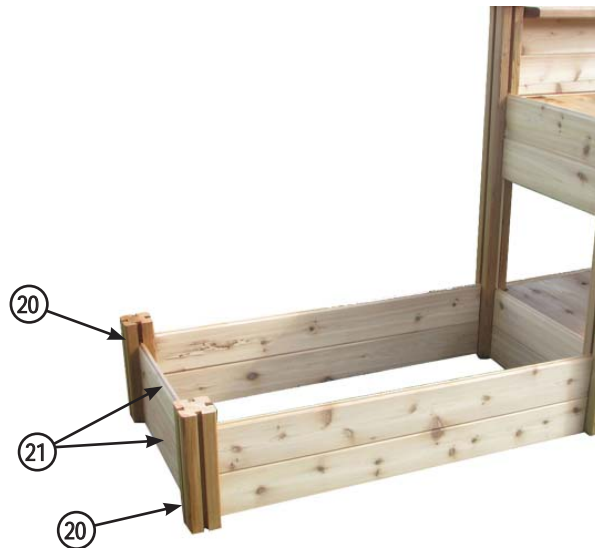

12 Raised Garden Bed Assembly

Install two 45" x 5-1/2" x 7/8" side rails (Item 22) into the corner post slots on each end of the potting bench and slide to the ground.

Repeat procedure on the opposite end of the potting bench.

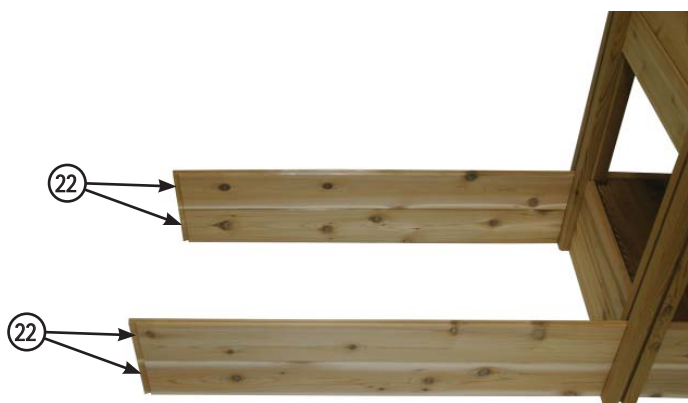

14 Shelf Board And Post Cap Assembly

Install the 43-3/4" x 5-1/2" x 1-3/8" shelf board (Item 9) onto the side rail.

Remove the rubber cap from the corner posts.

Align the hole of the 4-5/8" x 4-5/8" x 1-1/2" post cap (Item 8) with stud and tighten until the cap makes contact with the post. Do not overtighten.

Repeat procedure on all corner posts.



Continued

