


TOB3180

ASSEMBLY & INSTALLATION GUIDE

MONROE DESK LAMP

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

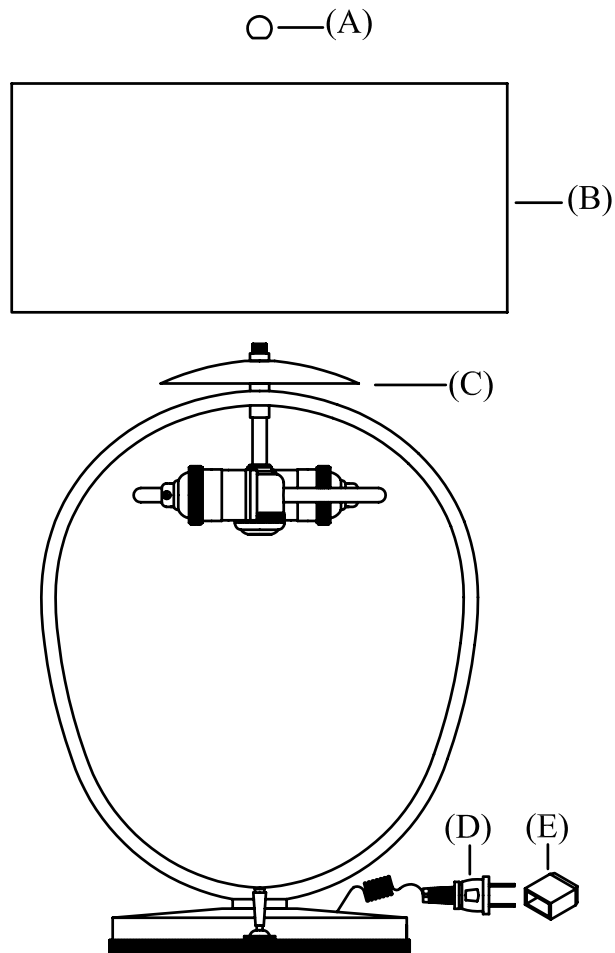

1. Remove finial (A) from light fixture (C), place lamp shade (B) over the bolt attached on top of (C). Screw finial (A) onto the bolt to secure shade (B) to (C).
2. Insert light bulb into sockets.
3. Remove plastic cover (E) from electrical plug (D).
4. Plug lamp into wall outlet.