

ETON DESK WALNUT LEATHER

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by four or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:





- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

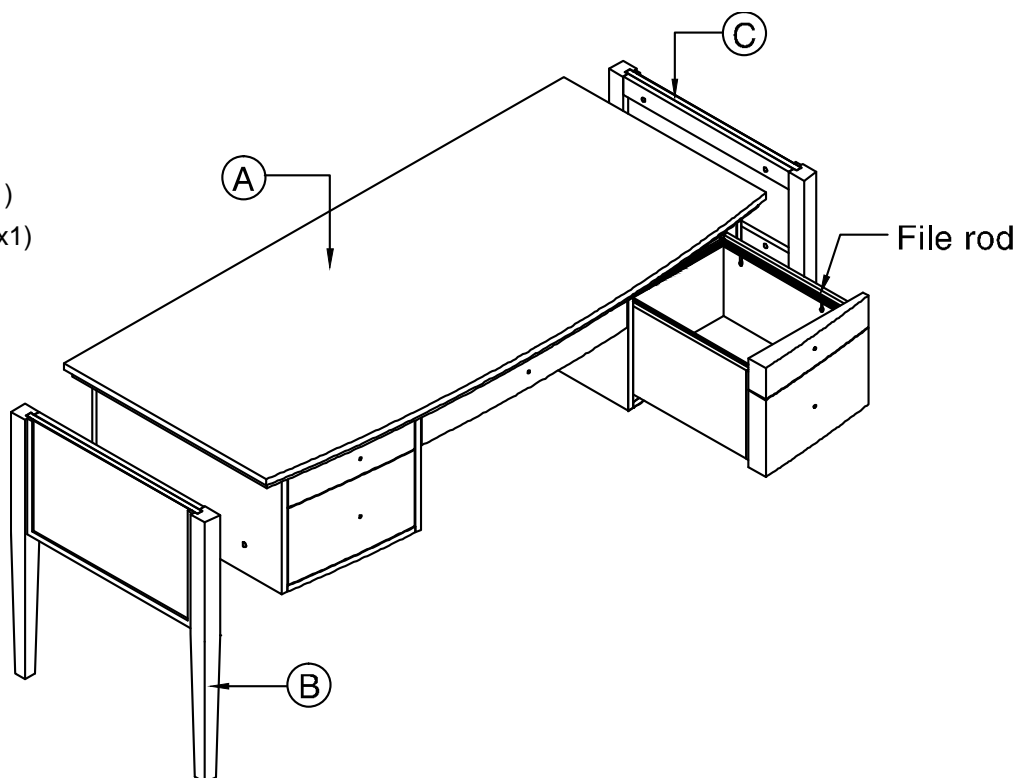Parts Included:

- (A) Desk Top (x1)
- (B) Left Leg Panel (x1)
- (C) Right Leg Panel (x1)




Hardware Included:

(1) Ball Tip Allen Key 4x110mm -1x	(2) Allen Bolt 5/16" x 1-1/2" - 8x	(3) Spring Washer 5/16"x13x2mm - 8x	(4) Flat Washer 5/16"x19x2mm - 8x
			

Assembly Instruction Steps:

1. Place the Desk Top (A) on a soft, scratch-free surface such as a rug or carpet. Then remove the Side drawers (D) 100%, and set it aside, as seen in the illustration below.

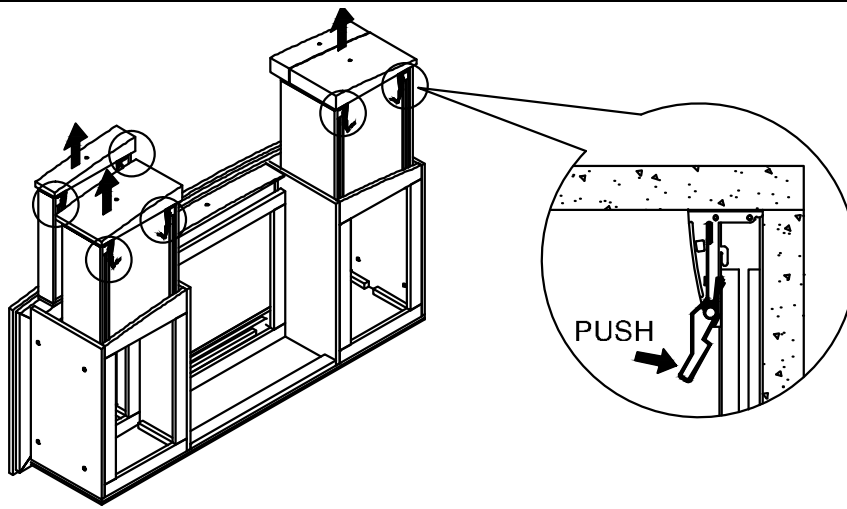

2. To assemble the Knobs to the Drawers, follow these below steps:
 - A. Remove the Knobs from the inside of the Drawer Boxes, by unscrewing the Machine Screws found on Drawer Front, "Diagram AA".
 - B. Place the Knobs over the pre-drilled holes on the Drawer Front. Insert the original Machine Screws through the holes from the inside of the Drawer Box and into the Knobs, "Diagram BB".
 - C. Tighten the Machine Screws using a Philips Head Screwdriver (not included).

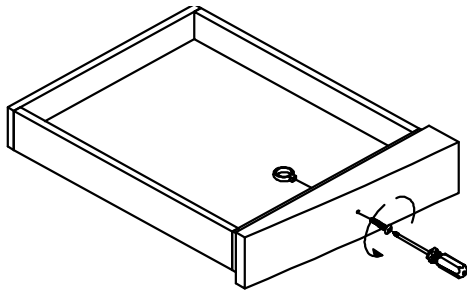


Diagram AA



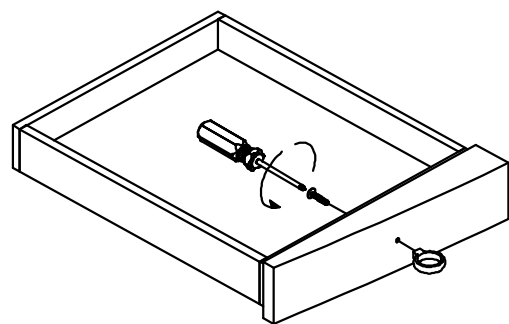


Diagram BB


3. Attach the left and right Leg Panel (B&C) to the Desk top (A).
(Note: Align leg panel holes with holes in desk top).
4. Insert 8 sets of: Allen Bolt (2), Spring Washer (3), and Flat Washer (4) from the interior of the Drawer box and into the pre-installed metal insert on the Leg Panels, as seen in the illustration below.
5. Tighten all bolts with Allen Key (1). Do not over tighten.

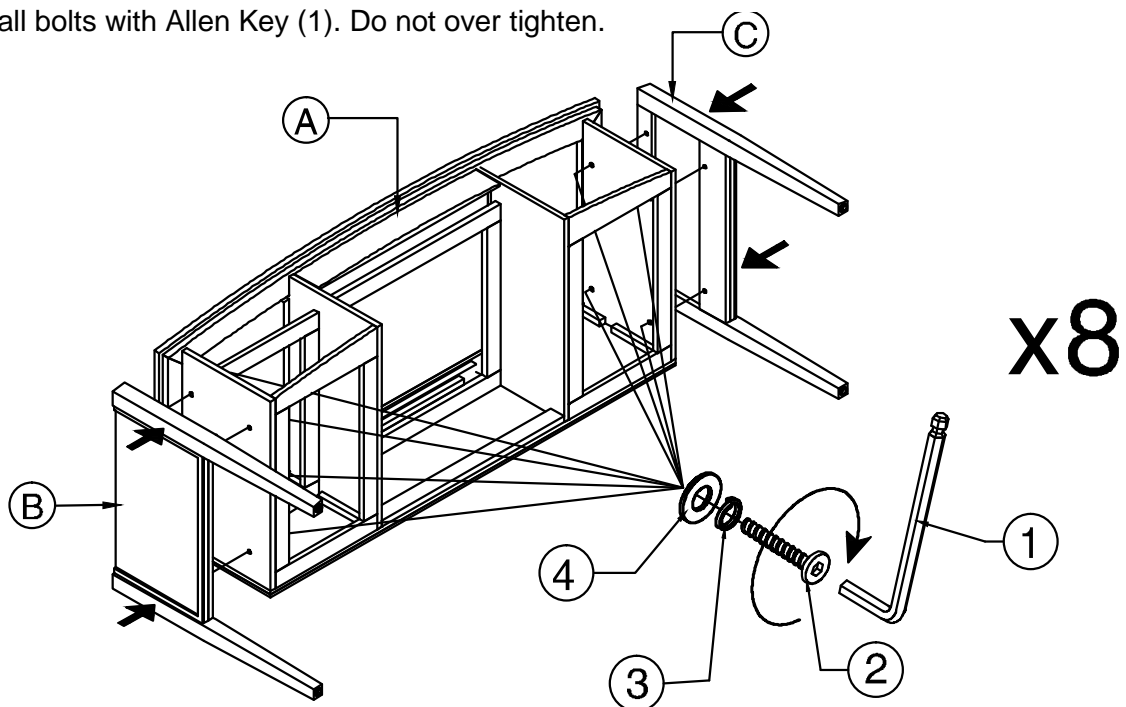

6. Carefully turn the assembled desk upright.
7. Place all drawers into the side Drawers of the Desk, as seen in the illustration below.

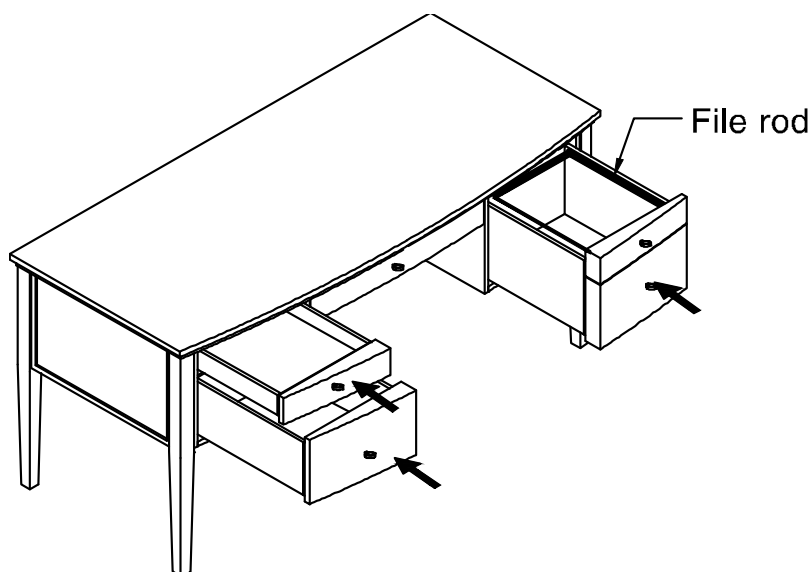

8. Adjust the levelers on the bottom of the unit (up or down) to level the desk, as seen below.
9. Assembly is complete.

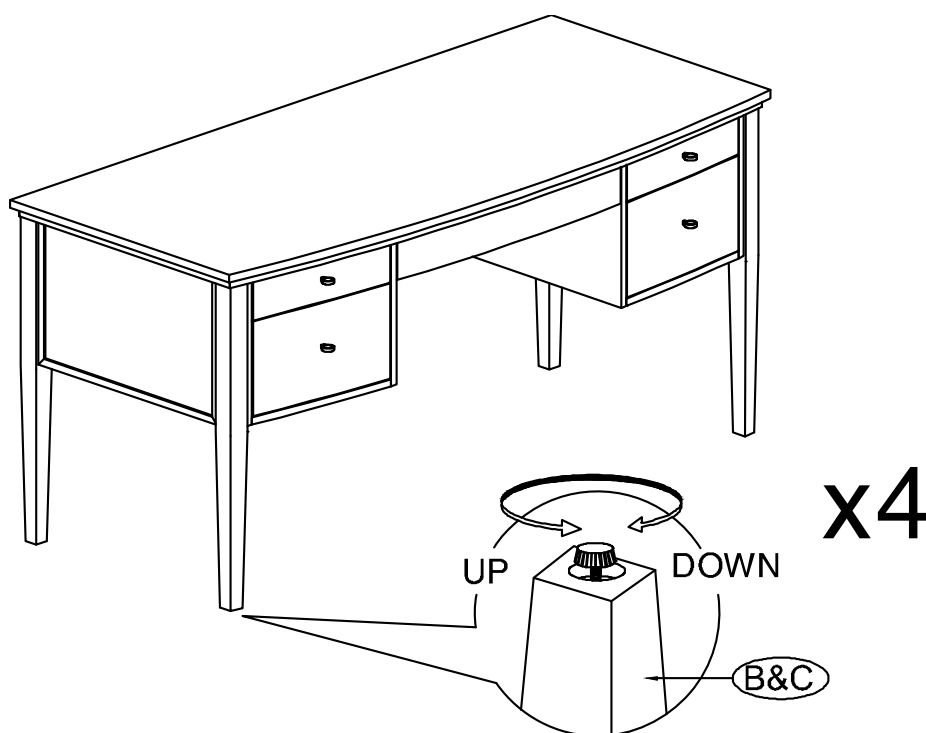

Care Instructions:

- Dust often using a clean, soft, dry, and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- For glass tops and shelves, glass cleaner may be used, but avoid spraying it onto the metal or ceramic frame.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

Thank you for your purchase
Stores | catalog