

ASSEMBLY INSTRUCTIONS FOR KITCHEN END GRAIN WORK BENCH

PARTS:


1EA - TOP WITH DRAWERS
1EA - SLATTED WOOD SHELF
2EA - TOWEL BARS
4EA - S.S. LEGS

HARDWARE:

4EA - 1/4-20 X 1 3/4 HEX HEAD BOLT
4EA - 1/4 FLAT WASHER
8EA 3/8 FLAT WASHER
4EA - 3/8 NUT
4EA - LARGE FLOOR GLIDE

TOOLS REQUIRED:

7/16 & 9/16 WRENCH OR SOCKET WRENCH

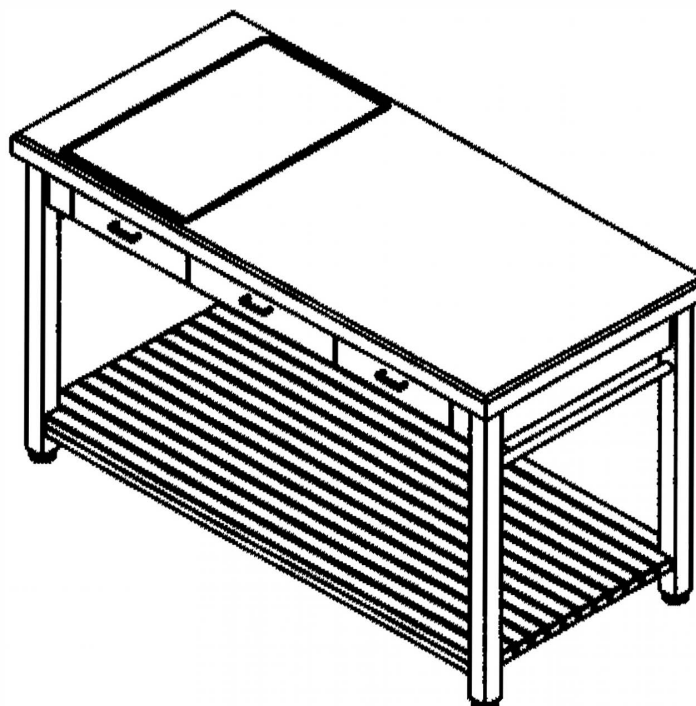

Note: Assistance will be required in assembly of product.

INSTRUCTIONS:

1. Remove all contents of box, making sure assembly area is flat and clean.
2. Place top face down on a rug, carton, or other protected surface.
3. Attach each of **s.s. legs** to the metal brackets at each corner. Start one **3/8 nut** with two **3/8 washer** on each **3/8 stud**. Position tube in upper portion of **s.s. leg** where hole provided and then slide into **s.s. leg** opposite. Do not completely tighten **s.s. legs** at this time. (note: Position **s.s. legs** so shelf mounting holes in lower portion of the **s.s. leg** is facing in along the table's length. See illustration on back.)
4. Position **slatted shelf** upside down between **s.s. legs** and attach with one **1/4-20 x 1 3/4 hex head bolt** with **1/4 washer** at each shelf hole. Do not tighten completely at this time.
5. Tighten **s.s. leg** hardware then **slatted shelf** hardware.
6. Screw **floor glides** into the inserts in the bottom of each leg.
7. With assistance turn table right side up. Your new John Boos & Co. product is now ready for use.

Be sure to follow the maintenance and care guidelines on the enclosed sheet for your new John Boos & Co. product.