



John Boos & Co.  
315 S. First Street  
Effingham Il 62401  
(217) 347-7701  
Fax (217) 347-7705

## ASSEMBLY INSTRUCTIONS FOR ROSATO

### PARTS:


- 1- CART TOP
- 2- STAINLESS SHELVES
- 4- LEGS
- 1- TOWEL BAR

### HARDWARE:

- 26- 1/4 WASHERS
- 24- 1/4 NUTS
- 8- 1/4X1-1/4 CARRIAGE HEAD BOLT
- 16- 1/4X1/2 PHILLIPS HEAD BOLT
- 2- 1/4x1-1/2 MACHINE BOLT
- 4- CASTERS

### TOOLS REQUIRED:

- 1- 7/16 WRENCH OR SOCKET/RATCHET
- 1- PHILLIPS SCREW DRIVER

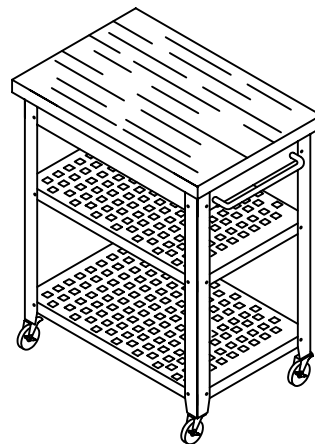

CAUTION: MAKE CERTAIN ASSISTANCE IS AVAILABLE WHEN SETTING BLOCK UPRIGHT TO AVOID INJURY TO YOURSELF OR THE BLOCK.

### INSTRUCTIONS:

- 1) REMOVE ALL CONTENTS OF BOX, MAKING SURE ASSEMBLY AREA IS FLAT AND CLEAN.
- 2) SEPARATE ALL HARDWARE BY SIZE.
- 3) PLACE CART TOP FACE DOWN ON A RUG, CARTON, OR OTHER PROTECTIVE SURFACE.
- 4) ATTACH EACH OF THE 4 LEGS TO THE OUTSIDE OF THE APRON CORNERS USING TWO - 1/4X1-1/4 HEAD BOLTS W/ NUTS & WASHERS. DO NOT FULLY TIGHTEN AT THIS TIME.
- 5) ATTACH THE SHELVES TO THE LEGS USING TWO - 1/4X1/2 PHILIPS HEAD BOLTS W/ NUTS & WASHERS PER LEG. DO NOT FULLY TIGHTEN AT THIS TIME.
- 6) GO BACK AND FULLY TIGHTEN BOLTS IN STEP 4 AND 5.
- 7) SECURE CASTERS INTO BOTTOM OF LEGS BY PUSHING IN UNTIL THE SNAP INTO PLACE.
- 8) ATTACH TOWEL BAR ONTO APRON BY ALIGNING WITH PRE-DRILLED HOLES AND ATTACH WITH 1/4 X 1-1/2 MACHINE BOLTS.

BE SURE TO FOLLOW MAINTENANCE AND CARE GUIDELINES.

## ROSATO

