

WILLIAMS-SONOMA

HOME



Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.
- You will need a wrench for proper assembly. (not provided)

EXCLUSIVE AND CONFIDENTIAL PROPERTY OF WILLIAMS SONOMA, INC.
© 2017 Williams-Sonoma, Inc. All rights reserved, including all applicable copyright,
design and patent rights. Any unauthorized reproduction, adaptation, distribution or other
infringement will be prosecuted.

Platform Bed



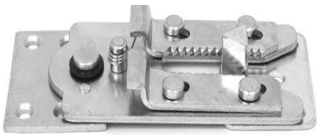
For all size beds

The hardware is attached to the frame parts. Use parts to assemble frame then attach headboard.

For King / Cal King sizes only

Make sure the alligator clip between the two individual platforms is in the center. Insert bolt with the large washer through the slots into the bolt-holes in the head of the platform. Slide the foot end of the two platforms together so that the alligator clip locks securely. (Alligator clips already attached to bed)

All Hardware Is Attached To Platform

<p>(G) SS-2191</p>  <p>1.5" Flat Washer Queen 6x King & Cal King 8x</p>	<p>(L) SS-2561</p>  <p>3" Bolt Queen 6x King & Cal King 8x</p>	<p>(J) SS-0741 (female) SS-0742 (male)</p>  <p>Attached prior to delivery</p>
--	---	--



Tools Supplied



1. Open up the velcro patches on the bottom back of the headboard to expose the slots. Stand the headboard upright. (fig.1)
2. Align the bolt-holes in the platform portion of the bed assembly with the slots in the headboard. (fig.2)
3. Finally, tighten the bolts securely, attaching the headboard to the platform.

