


WILLIAMS-SONOMA

HOME

Headboard Only Assembly Instructions (If Using A Universal Metal Bed Frame)

Required Tools: provided with hardware

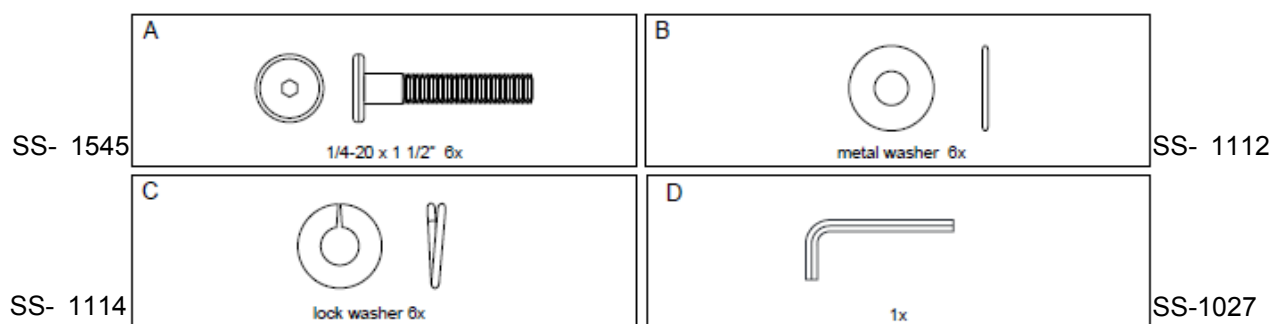

Important Safety Instructions:

- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.
- You will need a wrench for proper assembly. (not provided)
- Box spring only when using a metal bed frame.



Align metal frame. Insert bolt (A), lock washer (C), and metal washer (B). Tighten with supplied hex key (D).

