

STEVENSON SIDE TABLE

Important Safety Instructions:


- Please read all instructions carefully before assembling.
- For your safety, assembly by two or more adults is strongly recommended.
- Keep instructions for future use.
- Use only vendor supplied hardware to assemble. Using unauthorized hardware could jeopardize the structural integrity of the item.

Pre-assembly:

- Remove all parts and hardware from the box and lay out on a clear carpeted or scratch-free work surface, as this will avoid damaging parts during assembly. The shipping box provides an ideal work surface.
- Do not dispose of any packaging or contents of the shipping carton until assembly is completed to avoid accidentally discarding small parts or hardware.
- Use the parts and hardware lists below to identify and separate each of the pieces included.
- The illustrations provided allow for easier assembly when used in conjunction with the assembly instructions.
- The use of power tools to aid in assembly is not recommended. Power tools can damage hardware and split wood.

Parts Included:

- (A) Finial 4x
- (B) Washer 4x
- (C) Metal Frame 1x
- (D) Pole 4x
- (E) Base/w Caster 1x
- (F) Glass Shelf 2x

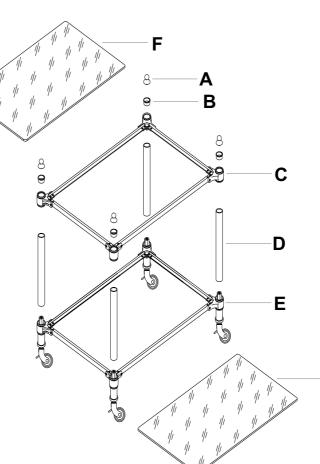


Hardware Included:

| (G) | (H) | (J) | (K) | (L) |
|--------------|-----|--------------|--------|----------|
| Glass Bumper | Nut | Threaded Rod | Wrench | T Wrench |
| | | | | |
| 8x | 4x | 4x | 1x | 1x |


F

Assembly Instruction Steps:


1. Insert four Threaded rods (J) into the threaded holes on hex connector top of base (E) as shown, and tighten with Wrench (K).

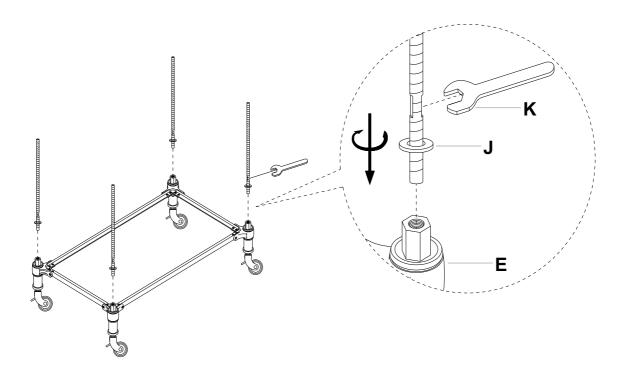


2. Slide four Poles (D) over the Threaded rods (J) as shown.

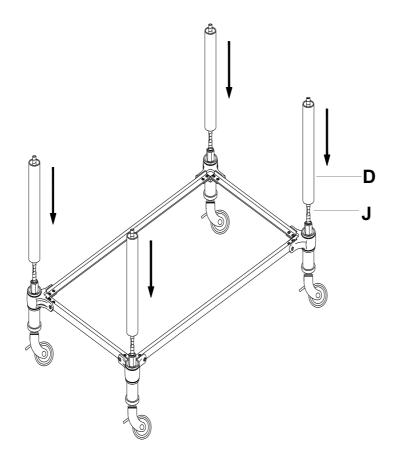


3. Slide Metal Frame (C) over the Threaded Rods (J) as shown.

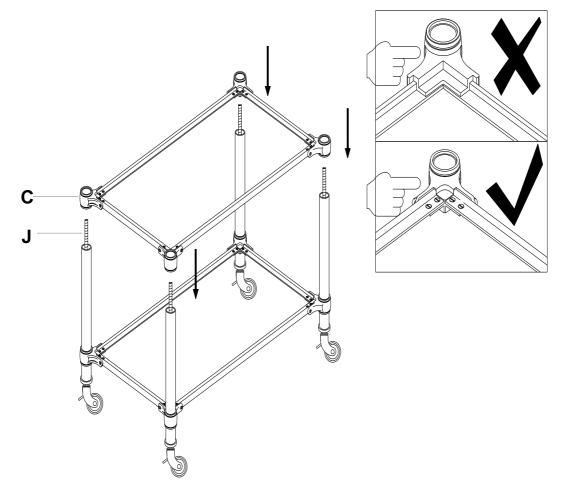


4. Slide Washer (B) over the Threaded Rods (J) as shown.

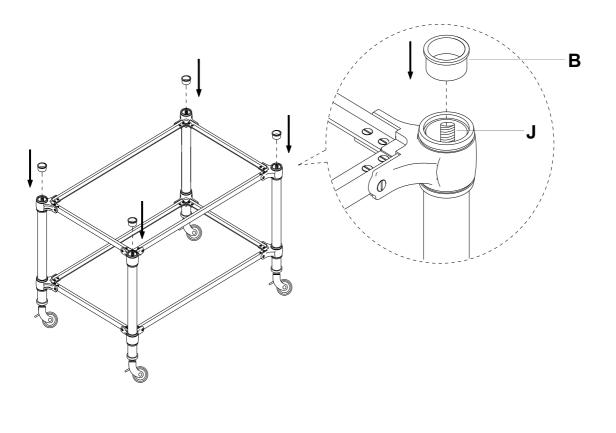


5. Screw Nuts (H) onto the Threaded Rods (J) on four corners of the Metal Frame (C), and tighten with T Wrench (L).

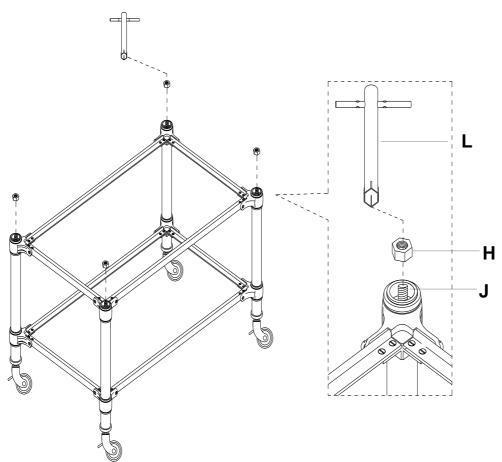


6. Hand screw Finials (A) onto top of the Threaded Rods (J) as shown.

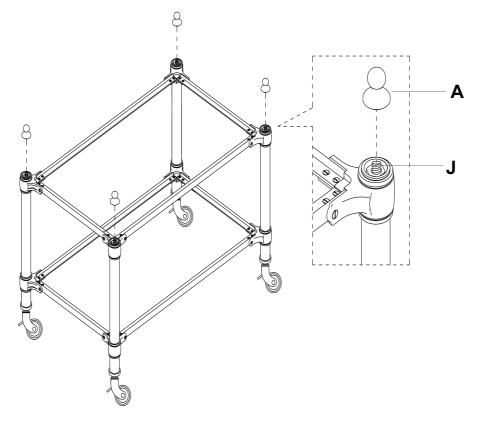

7. Place the Glass Bumper (G) onto the Metal Frames (C) in position as shown.

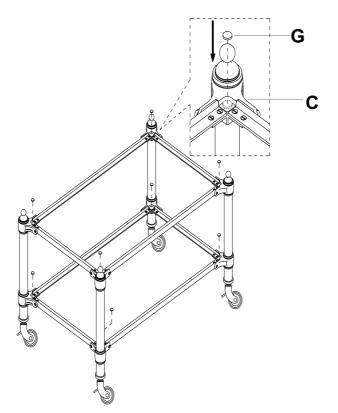

8. Carefully place the Glass Shelf (F) onto the position as shown. Assembly is complete!

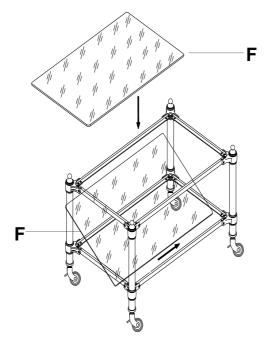

Care Instructions:

- Dust often using a clean, soft, dry and lint-free cloth.
- Blot spills immediately and wipe with a clean, damp, cloth.
- We do not recommend the use of chemical cleansers, abrasives or furniture polish on our lacquered finish.
- For glass tops and shelves, glass cleaner may be used, but avoid spraying it onto the metal or ceramic frame.
- Hardware may loosen over time. Periodically check to make sure all connections are tight. Re-tighten if necessary.

Thank you for your purchase Stores | catalog www.williams-sonoma.com