

Wall Fastener Kit

Packaged in Fasteners

- 2 screws
- 2 washers
- 2 plastic plugs



Uprights

1 Box

H23T1100

Brass

Begin with the Uprights

Tender a Brass Fastener on ONE END ONLY of each of the 12 Steel Rods.

CAUTION: Turn Brass Fasteners ONE turn only.


Place two uprights together, smooth sides facing outward.

Through the LEFT row of holes, insert one steel rod beginning with (top hole) #1 ... then down to holes 3, 5, 8, 11, and 14.


Or place rods to fit YOUR design.

Add a Brass Fastener to other end of Steel Rods (one turn only).

Repeat above procedure for next set of uprights.

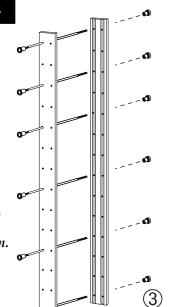


Complete the Frame

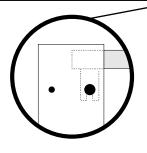


Spread the Uprights apart so that the shelves can be dropped onto the Steel Support Rods.

Starting at the bottom, tap a Shelf into place. Next, add a Shelf on top to complete the frame.

WAIT ... Do Not Tighten Fasteners yet ... Unit should be loose and wobbly until finished.

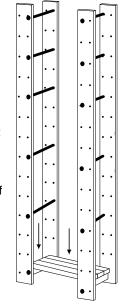


Add Shelves

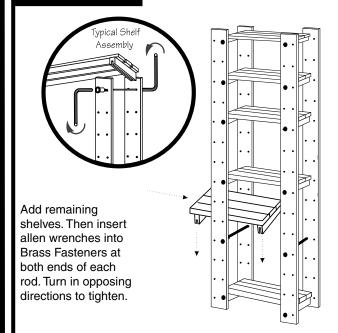

Re-tighten hardware periodically.

Secure to Wall

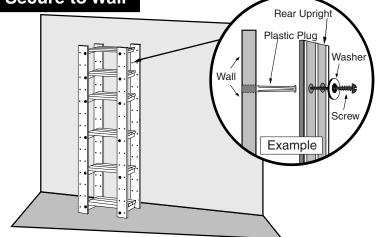

- 1. Tap screw through holes in both rear uprights to \emph{mark} the wall.
- 2. Move unit to make 3/16" holes at *marks*. Tap *plugs* into holes.
- 3. Put screws through washers ... uprights ... and into wall $\emph{\textbf{plugs}}.$

IMPORTANT ... **Secure** Shelf Unit to wall with proper hardware for *your wall type*. When in doubt, consult your local hardware store.