



ASSEMBLY INSTRUCTIONS

Williams Sonoma
umbrella base

- ① Unscrew 3 screws (3/8"-16) from center of ACF BASE.
- ② Align 3 holes in DECK MOUNT to the ACF BASE. Then tighten securely all 3 screws (3/8"-16) with flat head screwdriver. Retighten periodically.

DECK MOUNT OPTIONS

DECK MOUNT

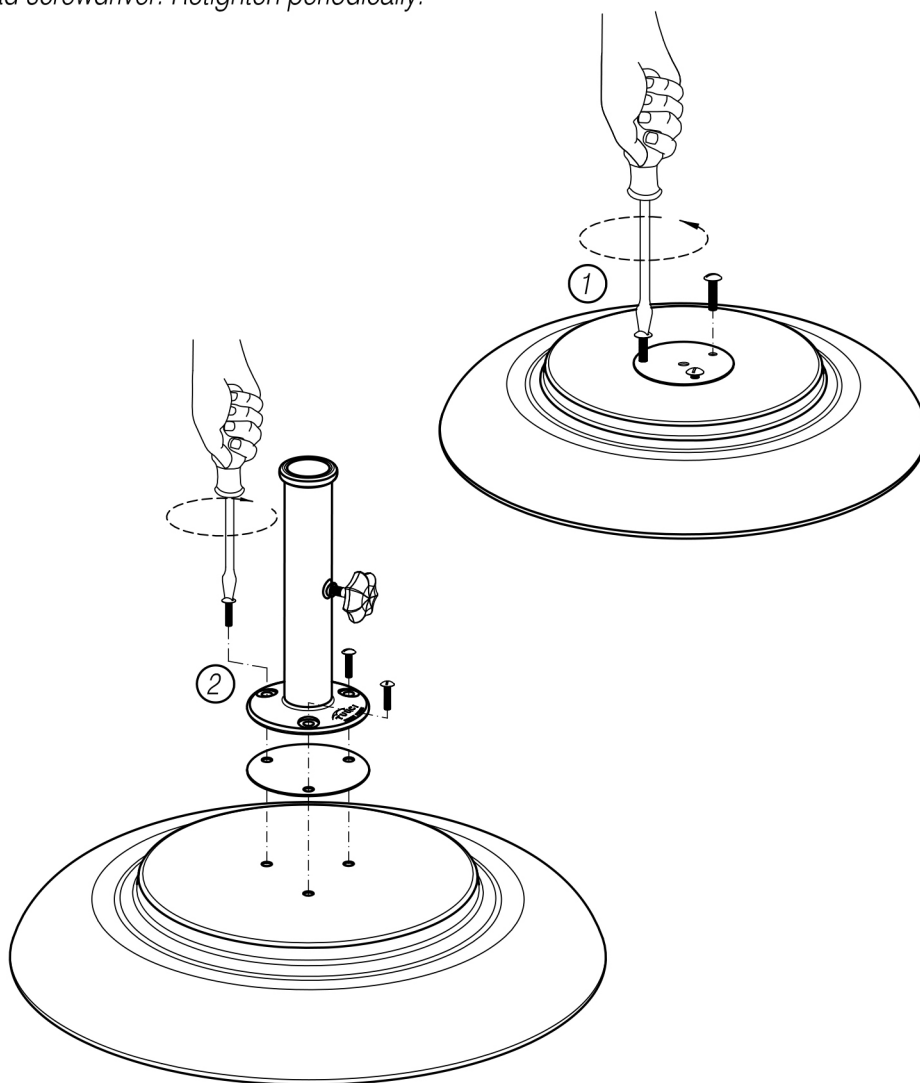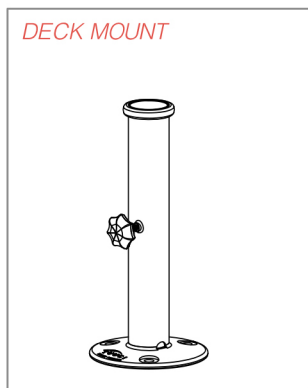

ALUMA-CRETE ROUND ANCHOR

ALUMA-CRETE WITH TUFF-WHEELS

